

S/3 HOLIDAY WAX TREE LUMINARIES

REQUIRES 2C BATTERIES PER LUMINARY (NOT INCLUDED)

TO INSTALL OR REPLACE BATTERIES

- ❖ LIFT TAB ON BATTERY COMPARTMENT AND REMOVE COVER
- ❖ INSERT BATTERIES IN PROPER DIRECTION AS INDICATED INSIDE THE COMPARTMENT
- ❖ REPLACE BATTERY COMPARTMENT COVER TO SECURE

ON/OFF MODE

- ❖ SLIDE THE SWITCH TO THE “ON” POSITION TO TURN ON. SLIDE THE SWITCH TO THE “OFF” POSITION TO TURN OFF.

TIMER MODE

- ❖ THIS ITEM INCLUDES A 5 HOUR TIMER FUNCTION. ONCE THE SWITCH IS PLACED IN THE “TIMER” POSITION, THE LIGHT WILL REMAIN ON FOR 5 HOURS BEFORE SHUTTING OFF AUTOMATICALLY. THE LIGHT WILL THEN AUTOMATICALLY COME ON AGAIN THE NEXT DAY AT THE SAME TIME OF DAY THE TIMER WAS PREVIOUSLY SET, STAY ON FOR 5 HOURS, AND REPEAT THIS PROCESS UNTIL THE SWITCH IS TURNED OFF.

CAUTION

- ❖ ITEM INTENDED FOR INDOOR USE ONLY.
- ❖ CLEAN WITH SOFT DRY CLOTH.
- ❖ IT IS RECOMMENDED REMOVING BATTERIES BEFORE STORING THIS ITEM FOR AN EXTENDED PERIOD OF TIME.
- ❖ FAILURE TO INSERT BATTERIES IN THE CORRECT POLARITY AS INDICATED IN THE BATTERY COMPARTMENT MAY SHORTEN THE LIFE OF THE BATTERIES OR CAUSE BATTERIES TO LEAK, WHICH MAY DAMAGE LUMINARY.
- ❖ DO NOT MIX OLD AND NEW BATTERIES, DO NOT MIX ALKALINE, CARBON ZINC, RECHARGEABLE NICKEL CADMIUM OR RECHARGE HYDRIDE BATTERIES.
- ❖ DO NOT DISPOSE OF BATTERIES IN FIRE. RECYCLE OR DISPOSE OF BATTERIES PER BATTERY MANUFACTURER RECOMMENDATIONS.