

User Guide

Flameless Candle with Timer



Operation Manual

Battery Replacement


Your product already comes with a battery installed so to replace your battery open the battery door by turning counter clockwise as shown in the illustration below.

Remove the old battery and replace with a CR2450 Lithium Metal Battery. Make sure the + sign of the battery is facing up. Replace the battery door and turn clockwise to lock into place.

Please note that your product comes with two replacement batteries for your convenience.

Lighting Control

To turn your Ornament to "On" push the rubber button on the bottom once. Your Ornament comes with a built in five hour timer. The ornament will turn on for five hours, then turn off, and then come on again 24 hours after you initially turned it on. To permanently turn your Ornament to "Off", press the rubber button once again.

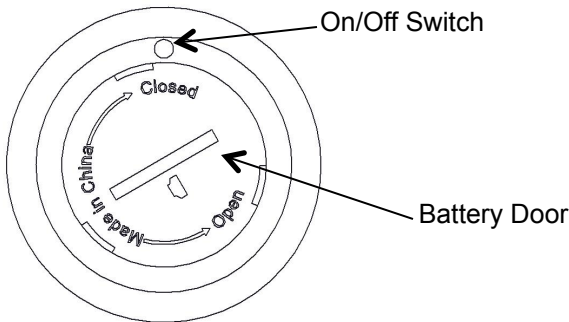

Use & Care

- Keep away from any heat sources
- This Flameless candle ornament is intended for indoor use only
- Battery Type: CR2450 Lithium Metal (Batteries included)
 - Danger of explosion if battery is incorrectly replaced.
 - Replace only with the same of equivalent type recommended by the manufacturer.
 - Do not use or mix alkaline, standard (Carbon-Zinc), or rechargeable (Nickel-Cadmium) batteries.
 - Do not mix old and new batteries
 - Discard used batteries according to the battery manufacturers instructions.
- Wipe clean with a damp soft cleaning cloth

Product Specifications

- For Indoor Use Only
- Five Hour Timer Function