

Timer Operation:

- 1) To access the candle, you must open the lantern door and remove the votive candle.
- 2) On the bottom of the candle you will find the Operation Switch.
- 3) Move the Operation switch from the "Off" position to the "Timer" position.
- 4) Candle will remain Lit for 5 Hours once it is placed in the "Timer" position, and then remain off for 19 hours. This 24 Hour cycle will repeat daily.

* Candle must be in the "On" position to work with the Remote Control. The Remote Control will not function with Candle in the "Timer" position. *

Cleaning and Care Instructions:

- 1) Clean Votive Candles as needed with soft, dry cloth. If needed, use a damp cloth with a mild household soap.
- 2) Lantern Metal and Glass can be cleaned with household soap and household glass cleaner as needed.