

# VIRTUAL HOLIDAY PROJECTOR

THIS PRODUCT IS NOT A TOY! Please read this entire instruction booklet before using.

## INSTRUCTION MANUAL

The primary use of this unit is to project from indoors through the included sheet and onto a window so that the image is visible from outside. The projector can also be used against any flat surface indoors if you wish.

### 1. Parts Included

User Manual	1pc	3 in 1 AV Cable	1pc
Power Adaptor	1pc	Remote Control	1pc
USB	1pc	Hooks	4pcs
Screen	1pc	Stickers	4pcs
Tripod	1pc		

### 2. Multi-media Support Files

File	Format	Sub-fix	Decoding
Audio Files	WMA	. wma	
	MP3	. mp3	
	M4A	. m4a	
Image Files	JPEG	. jpg	
	BMP	. bmp	
	PNG	. png	
Video Files	MPEG1	. dat\ . mpg\ . mpcg	
	MPEG2	. mpg	
	MPEG4	. avi\ . mp4	DIVX, XVID
	RM, RMVB	. rm\ . rmvb	RV8\9\10
	H264	. mkv\ . mov	MPEG1, 2, 4
	MOV	. avi. mp4	
	MJPEG	. avi	
	FLV	. flv	H264
	VC1	. wmv\ . asf	VC1
	DIVX	. divx\ . avi	MPEG, DIVX

### 3. Screen Hanging Instructions

- Start by peeling one side of the adhesive strip (one side only) and apply the strip to the hook.
- At the top of the screen, insert the two hooks into the eyelets on screen.
- Hold the top of the screen against the window frame top, pulling the screen stretched side-to-side. Be certain that the "open" side of the hook is pointing UP.
- Peel the other side of the adhesive strip and mount the hooks and screen to the top of the window frame.
- Once the top of your screen is mounted, simply repeat the directions above for the bottom of the screen, pulling the screen stretched top to bottom and then side-to-side while mounting the hooks with the "open" side of the hook pointing DOWN through the eyelets on the screen.

### 4. ATTENTION

- Please read this manual carefully before use.
- To ensure stable power supply, please use an outlet with grounding.
- Please use the power supply provided with the projector. Please see qualified service personnel for repairs.
- Please do not dismantle the projector.
- Looking directly in to the lens may cause eye irritation.
- Do not place the projector anywhere that obstructs ventilation to the projector.
- This projector is for indoor use only. Keep away from all areas where it may get wet. Keep away from all damp areas.
- Keep the projector away from all wet and damp areas to avoid electric shock.
- Please shut off the projector and unplug the power supply when not in use.
- Use the packaging provided with the projector when transporting it from place to place.
- This is not a toy.

- The USB provided is not to be used with computers. For this projector use only. Other USBs may be used with this projector, please see the types of files and formats supported in 2 above.


### 5. Specifications

Model	VPH
Native Resolution	640*480
Lamp	LED
Language	English
Image Size	50.8-254cm/20-100 inches
Color	1677K
Power Waste	24W
Contrast	400:1
Weight	0.4kg/0.9lbs
Operation Mode	Manual Remote Control
Output	Head Phone
Image System	LCD
Supported Resolution	1920*1080
Input Voltage	12V
Brightness	100 lumen
Projection Distance	1.10-4.0 m/3.6-13.1 ft
Projection Mode	Front Projection
Speaker	1.0W*2
Lens	F=90
Size	137*126*56.6mm/5.4*5*2.3 inches
Working Temp	-10 to 36°C/-14 to 96.8 °F
Input terminal	AV / VGA / SD / USB / TV


### 6. Projector Placement and Focus

To achieve the most realistic effect, place the projector on the floor or a low table facing directly onto the screen. You should attempt to fill the screen as much as possible. Move the projector backwards or forwards as needed. Once in the proper place, turn the lens to focus.

### 7. Product Details

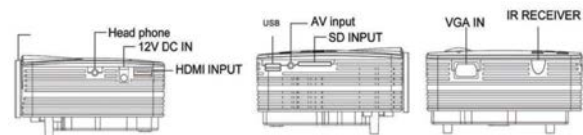

### 8. Button Function

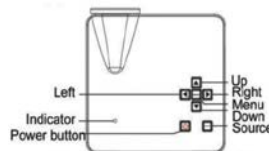

Up: Move up  
Left: Move left and volume down  
Right: Move right and volume up  
Down: Move down and select video functions such as stop, fast forward, play, etc.  
Menu: Menu options - picture, sound, and language  
Source: Choose the signal input source  
Power: Power on and off

### 9. Remote Button Function



# VIRTUAL HOLIDAY PROJECTOR

THIS PRODUCT IS NOT A TOY! Please read this entire instruction booklet before using.

## INSTRUCTION MANUAL

### 10. Main Menu Operation

1. The unit is set to play USB first when the item is first turned on.
2. To switch to another input, press the input button on the remote control or source button on the unit and choose from USB / AV / SD / VGA.
3. You can only insert the USB or SD one at a time.

### 11. The unit is set to play USB when the item is first turned on. To switch to another input, either:

1. Press the "Input" button on the remote control, choose from AV/SD/VGA, then press OK.
2. Press the "Source" button on the unit, choose from AV/SD/VGA, then press ◀ or ▶.
3. Once these different inputs are selected, they will operate the same as the USB. Please refer to section 12 and 13 in the manual.

### 12. To Play Movies Using the Remote

1. Remove tag from the remote battery compartment.
2. **Stand behind the unit to use the remote control.**
3. Select "Movie" from the main menu.
4. Select Main Folder.
5. Select either "Christmas" or "Halloween" to select multiple movies. Always press ► to play movies, do not press "OK".
6. After the selected movie finishes playing the next movies automatically play sequentially.
7. To play the same movie continuously, scroll on the movie then press "OK" on the remote. A small "X" will appear in the corner of the movie. Then press ► to play.
8. Press "ESC" on the remote to leave the movie that's playing, then select new movie and press ►. Do not press "OK" on the remote to select a new movie, always press ►.

### 13. To Play Movies Using The Buttons On The Unit

1. Scroll to "Movie" by using ► button and then pressing the ▼ button.
2. Scroll to "Folder" and then press the ▼ button.
3. Select movie by scrolling using the ► or ◀ buttons.
4. To play the selected movie, press the ▲ button.
5. Movies will automatically play sequentially.
6. To play the same movie continually, scroll to the selected movie and then press ▼. A small "x" will appear in the corner of the movie. Then press ▲ to play.
7. Press the ▼ button when the movie is playing for other control options. Scroll using the ► or ◀ button and press ▲ to select.  
FB - Fast Backwards  
FF - Fast Forward  
P - Previous Movie  
N - Next Movie  
S - Go Back to folder to select other movies or movie category.
8. Press ► or ◀ for volume while movie is playing.
9. Press ▲ when the movie is playing to pause.

### 14. To Play Photos Using the Remote

1. Remove tag from the remote battery compartment.
2. **Stand behind the unit to use the remote control.**
3. Select "Photo" from the main menu.
4. Select Main Folder.
5. Select any photo you want to play. Always press ► to play photos, do not press "OK".
6. After the selected photo plays for 5 seconds, the next photo will automatically play sequentially.
7. To play the same photo continuously, scroll on the photo then press "OK" on the remote. A small "X" will appear in the corner of the photo. Then press ► to play.
8. Press "ESC" on the remote to leave the photo that's playing, then select new photo and press ►. Do not press "OK" on the remote to select a new photo, always press ►.

### 15. To Play Photos Using The Buttons On The Unit

1. Scroll to "Photo" by using ► button and then pressing the ▼ button.
2. Scroll to "Folder" and then press the ▼ button.
3. Select photo by scrolling using the ► or ◀ buttons.
4. To play the selected photo, press the ▲ button.
5. Photos will automatically play. After the selected photo plays for 5 seconds, the next photo will automatically play sequentially.
6. To play the same photo continually, scroll to the selected photo and then press ▼. A small "x" will appear in the corner of the photo. Then press ▲ to play.
7. Press the ▼ button when the photo is playing for other control options. Scroll using the ► or ◀ button and press ▲ to select.  
FB - Fast Backwards  
FF - Fast Forward  
P - Previous Photo  
N - Next Photo  
S - Go Back to folder to select other photo or photo category.

### 16. CARE INSTRUCTIONS

- a. Do not expose this item to moisture or outdoors. This item is for indoor use only.
- b. Before using or reusing, inspect product carefully. Discard any products that have cracks in enclosure or exposed wire.
- c. When storing the product, carefully remove from the current location to avoid any undue strain or stress on the conductors, connections and wires.
- d. When not in use, store neatly in a cool, dry location protected from sunlight and heat.
- e. If necessary, clean product by wiping with a soft, dry cloth. Do not use any corrosive cleanser or chemical solution on this item.

### SAFETY INSTRUCTIONS AND WARNINGS

**WARNING: THIS IS NOT A TOY! THIS PRODUCT CONTAINS SMALL PARTS WHICH COULD CAUSE CHOKING IF SWALLOWED.**

**TO PREVENT FIRE OR SHOCK HAZARD, DO NOT REMOVE COVER. NO USER SERVICEABLE PARTS INSIDE. IF SERVICING IS NEEDED, SEND TO QUALIFIED SERVICE PERSONNEL.**

### PLEASE ADHERE TO THE FOLLOWING:

- a. Read Instructions - All safety and operating instructions should be read before the item is operated. Please adhere to the instructions and warnings for your safety.
- b. Heat - The item should be situated away from heat sources such as radiators, hairdryers, heat registers, stoves or other appliances that produce heat.
- c. Moisture - The item should be situated away from water or any other liquids. Do not splash, spill or immerse this item into any liquid.
- d. Damage Requiring Service - Have a qualified service personnel service this item when:
  - i) Objects have fallen or liquid has spilled into the item.
  - ii) The item has been exposed to rain or moisture.
  - iii) All troubleshooting techniques have been tried and the item will not work or has stopped working.
  - iv) The item has been dropped or the enclosure damaged.

NOTE: Do not dispose batteries in fire. Batteries may explode or leak. Do not mix old and new batteries. Replace all batteries at the same time. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries. Remove fully discharged batteries immediately. Batteries should be recycled or disposed of as per state and local guidelines.

Federal Communications Commission Code, Part 15:

NOTES: This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate

# VIRTUAL HOLIDAY PROJECTOR

THIS PRODUCT IS NOT A TOY! Please read this entire instruction booklet before using.

## INSTRUCTION MANUAL

radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to correct the interference by one or more of the following measures:

- a. Reorient or relocate the receiving antenna;
- b. Increase the separation between the equipment and the receiver;
- c. Connect the equipment to an outlet on a circuit different from that to which the receiver is connected;
- d. Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modification to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- a. This device may not cause harmful interference, and
- b. This device must accept any interference received, including interference that may cause undesired operation.

The following is only applicable to customers in the USA:

For more information about this product, please call 1-800-467-9627, or visit our website [www.mrchristmas.com](http://www.mrchristmas.com). We will be happy to help you!

## NINETY-DAY LIMITED WARRANTY

Manufacturer warrants the original customer / purchaser of the VIRTUAL HOLIDAY PROJECTOR that they will be free from defects in material and workmanship for a period of ninety (90) days from date-of-purchase. Any liability under this warranty shall be limited to the repair or replacement of defective parts without charge if the item is returned with shipping charges prepaid together with proof of date-of-purchase, name and mailing address of the original consumer / purchaser. This warranty does not cover defects caused by damages in transit, abuse, accident, negligence or repairs made by others. This warranty gives the original consumer / purchaser specific legal rights. The original consumer / purchaser may also have other rights which vary from state to state.