

## IMPORTANT OPERATING TIPS

This product is intended to be used at night or in a dark room! In order to best select the videos you want to project, you'll need to view the projector in a dark setting.

1. Always point the remote control at the back of the projector to operate. (FIG 1 below).
2. To start a movie, press the ▶|| ("play") button when, not the "OK" button.  
→If the "OK" button is pressed when trying to play a movie:
  - A small "x" will appear in the corner of the movie icon. (FIG 2 below)
  - The selected movie will keep repeating after the ▶|| ("play") button is pressed.
  - Only this movie will play *even if other movies are selected*.



Reader at back of projector

FIG 1



With "X"

Without "X"

FIG 2

To remove the "x", scroll over the movie icon with the "x" and press the "OK" button.

3. To use with a USB flash drive, press the "input" button on the remote and choose "USB" to play movies or view images from your USB.  
→If using your own USB flash drive, please note the space constraint because of the outdoor casing and use a flash drive under 2" in length.

Information provided by Mr. Christmas