




Set of 4 – 30L Wire Lights Battery Operated with Timer

Included:

- Four (4) Wire Lights, LED 30ct. per light strand – 3 AA battery box (batteries not included).

Installation Instructions:

1. Unpack light strand.
2. Open the battery box cover - Insert 3 AA batteries (not included). Follow diagram in battery box for proper orientation. (Do not mix old and new batteries; do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries).

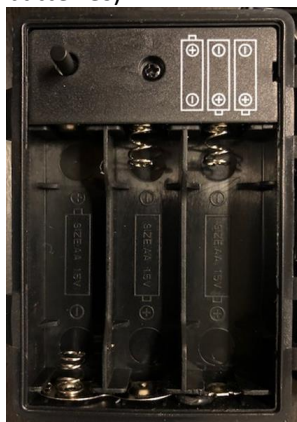

3. Close battery box cover (be sure rubber gasket inside the battery compartment is sitting properly to ensure door closes completely).
4. Push battery box button to set desired mode:
 - Off - Lights are off.
 - 4hr Timer - Steady On: From the OFF position, press the button one time. The light strand will stay lit in steady mode for 4 hours and then switch off for 20 hours. It will come back on every day at the same time as originally set and stay on for 4 hours each time. * For example: If you want the light strand to come on every day at 5pm, set lights to OFF, then press the function button one time at 5pm. It will then come on every day at 5pm and stay lit until 9pm.
 - 4hr Timer - Glisten: From the OFF position, press the button two times. The light strand will stay lit in glisten mode for 4 hours and then switch off for 20 hours. It will come back on every day at the same time as originally set and stay on for 4 hours each time. * For example: If you want the light strand to come on every day at 5pm, set lights to OFF, then press the function button two times at 5pm. It will then come on every day at 5pm and stay lit until 9pm.
 - 4hr Timer - Firefly: From the OFF position, press the button three times. The light strand will stay lit in firefly mode for 4 hours and then switch off for 20 hours. It will come back on every day at the same time as originally set and stay on for 4 hours each time. * For example: If you want the light strand to come on every day at 5pm, set lights to OFF, then press the function button three times at 5pm. It will then come on every day at 5pm and stay lit until 9pm.



- 4hr Timer - Twinkle: From the OFF position, press the button four times. The light strand will stay lit in twinkle mode for 4 hours and then switch off for 20 hours. It will come back on every day at the same time as originally set and stay on for 4 hours each time. * For example: If you want the light strand to come on every day at 5pm, set lights to OFF, then press the function button four times at 5pm. It will then come on every day at 5pm and stay lit until 9pm.
- 4hr Timer - Waves: From the OFF position, press the button five times. The light strand will stay lit in waves mode for 4 hours and then switch off for 20 hours. It will come back on every day at the same time as originally set and stay on for 4 hours each time. * For example: If you want the light strand to come on every day at 5pm, set lights to OFF, then press the function button five times at 5pm. It will then come on every day at 5pm and stay lit until 9pm.
- 4hr Timer – Phasing: From the OFF position, press the button six times. The light strand will stay lit in phasing mode for 4 hours and then switch off for 20 hours. It will come back on every day at the same time as originally set and stay on for 4 hours each time. * For example: If you want the light strand to come on every day at 5pm, set lights to OFF, then press the function button five times at 5pm. It will then come on every day at 5pm and stay lit until 9pm.

5. Place in desired location.

Remote Control Operation:

- Pull plastic tab piece at the bottom of the remote control.
- Press On button – Lights are on.
- Press Off button - Lights are off.

Timer:

- Press Timer button 3H – The light strand will stay lit in your desired mode for 3 hours and then switch off for 21 hours. It will come back on every day at the same time as originally set and stay on for 3 hours each time.
- Press Timer button 6H – The light strand will stay lit in your desired mode for 6 hours and then switch off for 18 hours. It will come back on every day at the same time as originally set and stay on for 6 hours each time.
- Press Timer button 8H – The light strand will stay lit in your desired mode for 8 hours and then switch off for 16 hours. It will come back on every day at the same time as originally set and stay on for 8 hours each time.
- Press Timer button 10H – The light strand will stay lit in your desired mode for 10 hours and then switch off for 14 hours. It will come back on every day at the same time as originally set and stay on for 10 hours each time.

Mode:



- When lights are initially on, they will be in Steady On mode.
- Press Light Option button once to turn on Glisten mode.
- Press Light Option button a second time to turn on Firefly mode.
- Press Light Option button a third time to turn on Twinkle mode.
- Press Light Option button a fourth time to turn on Waves mode.
- Press Light Option button a fifth time to turn on Phasing mode.
- If you press Light Option button a sixth time, you are back to the beginning function of Steady On mode.
- If you keep pressing this button, the functions will cycle in the order above.

**Dim:**


- When lights are initially on, the brightness level is at regular brightness. By pressing this button, the brightness level will increase.



- By pressing this button, the brightness level will decrease and come back to regular brightness.

Replacing Remote Control Battery:

When the unit does not respond to the signal from the remote control, replace the original battery with a new Lithium battery CR2025 3V.

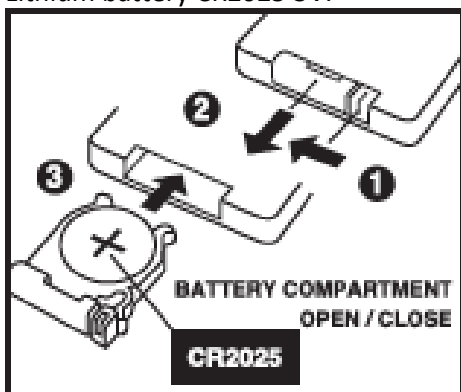**Care Instructions:**

- If lights or product becomes dusty or dirty, clean with a dry cloth. Do not use detergent as it may discolor the product.
- LED lights are not replaceable.
- Remove batteries before storing.
- Store in cool, dry location

Battery Information and Disposal:

- For best results, use alkaline batteries
- Install only new batteries of the same type in your product.
- Failure to insert batteries in the correct polarity, as indicated in the battery compartment, may shorten the life of the batteries or cause batteries to leak.
- Do not mix old and new batteries
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) or (Nickel Metal Hydride) batteries.
- Do not dispose batteries in fire.
- Batteries should be recycled or disposed of as per state and local guidelines.

LED Light Information:

LED lights are designed to be permanent and are not replaceable.



FCC Information:

Model: SK3AA-003, manufactured by Shenzhen Richway Power Electronics Co., Ltd. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.