

Warranty Information (continued):

EXCLUSIONS:

1. Damage resulting from accident, misuse, abuse, lack of reasonable care, subjecting the product to any but the specified electrical service, other than normal and ordinary use of the product, subjecting the product to abnormal working conditions or any other failure not resulting from defects in materials or workmanship.
2. Damage resulting from modification, tampering with or attempted repair by anyone other than the Company.
3. Transfer of product to someone other than the original consumer purchaser.
4. This warranty will not be effective unless and until the product is shown to have been used in accordance with the safety and installation instructions accompanying the product.
5. This warranty does not apply to any change in color on foliage.

LIMITATIONS ON IMPLIED WARRANTIES AND EXCLUSIONS OF CERTAIN DAMAGES:

This constitutes Company's entire warranty and Company makes no other warranties, whether express or implied, with respect to the product. Company specifically disclaims any and all implied warranties, including, without limitation warranties of merchantability and fitness for a particular purpose. If company cannot lawfully disclaim implied warranties under this limited warranty, all such warranties, including warranties of merchantability and fitness for a particular purpose are limited in duration to the duration of this warranty.

Company is not responsible for direct, special, incidental or consequential damages resulting from any breach of warranty or condition or under any other legal theory. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

CUSTOMER SERVICE CENTER HOURS:

Monday-Friday: 8:00AM-6:00PM CST

HOLIDAY WEEKEND HOURS:

Day After Thanksgiving: 8:00AM-4:30PM CST, Last Weekend of November & First Weekend of December: 8:00AM-4:30PM CST


Instruction Manual
5' GREEN CHRISTMAS TREE

INSTALLATION INSTRUCTIONS:

Step 1: Position and Set-Up Tree Stand

Note: For easier assembly, the straps around each section should NOT be removed until each section is assembled. Remove strap after each section is assembled.

- A. Place tree stand in desired location.
- B. Unfold tree stand until the legs are perpendicular and the screw hole is aligned.
- C. Insert the tree screw into the screw hole and turn 3 - 4 rotations only (if the screw is inserted too far you will not be able to fully insert the tree pole).

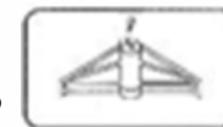

Step 2: Insert the Bottom Section (A) into the Tree Stand

- A. Remove and discard the plastic cap at the bottom of the metal pole.
- B. Release the power cord and corded remote from the lower tree branch by releasing the twist ties. (NOTE: DO NOT REMOVE THE RECTANGULAR BOX THAT IS ZIP TIED TO THE BOTTOM TREE BRANCH.)
- C. Insert the bottom tree section into the stand (bottom section is marked with "A") ensuring it is standing straight.
- D. Secure the bottom tree section in the stand by tightening the screw evenly.
- E. Remove section ties to free hinged branches. Adjust the branch tips for desired appearance (branches may need to be loosened from each other before adjusting the foliage tips. To aid in this process GENTLY pull down and separate individual branches from other branches).

Step 3: Insert the Top Tree Section (B) into the Bottom Tree Section (A)

- A. Remove and discard the plastic cap at the bottom of the metal tree pole.
- B. Remove yellow cover on top of metal tip of tree before setting up.
- C. Place the top section pole onto the bottom section (bottom section is marked with "A"). Align the arrows on section A with the arrows on section B and drop into place.



- D. Remove section ties to free hinged branches. Adjust the branch tips for desired appearance (branches may need to be loosened from each other before adjusting the foliage tips. To aid in this process GENTLY pull down and separate individual branches from other branches).

Setup Instructions (continued):

Step 4: Turn Tree on and Activate Functions

- A. Plug the tree into an extension cord or wall outlet.
- B. Press ON/OFF button. Red LED above button should turn on and tree should light.
- C. To adjust lighting effect, press LIGHT OPTION button. It will cycle through full bright, ambient light, subtle light, twinkle, slow twinkle, glisten, slow glisten.



- D. If a timer is desired, press the 6, 8, or 10 HR TIMER button. To deselect the timer option, press the timer button again. Timer cycle will start when timer button is pressed. The lights will stay lit for 6, 8, or 10 hours and then switch off for the remainder of 24 hours. The lights will turn on every day at the same time as originally set and stay on for 6, 8, or 10 hours each time. *For example: If you want the lights to turn on every day at 5pm and stay lit for 6 hours, you need to press the **6 HR TIMER** button at **5pm**. The tree lights will turn on every day at 5pm and stay lit until 11pm.*

Step 5: Shape tree branches as desired, make final adjustments to tree tips and decorate

Backed by
**5Year
Tree
5Year
Lights**
Limited Warranty

For Additional Information,

Call Toll-Free At

1-877-661-8324

Retain this document for future reference.

WARRANTY INFORMATION:

This product is unconditionally backed by a limited warranty, subject to the exclusions below. Consumers requesting to exercise this warranty will be required to provide original proof of purchase. This will be needed or the warranty will be null and void.

If for any reason, after assembly, the tree does not light, please call our toll-free number 1-877-661-8324, and a qualified technician will assist you.

Bethlehem Lights® warrants this tree to the original purchaser against manufacture defects. A valid sales receipt must be retained as proof of purchase. The warranty of this pre-lit tree is void when the product is used for commercial purposes. Bethlehem Lights® will not be responsible for any shipping charges incurred if any part of a tree has to be sent in for repair.

WARRANTY ON LIGHTS:

For up to 5 years from date of purchase, Bethlehem Lights® will review and if deemed necessary, replace with available lights due to any manufacture defect found to the lighted portion of your tree. Please note that broken/missing/burnt out bulbs and burnt out fuses are NOT covered under the warranty. Broken or burnt out bulbs must be replaced immediately using Bethlehem Light replacement bulbs. Fuses should be replaced as needed.

WARRANTY ON TREE:

For up to 5 years from date of purchase, Bethlehem Lights® will review, troubleshoot, repair and if deemed necessary replace with an available model due to any manufacture defect found to the tree. Replacement parts will be shipped out depending on the availability of the parts.

Note: After your pre-lit tree is assembled, please check your tree for any loose or damaged bulbs. Loose or damaged bulbs must be replaced promptly in order to maintain the performance and life expectancy of your pre-lit tree. If a bulb burns out please replace it at once. Failure to replace a burned out bulb will result in a shorter life span for the remaining bulbs. Failure to replace burned out bulbs or misuse of this product will void the warranty. This Christmas tree is a seasonal product. It is intended for indoor use only and for seasonal installation and use only (90 days max). Keep away from heat and moisture. Over time, flocked trees may change color. Do not wrap tree in plastic. Wrap in a light-colored sheet and store in a cool & dry environment.

CAUTION

- Risk of fire. This product contains lamp shunts, which allow the product to operate if one lamp burns out. Do not replace lamps with other than the spare lamps provided with this product. Replace fuses only with correct fuses listed below (provided with product).
- Do not replace attachment plug. It contains a safety device (fuse) that should not be removed. Discard tree if attachment plug is damaged.
- CAUTION - To reduce the risk of electric shock, use only with the power-supply cord provided.
- Do not use a cracked, frayed, or damaged cord. Inspect the cord periodically.
- Do not abuse cord - Do not carry product by the cord or yank or pull it to disconnect from the outlet.
- Replace any burned out bulbs as soon as possible to prevent overheating and reduced bulb life.
- Before using or reusing product, inspect carefully. Discard any product that has cut, damaged, or frayed wire insulation or cords, cracks in the lamp holders or enclosures, loose connections or exposed copper wire.
- Never change fuses, bulbs or assemble/disassemble tree with the power cord plugged into the wall outlet.
- Replace with GKI/Bethlehem lights only.
- Avoid touching electrical parts with sharp or heavy objects.
- Do not expose the electrical connectors that are on each section to water.
- This product has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless plug can be fully inserted. Do not alter or replace the plug.

SPECIFICATIONS:

Input: 120VAC 5A 600 Watts Max
 Bulbs: 2.2V Push-in 200mA w/Shunt
 Fuse: Power Cord – 5 Amp, 125 Volt
 Fuse Bulb: Light Strings – 2.2V Push-in
 200mA Shuntless


RECOMMENDED TREE STORAGE:

- Step 1:** Unplug power cord.
Step 2: Remove decorations.
Step 3: Separate the tree sections (starting at the top).
 • Fold branches up to avoid crushing the tips. Hint: Tie branches up to make the sections easier to handle and set up in future years.
Step 4: Repeat step 3 for all upper sections.
Step 5: Unscrew tree stand to release the bottom section. Lift out bottom section from stand.
Step 6: Tie power cord and controller + cord to a lower tree branch.
Step 7: Fold stand and tighten screw back into stand to prevent losing the screw.
Step 8: Store in cool, dry area protected from sunlight. (If storing in the original box, or a box of similar size, it is recommended that the bottom section is placed in the box first, followed by the middle and top sections for the best fit. Package tree carefully as to not bend or break off branches. DO NOT FORCE TREE INTO STORAGE BOX).

Setup Instructions (continued):

FUSE REPLACEMENT FOR OUTLET PLUG:

- Unplug power cord from receptacle or other outlet device. Do not pull on cord.
- Slide open fuse access cover on top of plug.
- Turn fuse holder over and remove fuse.
- Risk of fire. Replace fuses only with correct fuses listed above (provided with product).
- Turn holder face up and place new fuse(s) into previous fuse location.
- Slide fuse access cover closed.

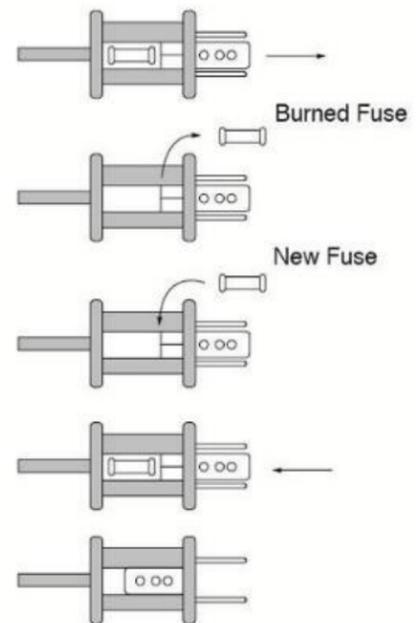


FUSE REPLACEMENT FOR LIGHT STRING:

- Unplug power cord from receptacle or other outlet device. Do not pull on cord.
- Locate the burnt out fuse bulb on the light string (brown base with white tip). Unlatch the bulb holder and remove bulb.
- Replace fuse bulb with new. Make sure to use fuse bulb as replacement (brown base with white tip). Close fuse latch.

TROUBLE SHOOTING:

- If the entire tree does not light, check the following:
 - Check to see that the tree is plugged into the wall and that there is power to the outlet.
 - Check to see if the controller will light up when ON/OFF button is pressed. If any of the LEDs are lit, there is power to the Controller and the tree.
 - If the controller still fails to light, check the fuse at the main power cord (plug that goes directly into wall socket) – use only 125 volt Fuse, 5 amp maximum. See instructions below.
- If a section or partial section will not light:
 - Check to make sure arrows are aligned and the connectors are in contact.
 - Check that all the light strings and umbilical cords are all plugged into the main wiring harness for that section. Each light string should be plugged into the main wiring harness receptacle.

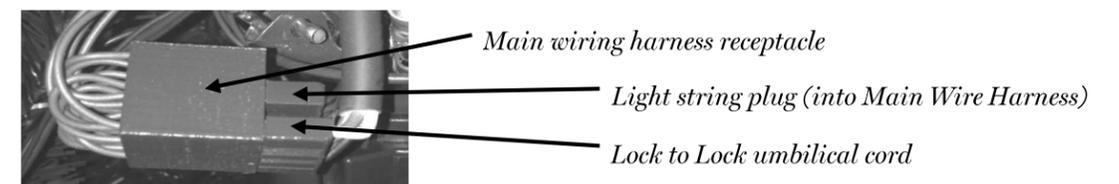

- If a light or the entire string still fails to light after checking if plugged-in and fuses are intact, look for damaged, missing or burnt-out bulbs. Replace with included replacement bulbs.

IMPORTANT SAFETY INSTRUCTIONS

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

- When using electrical products, basic precautions should always be followed including the following:
- Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- This seasonal use product is not intended for permanent installation or use.
- Do not mount or place near gas or electric heaters, fireplaces, candles, or other similar sources of heat.
- Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- Do not let lamps rest on the supply cord or on any wire.
- Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- Disconnect the product from the outlet when not in use.
- This is an electric product - not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
- Do not use this product for other than its intended use.
- Do not hang ornaments or other objects from cord, wire, or light string.
- Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- Do not cover the product with cloth, paper, or any material not part of the product when in use.
- This product has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless plug can be fully inserted. Do not alter or replace the plug.
- This product is equipped with push-in type lamps. Do not twist lamps.
- Read and follow all instructions that are on the product or provided with the product.
- Do not attempt to connect other lighting strings or decorative products to this tree. **NO OTHER PRODUCTS SHOULD BE WIRED OR PLUGGED INTO THE TREE.**
- This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded.

SAVE THESE INSTRUCTIONS

FCC Information:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.