

**INSTRUCTIONS FOR USE:
6005916 Jim Shore “Heartwood Creek”
Angel Statue With Nativity Scene and Lighted Star**


Read All Instructions:

TO TURN ON LIGHT UP FEATURE:



1. One CR2032 button cell battery is already included in the star.
2. A protective rubber cover is applied over the back of the battery box to protect the components from the outdoor elements if the product is used outdoors. Remove the protective rubber cover to find the black On/Off switch.
3. Turn the switch to the “On” position to turn on the light feature.
4. Reattach the protective rubber cover.
5. The On/Off switch can be operated either with the rubber cover on or with the rubber cover off.
6. Place the star on the designated hook located on the Angels hand.
7. Once the star is “On” and placed on the hook, the statue is ready to be displayed and enjoyed.
8. Turn the switch to the “Off” position as desired, to turn off the star.
 - After some time, the battery may need to be replaced with a new one.
 - The LED light should never need to be replaced.

TO REPLACE BATTERIES:

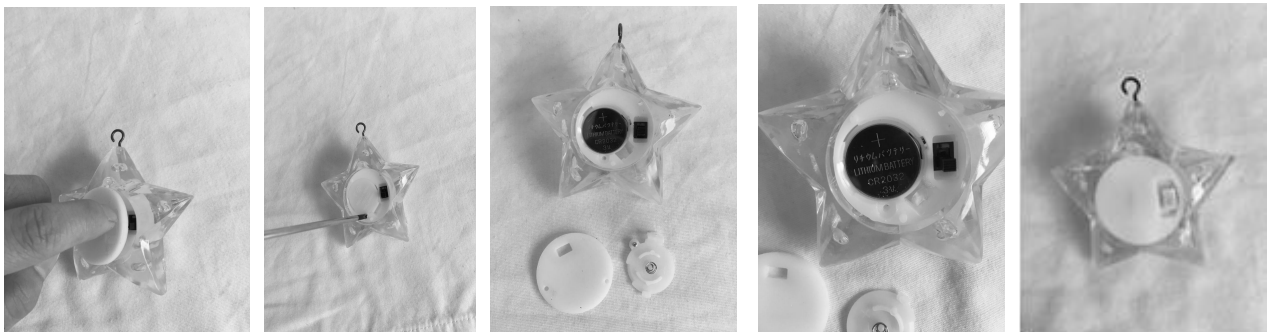

1. Locate the Battery Box on the Underside of the Star.
2. Remove Protective Rubber Cover from Battery Box.
3. Remove the plastic cover using a Philips head screw driver and take out the old battery. Please recycle or dispose of batteries properly.
4. Insert 1 NEW CR2032 Button Cell Battery into the battery compartment, following the +/- markings embossed on interior of the battery compartment.
5. Replace the plastic cover and screw and lock in place.
6. Attach the Protective Rubber Cover on to the Battery Box.