



## 5' IPT Ready Shape Tree Instructions

### **Included Parts:**

- Pre-lighted Tree Top (section B)
- Bottom Section of Pre-lighted Tree (section A)
- Collapsible Stand with 1 adjustable screw
- Replacement bulbs and fuses
- One pair protective gloves



**Caution** – *Do not overload: Connect a maximum of three series or series parallel connected lighting strings or decorative outfits to each load fitting. Do not interconnect different types of products. DO NOT PLUG ITEMS INTO THE OPEN STRAND SOCKETS. NO OTHER PRODUCTS SHOULD BE PLUGGED INTO THE TREE.*

 
NOTE: If your tree includes flocking, it is recommended to adjust your tree with a sheet under it to help contain the flocking that comes loose. If your tree includes decorative embellishments, please note that some movement may have occurred during shipping but the beauty of the tree will not be diminished.

### **Setup Instructions:**

Note: Wearing long sleeves and gloves(provided in box) is recommended to protect your arms and hands from branches.

### **Step 1: Position and Set-Up Tree Stand**

- Place tree stand in desired location.
- Unfold tree stand until the legs are perpendicular.

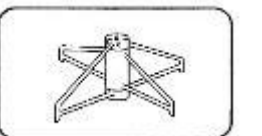




*Setup Instructions (continued):*

**Step 2: Insert the Bottom Section into the Tree Stand**

 - Remove plastic cap at the end of the metal pole.
  - Set up stand and turn screw half way before placing section A onto stand.
  - Drop Section A into the tree stand.
- 
- Let the hinged branches fall into place.
  - Adjust the branch tips for desired appearance (some people chose to perform this step when the tree is fully assembled).
  - Tighten screw on tree stand.

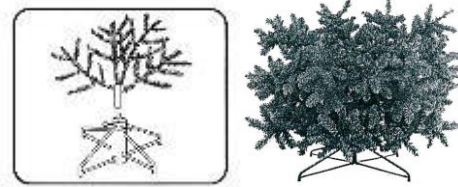

*Warranty Information (continued):*

**Exclusions:**

1. Damage resulting from accident, misuse, abuse, lack of reasonable care, subjecting the product to any but the specified electrical service, other than normal and ordinary use of the product, subjecting the product to abnormal working conditions or any other failure not resulting from defects in materials or workmanship.
2. Damage resulting from modification, tampering with or attempted repair by anyone other than the Company.
3. Transfer of product to someone other than the original consumer purchaser.
4. This warranty will not be effective unless and until the product is shown to have been used in accordance with the safety and installation instructions accompanying the product.
5. This warranty does not apply to any change in color on foliage.

**Limitations of Implied Warranties and Exclusions of Certain Damages:**

This constitutes Company's entire warranty and Company makes no other warranties, whether express or implied, with respect to the product. Company specifically disclaims any and all implied warranties, including, without limitation warranties of merchantability and fitness for a particular purpose. If company cannot lawfully disclaim implied warranties under this limited warranty, all such warranties, including warranties of merchantability and fitness for a particular purpose are limited in duration to the duration of this warranty.

Company is not responsible for direct, special, incidental or consequential damages resulting from any breach of warranty or condition or under any other legal theory. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

**Customer Service Center Hours: Monday-Friday: 8:00AM–6:00PM CST**

**Holiday Weekend Hours: Day After Thanksgiving: 8:00AM–4:30PM CST, Last weekend of November & First weekend of December: 8:00AM–4:30PM CST**



For Additional Information,

Call Toll-Free At

1-877-661-8324

Retain this document for future reference.

#### WARRANTY INFORMATION

This product is unconditionally backed by a limited warranty, subject to the exclusions below. Consumers requesting to exercise this warranty will be required to provide original proof of purchase. This will be needed or the warranty will be null and void.

If for any reason, after assembly, the tree does not light, please call our toll-free number 1-877-661-8324, and a qualified technician will assist you.

Bethlehem Lights® warrants this tree to the original purchaser against manufacture defects. A valid sales receipt must be retained as proof of purchase. The warranty of this pre-lit tree is void when the product is used for commercial purposes. Bethlehem Lights® will not be responsible for any shipping charges incurred if any part of a tree has to be sent in for repair.

#### Warranty on Lights:

For up to 5 years from date of purchase, Bethlehem Lights® will review and if deemed necessary, replace with available lights due to any manufacture defect found to the lighted portion of your tree. Please note that broken/missing/burnt out bulbs and burnt out fuses are NOT covered under the warranty. Broken or burnt out bulbs must be replaced immediately using Bethlehem Light replacement bulbs. Fuses should be replaced as needed.

#### Warranty on Tree:

For up to 5 years from date of purchase, Bethlehem Lights® will review, troubleshoot, repair and if deemed necessary replace with an available model due to any manufacture defect found to the tree. Replacement parts will be shipped out depending on the availability of the parts.

**Note:** After your pre-lit tree is assembled, please check your tree for any loose or damaged bulbs. Loose or damaged bulbs must be replaced promptly in order to maintain the performance and life expectancy of your pre-lit tree. If a bulb burns out please replace it at once. Failure to replace a burned out bulb will result in a shorter life span for the remaining bulbs. Failure to replace burned out bulbs or misuse of this product will void the warranty. This Christmas tree is a seasonal product. It is intended for indoor use only and for seasonal installation and use only (90 days max). Keep away from heat and moisture. Over time, flocked trees may change color. Do not wrap tree in plastic. Wrap in a light-colored sheet and store in a cool & dry environment.



Setup Instructions (continued):

#### **Step 3: Shape the Tree Top and Insert into the Bottom Section**

- Remove yellow cover on top of metal tip of tree before setting up.
- Adjust the tips and shape the treetop before inserting into the bottom section.
- Locate the open groove on the bottom section (marked with "A"). Use arrow stickers as a guide.
- Insert Section B into Section A, making sure that the notch slides into the groove. Arrows will be pointing to each other.
- Plug the tree stand into an extension cord or wall outlet.
- Press foot pedal once to turn lights on.



#### **Step 4: Make final adjustments to tree tips and decorate if desired.**

- Please make sure to keep the instructions for reference when setting up your tree next year!

#### **Safety First:**

- Unplug power supply cord when replacing bulbs and fuses.
- **NEVER** change fuse with the power supply cord plug in wall duplex.
- Replace with GKI/Bethlehem lights only.
- Avoid touching electric carrying parts with sharp or heavy objects.
- Do not plug other products into the tree plugs.

#### **Fuse Replacement:**

- Slide open fuse slot in plug head that is attached to pole.
- Insert new fuse and close fuse slot.

#### **Care Instructions:**

 
- If your tree has incandescent lights, be sure to replace burnt-out bulbs with replacement bulbs (included) as bulbs burn out. This will extend the life of the remaining bulbs.
- When not in use store in a cool dry location.
- Keep away from heat and moisture.
- If your tree has flocking, it may discolor over time.
- See warranty at the back of these instructions for additional information.





### Trouble Shooting:

- If a branch or section will not light, check to be sure that all the cords are plugged into the pole. Each section should be plugged into one socket.
- **A safety strap has been placed around the plugs to ensure that the plugs do not fall out of the pole during shipping. This strap easily slides over the plugs to hold them tight. *Images shown are for reference only; your tree may differ slightly.***
- If the item still fails to light after checking all plugs are plugged in, look for a damaged, missing, or burnt-out bulb. Replace the bulb with included replacement bulbs.
- If the item still fails to light after checking all plugs are plugged in, check the fuse in the plug – use only 125 volt fuse, 5 amp maximum.

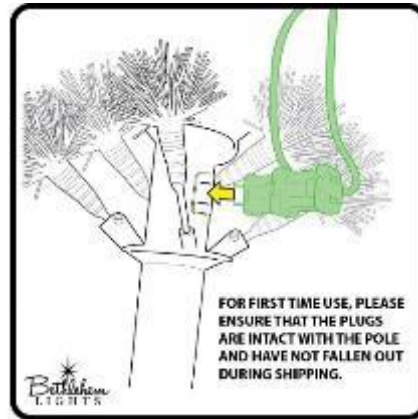

### Tree Storage:

- **Step 1:** Unplug power cord.
- **Step 2:** Remove decorations.
- **Step 3:** Lift each section directly up.
- **Step 4:** Separate the tree sections (starting at the top). Fold branches up to avoid crushing the tips. You can tie the branches up to make the sections easier to handle and set up in future years.
- **Step 5:** Unscrew tree stand to release the bottom section. Fold stand and tighten screw back into stand to prevent losing the screw.
- **Step 6:** Store in cool, dry area.



### Re-Packing Tree Into Box Packaging

- **Step 1:** Place instructions and tree stand in box.



- **Step 2:** Place Section B inside so the pole is in the corner of the box.



- **Step 3:** Place Section A in the opposite direction of the box.

