

PRE-LIT & PRE-SHAPED CHRISTMAS TREE

Thank you for your purchase of this pre-lit & pre-shaped Christmas tree. With proper use and care, this tree will provide years of trouble-free enjoyment. Please follow the instructions below in order to properly assemble and store your tree. In the event that you should encounter any issues during the assembly of your tree; please refer to the "Troubleshooting" portion of this manual or call our toll free customer service number at 1-888-831-6656, and a trained representative will assist you.

ASSEMBLY INSTRUCTIONS

(We recommend wearing proper clothing in order to prevent scratches that may occur during the assembly process.)

Carefully unpack the contents from the tree's carton (Fig 1).

Your tree should include the following components:

Contained in the poly-bag are LED replacement bulbs and a remote control which operates your tree's 116 function lighting capability.

A folding metal tree stand with (3) eyebolts.

An on/off push button foot pedal with cord and plug (Fig 6); which is pre-attached to your tree (Fig 5).

The 5' and 6.5' trees will have (2) tree sections. ("A" and "B").

The 7.5' tree will have (3) tree sections; ("A", "B" and "C"; as shown in Fig 5).

The 9' tree will have (5) tree sections "A", "B", "C", "D" and "E".



EZ-POWER™ TECHNOLOGY

NOTE: Your tree has been designed with EZ-Power™ technology; allowing for each of the tree's sections to light up automatically, upon a firm insertion of each lettered section (Fig 5).

- Locate the next section of the tree which is identified by a label on the outer branches marked "B" (Fig 5).
- Remove the protective plastic cap from the end of the pole on section "B"; insert that end onto the top of the pole of section "A" (Fig 4).




- Once section "B" is fully inserted downward into section "A"; both section "A" and section "B" will now be lit.
- Again, carefully cut the nylon strapping bounding the branches upright; being extremely careful not to cut any of the exposed light set wires.
- Now gently guide the branches of section "B" downward into place.
- Depending on the height of the tree you have purchased, you will continue to build your tree upwards, section by section, following the above steps until the tree is completely assembled. Each section of the tree is labeled in alphabetical order beginning from the bottom to the top.

ASSEMBLY OF THE TREE STAND

- Remove the tree stand from the plastic bag, loosen the eye bolt and open the tree stand to form an "X".
- Align the holes for the insertion of the remaining (2) eyebolts.
- Insert each eyebolt and begin threading in a clockwise direction for a couple of rotations only; leaving enough room for the tree's pole from section "A" to be inserted into the assembled stand (Fig 2).
- Place the tree stand in its desired location; as once the tree is fully assembled, it may be too difficult to move and relocate.

ASSEMBLY OF THE TREE

- Locate the bottom section of the tree which is identified by a label on the outer branches marked "A" (Fig 5).
- Remove the protective plastic cap from the end of the pole, and place that end into the tree stand. Be sure that the pointed end of the pole extends to the bottom of the stand.
- Now tighten the eyebolts evenly on the tree stand; being careful not to over-tighten (Fig 3).

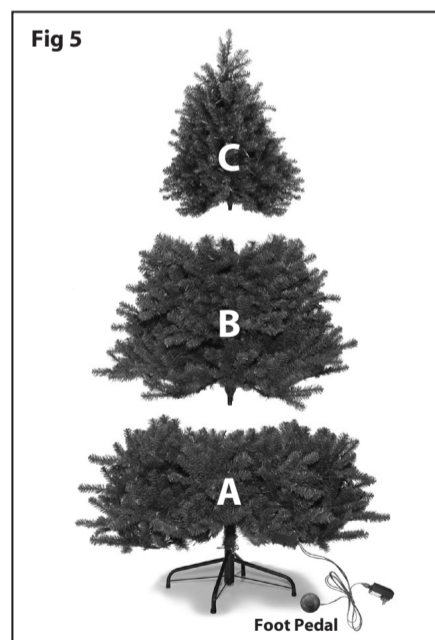

- Carefully cut the nylon strapping bounding the branches upright if applicable.
CAUTION: Be extremely careful not to cut any of the exposed light set wires.
- Now gently guide the branches downward into place.
- Beneath the canopy of section "A", is the on/off push button foot pedal with cord and plug. The 14' tree is pre-attached at section B. (Fig 6a for 5' tree, Fig 6b for 6.5', 7.5' and 9' trees). Remove the twist-tie binding the cord together and insert the plug into a working electrical outlet.
- On/off push button foot pedal operation:
The on/off push button foot pedal is intended to provide basic manual on/off operation only; and therefore cannot provide the remote control 116 function lighting capability.

REMOTE CONTROL OPERATION

The LED pre-lit and pre-shaped Christmas tree's 116 lighting function capability is controlled solely by the use of the remote control provided (Fig 7).

A CR2025 Battery is included in remote; remove the insulator sheet before operating the remote.

NOTE: By reducing the distance from your tree; you may achieve better remote control reception.

To change a color within a selected function:

Press the button of your desired function. Continuously press it to scroll through the 14 color choices. (Example: Press the Steady button once for Steady Warm White, press again for Steady Cool white and so on). If you scroll pass your color choice, continue to press the button to cycle forward to your desired choice. You cannot scroll backwards.

116 LIGHTING COMBINATIONS:

Color / Function	Steady	Glisten	Firefly	Twinkling	Random Twinkle	Chasing	2 Color Variable	Fireworks	7 Color Morphing	7 Color Slow fade	Light Show	Cycle Favorite
1. Warm White	✓	✓	✓	✓	✓	✓	✓	✓				
2. Cool White	✓	✓	✓	✓	✓	✓	✓	✓				
3. Red	✓	✓	✓	✓	✓	✓	✓	✓				
4. Green	✓	✓	✓	✓	✓	✓	✓	✓				
5. Blue	✓	✓	✓	✓	✓	✓	✓	✓				
6. Purple	✓	✓	✓	✓	✓	✓	✓	✓				
7. Teal	✓	✓	✓	✓	✓	✓	✓	✓				
8. Multi	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
9. Red/Green	✓	✓	✓	✓	✓	✓	✓	✓				
10. Blue/Cool White	✓	✓	✓	✓	✓	✓	✓	✓				
11. Red/Cool White/Blue	✓	✓	✓	✓	✓	✓	✓	✓				
12. Red/Warm White	✓	✓	✓	✓	✓	✓	✓	✓				
13. Green/Warm White	✓	✓	✓	✓	✓	✓	✓	✓				
14. Red/Green/Warm White	✓	✓	✓	✓	✓	✓	✓	✓				
Total no. of functions	14	14	14	14	14	14	14	14	1	1	1	1
Brightness control	Yes	Yes	No	No	Yes	Yes	No	No	No	No	No	No



Fig 7

- a. **SELECT FAVORITE** - Gives you the ability to program 5 of your favorite functions for easy recall. (You will be unable to store any program while in Cycle Favorite or Light Show. The tree will flash 3 times in purple to indicate when a function cannot be stored.)
To Program: Set the tree to the color and function you want to save, then press "Select Favorite". The tree will twinkle 3 times in blue, indicating your selection has been saved. Repeat with next color/function you want to save, for a maximum of 5 favorites.
To Play: Press the "Play Favorite" button one time. Press a second time to switch to your 2nd saved favorite and so on.
To Change: A maximum of 5 favorites can be stored. Select a 6th favorite mode and your original 1st favorite will be removed, now leaving your 2nd to 6th programmed favorites. Select a 7th favorite and your 2nd favorite will be removed, leaving your 3rd to 7th favorites and so on.
- b. **CYCLE FAVORITE** - The tree will continually cycle through all 5 of your favorite selections.
- c. **LIGHT SHOW** - The tree will continually cycle through all 116 functions.



Brightness Control:

The brightness control button is located on the left side of the remote. It offers three brightness settings (low, medium, high). Continually press the button to reach your desired brightness level.
 Note: The brightness control only works on the "Steady", "Glisten", "Random Twinkle" and "Chasing" functions.



6H Timer:

The timer button is located on the right side of the remote. Press the timer button and the lights will flash Green 3 times, indicating the 6 hour timer has been activated. The tree will now remain on for 6 hours and will automatically resume the last function 18 hours after shut off. To turn off the timer, simply press the timer button again and lights will flash Red 3 times to indicate the timer is off.
 If the tree is manually turned off while the timer is set, the timer will shut off.

TROUBLESHOOTING

- If the tree does not illuminate press the on/off button on your remote control. If failure to light persists, the battery may need to be replaced. Insert a standard CR-2025 battery.
NOTE: The tree's 116 function lighting capability is controlled solely by the use of the remote control provided.
 If the tree fails to light due to a damaged or defective remote control; please resort to manual on/off push button foot pedal operation until a new remote control can be provided through our customer service center.
- If failure to light persists, press the on/off push button foot pedal; as it may be in the "Off" mode.
- If the top of the tree or another individual lettered section does not illuminate, remove each section and then reinsert as instructed, to ensure the electrical connection is made.
NOTE: The tree's top is designed specifically for a secure and firm connection point. Downward force will be needed to ensure that the electrical connection occurs.
- Always inspect your tree for any burned out LED bulbs. Although the tree will continue to remain lit even if a bulb burns out, is loose or is missing; any burned out LED should be replaced promptly to ensure the performance and life expectancy of your tree.
NOTE: Replacement bulbs are provided; this is a specialty LED bulb. Do not attempt to replace with a standard LED or Incandescent bulb. Should you require additional bulbs please contact our customer service department.
- If lighting is out of sequence after replacing an LED, remove and re-insert the LED making sure to align the husk tabs as illustrated in the safety instruction sheets. This is a specialty bulb. Do not replace with a standard LED or Incandescent bulb. Should you need additional bulbs please call our customer service department at 1-888-831-6656.
NOTE: DO NOT USE ANY ADDITIONAL LIGHTING OR ORNAMENTATION THAT IS POWERED THROUGH THE LIGHT BULB SOCKETS. DOING THIS MAY RESULT IN DAMAGE TO THE LIGHTING SYSTEM OR MAY CAUSE PERSONAL INJURY; THEREFORE VOIDING THE LIMITED WARRANTY PROVIDED WITH THIS PRODUCT.

DISASSEMBLY & STORAGE

- Gently remove the plug from its electrical outlet, and carefully bind the cord which contains the on/off push button foot pedal and plug.
- Beginning with the tree's top section; lift each section straight up from the section below, and continue working downward.
NOTE: You may have to slightly wiggle each section as you lift each section upward.

- To remove the bottom and final section; loosen the eyebolts by turning in a counter-clockwise direction and lift section "A" from the support collar of the tree stand.
- Gently fold the branches of each section upward, towards the center, and position in the storage container.
NOTE: With the exception of the tree's "top" section; by holding each section upside down; the branches will collapse downward, due to the hinging, aiding in the packing of each section into the storage container.
- Fully unthread the eyebolts from the tree's stand and fold together; placing in the storage container.
- It is recommended to always store the tree in a cool, dry location protected from excessive exposure to heat or sunlight.
NOTE: Store your remote control in a SAFE & DRY location and remove the battery from remote control before storage.
NOTE: ALTHOUGH THE LED LIGHT STRINGS ON THE TREE ARE RATED FOR INDOOR OR OUTDOOR USE; THE COMBINATION OF THE TREE WITH THE LED LIGHTS IS FOR INDOOR USE ONLY.

FLOCKING OR GLITTER DISCLAIMER

Notice: Your pre-lit tree has been professionally flocked or glittered.
 Upon the tree sections being removed from its carton, you will notice an accumulation of flocking or glitter at the base of the carton.

Do not be alarmed.
 This loose flocking or glitter material was accounted for and planned in the packing and manufacturing process of this tree.

In no way has the appearance or the integrity of the tree's quality been compromised.
 During future Holiday seasons you can expect a light dusting of flocking or glitter to loosen from your tree during the packing and unpacking process. Extra flocking or glitter has been adhered to your tree to account for this minor annual loss.

The overall beauty of your tree will not be diminished.
 Simply sweep or vacuum up the loose flocking or glitter upon the assembly completion. During the flocking or glitter process the light bulbs themselves have been flocked or glittered. This was purposely done for the overall lighting effect of the tree.

PLEASE NOTE: Your flocked tree must NOT be stored in a plastic bag or bags as moisture and condensation may occur, causing for the discoloration of the flocking material.
 Your flocked or glittered tree must be stored in a cool and dry location protected from excessive exposure to moisture, heat or sunlight.
 With proper care and proper storage location, you will experience many years of enjoyment.

Customer Service:

In the event that you should encounter any issues during the assembly of your tree; please refer to the "Troubleshooting" portion of this manual or call our toll free customer service number at 1-888-831-6656, and a trained representative will assist you.

Customer service hours of operation:

Monday-Friday: 8:00am - 4:30pm CST.
 Holiday weekends:
 Last weekend in November: 8:00am - 4:30pm CST. First weekend in December: 8:00am - 4:30pm CST. Visit us on the web at www.santasbest.com

Item # 01102-5036-0301-52QV / 01102-6544-0301-52QV
 01102-7552-0301-52QV / 01102-9060-0301-52QV

Patents pending.
 Made in China
 Printed in China
 This is not a toy, for decorative use only.



Santa's Best

Vernon Hills, IL 60061 USA
www.santasbest.com