

INSTRUCTION MANUAL

HOME REFLECTIONS ARTIFICIAL PRE LIT CHRISTMAS TREE


****We recommend wearing proper clothing to prevent scratches that may occur during the assembly process****

TAKING INVENTORY

Your tree will come in various combinations depending on the size. See below.

Your box should include the following contents:

- Each section for your tree size.
- A metal tree stand with 3 eyebolts.
- An on/off foot pedal with cord and plug (installed on section A)
- Poly-bag taped inside the box including:
 - Remote with 16 functions (CR2025 battery included)
 - Instructions
 - Warranty sheet
 - Customer Service contact

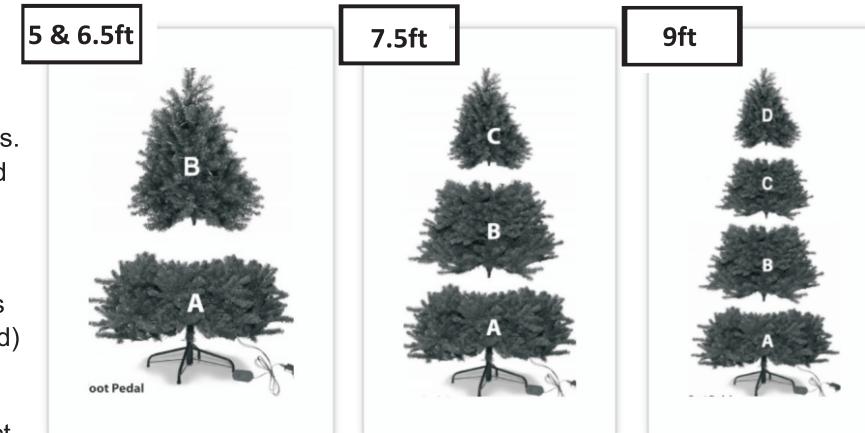


REMOTE SETUP

1. Remove the flat piece of clear plastic from the battery tray. This will engage your CR2025 battery.



TREE STAND SETUP


2. Remove the eye bolts, and open the tree stand to form an "X" (fig 1).
3. Align the threaded holes to insert each eyebolt. Make only a few clockwise turns; leaving room to insert section "A".
4. Place the stand in your desired location; as once the tree is fully assembled, it may be too difficult to move and relocate.

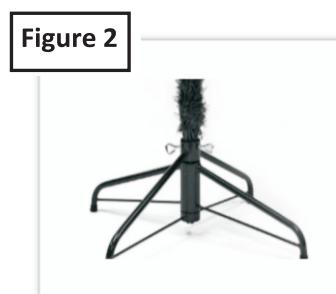

ASSEMBLY OF THE TREE

5. Locate the bottom section A (marked by a red hang tag).
6. Remove the protective cap from the end of the pole, insert the long-pointed end into the stand. Be sure the pole goes all the way through the bottom of the stand (fig 2).
7. Now tighten your eyebolts evenly, securing the trunk in place. Do not overtighten.
8. Carefully cut the nylon strapping and allow the branches to fall downward.

CAUTION: Do NOT to cut any wires.

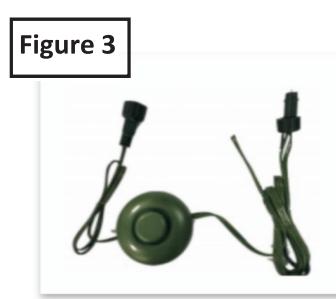

9. Unravel your power cord from the bottom branches of section "A" and plug it into a working electrical outlet (fig 3).
10. Locate section "B" and remove the protective plastic cap from the end of the pole. Insert that end on top of section "A" (fig 4).
11. Again, cut the nylon strapping and allow the branches to fall downward.
12. Now gently guide the branches of section "B" downward into place.

CAUTION: Do NOT to cut any wires.


13. 5ft and 6.5ft model trees are now complete. For 7.5ft and 9ft models, continue to build your tree.

EZ-POWER™ TECHNOLOGY NOTE: Your tree has been designed with EZ-Power™ technology; allowing for each of the tree's remaining sections to light up automatically, upon a firm insertion of each lettered section.


FINISHING THE TREE

If you feel the need, the directions below describe a few methods to fluff out your branches and make your tree look as full as possible.

14. Start by bending the rear branches outward. Following that, bend the closer branches outward as well (fig 5).

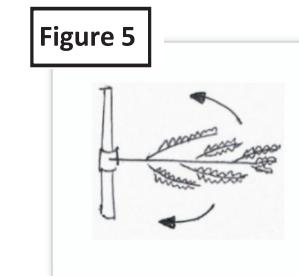


15. Bend the lower section's larger branches downward at a slight angle. This look helps mimic live trees and makes your tree look fuller (fig 6).

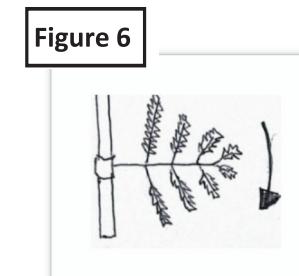


NOTE: Some products may appear to have no point on the top section. This is no cause for concern. During shipping the tip of the tree needs to lay flat on the other branches to remain intact.

16. Bend the very tip of your tree upward and fluff the branches out (fig 7). Shape the surrounding top branches to create the pointed shape you like (fig 8).

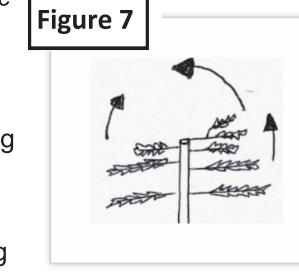

17. Now stand back and see if there are any remaining gaps. If so, bend surrounding branches towards your gap, closing any hole. This can be done from the left, right, top and bottom.

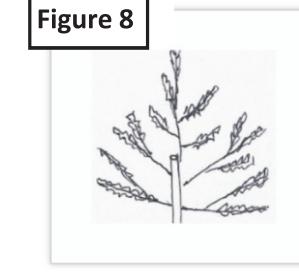

TREE OPERATION

Included with your product is the footstep button located along your power cord. With each press of the button, your tree will turn on, cycle through all 1- 16 functions, then finally turn your tree off with the last press. You may use the foot button, remote control, or both at your convenience. Once the clear tab is removed from your 16-function remote, your battery will engage. By reducing the distance from your remote to your tree, you will notice better remote-control reception. Be aware if separated by thick walls, multiple rooms, or entire floors of a house your remote may not be as responsive. In the case you purchased more than one tree and plan to use them both in your house, remote frequencies may affect both trees at the same time.

LIST OF LIGHTING FUNCTIONS

1. Steady Warm White
2. Steady Warm White Twinkle
3. Slow Fade Warm White
4. Slow Fade Warm White Twinkle
5. Steady Multi
6. Pastel Steady
7. Steady Multi with Twinkle
8. Slow Fade Multi
9. Slow Fade Pastel
10. Slow Fade Multi with Twinkle
11. Warm White and Multi Quick Color Flip
12. Warm White, Multi, and Pastel Quick Color Flip
13. Warm White and Multi Quick Color Flip Twinkle
14. Warm White, Multi, and Pastel Slow Color Flip
15. Warm White and Multi Slow Color Flip Twinkle
16. DM= Demo Mode (cycles through all functions)

TIMER FUNCTION

1. At the top of your remote are the timer buttons.
2. 6H mode will begin counting 6 hours of ON time, and automatically power off for an 18 hour OFF period.
3. 8H mode will begin counting 8 hours of ON time, and automatically power off for a 16 hour OFF period.
4. Once the timer is set, the lights will turn off for one second, then resume last selected function
5. After the OFF period, the last lighting mode selected will resume.
6. If a lighting mode is changed after the timer is set, it will NOT affect the timer setting.

TROUBLESHOOTING & FAQ

The bottom section fully lights, but the above sections flicker/ do not light/ do not change color.

1. Make sure all pole-to-pole connections are firmly in place.
2. If issues persist, follow the power cord wire into the BOTTOM of the tree. Located just above the stand is a cylindrical plug going directly into the pole. This connection likely partially or fully unplugged. Plug it in and tighten down the cap to secure it.
3. If your issue persists, go to the section that is not lighting and perform the same procedure. Locate the plug going into the pole. Push it in and tighten the cap.

NOTE: this plug has three prongs and can ONLY be plugged in at one angle. There is a flat spot on both the plug and the outlet.

My tree does not light up.


1. Be sure your outlet has a live electrical connection.
2. Go to your power outlet and unplug your tree from the wall. Push the green wire further into the black power brick and tighten down the screw cap to secure the connection. Plug your tree back into the wall and turn it on.
3. Try turning your tree on using both the remote AND foot pedal. If one of them works, but the other does not, contact our support team.

My tree has an open pole at the top/ How do I fit a tree topper?

1. Each tree is left with an open port on top for easy install of a tree topper. There are many designs for tree toppers. If you have a stick-based tree topper, feel free to insert that stick into the pole, or if it is too thick, fix it alongside the pole. If your tree topper uses a cone or ring application, grab the top branches, and insert them into the toppers ring. Depending on the weight and design, your tree topper may be best suited to rest on the top branches. If need be, the branches are fully posable.
2. The top of your tree may be flattened making it appear to be missing a section. Do not be alarmed. Your top branches may be flattened during the shipping process. Please read the "Finishing your tree" section of the manual.

My remote is not working.

1. Look at the top of your remote. The light on top should illuminate when buttons are pressed.
2. To take out the battery (fig 6), look at the back side of your remote. Down at the bottom is your battery tray. Squeeze the short black plastic nub towards the right while pulling on the tray and remove your battery. Make sure the battery is sitting flat, then reinsert the tray.
3. Depending on the age of your tree, the CR2025 battery may need replacing.

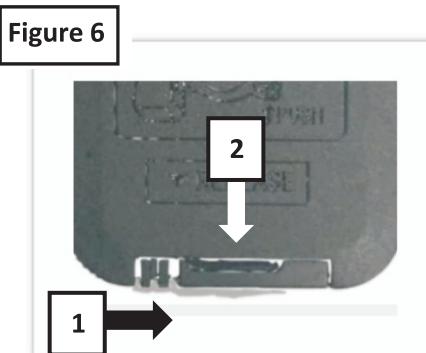

One row of lights is unlit.

1. Locate the specific row and search the circumference of the branch tips of the unlit section until you find a small black connector the size of a telephone plug. It should be connected to another small black plug that travels into the pole of the tree.
2. If only one small area within a section is unlit, this is likely partially or fully unplugged.

DISASSEMBLY & STORAGE

1. Remove the plug from the wall outlet. Wrap it up and tuck it into the lower branches of your tree.
2. Remove each section of your tree starting at the top and continuing to the bottom.
3. To remove a section, grab the center pole of your tree. In one fluid motion twist the pole and pull upwards.

4. If you have trouble lifting, try laying your tree flat on the ground and pulling the sections apart. This eliminates the vertical weight of the sections.
5. Loosen each eyebolt on the stand to remove section "A". You should now have all sections on the ground.
6. To fit each section in the box, hold any section upside down so the branches collapse and take up less space. Lay your sections in opposite directions inside your original box or storage container. If you need, your sections can take up even less space if you tie a rope around the waist of each folded up section.

IMPORTANT: Always store your tree in a cool, dry location protected from excessive exposure to heat or sunlight.

BATTERY USE AND DISPOSAL

1. For best results use a CR2025 Lithium Battery.
2. Install only new batteries in your product.
3. Failure to insert batteries in the correct polarity, as indicated in the battery compartment., may shorten the life of the batteries or cause the battery to leak.
4. Do not dispose of batteries in fire.
5. The CR2025 button battery is considered hazardous waste and should be disposed of properly at your local hazardous waste collection site for proper handling. Depending on your waste service provider you may be able to recycle your battery. Please check with your waste service provider, as well as your local and state guidelines.

-disclaimer below only applies to snow dusted/ flocked products-
FLOCKING OR GLITTER DISCLAIMER

Notice: Your pre-lit tree has been professionally flocked or glittered. Upon the tree sections being removed from its carton, you will notice an accumulation of flocking or glitter at the base of the carton. Do not be alarmed. This loose flocking or glitter material was accounted for and planned in the packing and manufacturing process of this tree. In no way has the appearance or the integrity of the tree's quality been compromised. During future Holiday seasons you can expect a light dusting of flocking or glitter to loosen from your tree during the packing and unpacking process. Extra flocking or glitter has been adhered to your tree to account for this minor annual loss. The overall beauty of your tree will not be diminished. Simply sweep or vacuum up the loose flocking or glitter upon the assembly completion. During the flocking or glitter process the light bulbs themselves have been flocked or glittered. This was purposely done for the overall lighting effect of the tree. PLEASE NOTE: Your flocked tree must NOT be stored in a plastic bag or bags as moisture and condensation may occur, causing for the discoloration of the flocking material. Your flocked or glittered tree must be stored in a cool and dry location protected from excessive exposure to moisture, heat or sunlight. We recommend wrapping your flocked tree in a breathable bag or sheet. With proper care and proper storage location, you will experience many years of enjoyment.

ATTENTION: This LED lighting device is designed for indoor use and decoration purposes only. Supervise children during assembly, installation and use. Use this LED light decide as indoor decoration only.

"WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could forth the users authority to operate the equipment."

"NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions because harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular situation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help."

Charm Christmas trees US LLC, 1155 Phoenixville pike suite 105 West Chester PA 19380, 1-833-386-0080

Made in China

Printed in China

This is not a toy, for decorative use only

This tree is for indoor use only.