



Warranty Information (continued):

Exclusions:

1. Damage resulting from accident, misuse, abuse, lack of reasonable care, subjecting the product to any but the specified electrical service, other than normal and ordinary use of the product, subjecting the product to abnormal working conditions or any other failure not resulting from defects in materials or workmanship.
2. Damage resulting from modification, tampering with or attempted repair by anyone other than the Company.
3. Transfer of product to someone other than the original consumer purchaser.
4. This warranty will not be effective unless and until the product is shown to have been used in accordance with the safety and installation instructions accompanying the product.
5. This warranty does not apply to any change in color on foliage.

Limitations of Implied Warranties and Exclusions of Certain Damages:

This constitutes Company's entire warranty and Company makes no other warranties, whether express or implied, with respect to the product. Company specifically disclaims any and all implied warranties, including, without limitation warranties of merchantability and fitness for a particular purpose. If company cannot lawfully disclaim implied warranties under this limited warranty, all such warranties, including warranties of merchantability and fitness for a particular purpose are limited in duration to the duration of this warranty.

Company is not responsible for direct, special, incidental or consequential damages resulting from any breach of warranty or condition or under any other legal theory. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Customer Service Center Hours: Monday-Friday: 8:00AM–5:00PM CST

Holiday Weekend Hours:

Holiday weekend after Thanksgiving:

- Friday - 10:00am to 4:00pm
- Saturday -10:00am to 3:00pm
- Sunday - 10:00am to 3:00pm

First weekend of December:

- Saturday - 10:00am to 3:00pm
- Sunday - 10:00am to 3:00pm



8.5' Color Prism Multi Function Christmas Tree Instructions

Included Parts:

- Pre-lighted Treetop (section D)
- Middle Upper Section of Pre-lighted Tree (section C)
- Middle Lower Section of Pre-lighted Tree (section B)
- Bottom Section of Pre-lighted Tree (section A)
- Collapsible Stand with 1 adjustable screw
- One pair protective gloves
- One remote

Caution –DO NOT PLUG ITEMS INTO THE OPEN STRAND SOCKETS. NO OTHER PRODUCTS SHOULD BE PLUGGED INTO THE TREE.

NOTE: If your tree includes flocking, it is recommended to adjust your tree with a sheet under it to help contain the flocking that comes loose. If your tree includes decorative embellishments, please note that some movement may have occurred during shipping but the beauty of the tree will not be diminished.

Setup Instructions:

Note: Wearing long sleeves and gloves (provided in box) is recommended to protect your arms and hands from branches.

Step 1: Position and Set-Up Tree Stand

- Place tree stand in desired location.
- Unfold tree stand until the legs are perpendicular.

Step 2: Insert the Bottom Section into the Tree Stand

- Remove plastic cap at the end of the metal pole.
- Set up stand and turn screw half way before placing Section A onto stand.
- Drop Section A into the tree stand.
- Let the hinged branches fall into place.
- Tighten screw on tree stand.

Step 3: Insert the Middle Lower Tree Section into the Bottom Tree Section

- Remove plastic cap at the end of the metal pole.
- Locate the open groove on the bottom section (marked with "A"). Use arrow stickers as a guide.
- Insert Section B into Section A, making sure that the notch slides into the groove. Arrows will be pointing to each other.



Setup Instructions (continued):

Step 4: Insert the Middle Upper Tree Section into the Middle Lower Tree Section

- Remove plastic cap at the end of the metal pole.
- Locate the notch, groove, and arrows as described in step 3.
- Insert the middle upper section into the middle lower section, middle upper section is marked with “C”). Line up the arrows as described above.

Step 5: Shape the Treetop and Insert into the Middle Upper Section

- Remove yellow cover on top of metal tip of tree before setting up.
- Adjust the tips and shape the treetop before inserting into the middle upper section.
- Locate the notch, groove, and arrows as described in step 3.
- Insert treetop into middle upper section (treetop is marked with “D”). Line up the arrows as described above.
- Plug the tree into an extension cord or wall outlet.

Remote Control Operation

Simply press a desired lighting function button on the remote (Fig 1), there are 81 individual lighting functions available.

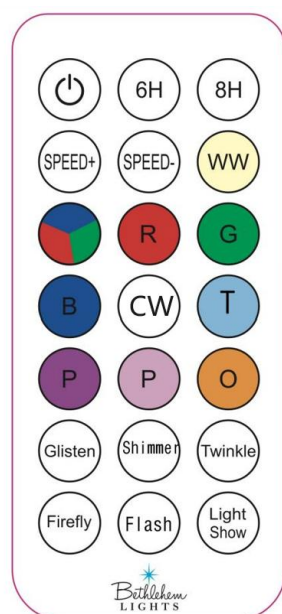


Fig 1



For Additional Information,

Call Toll-Free At

1-877-661-8324

Retain this document for future reference.

WARRANTY INFORMATION

This product is unconditionally backed by a limited warranty, subject to the exclusions below. Consumers requesting to exercise this warranty will be required to provide original proof of purchase. This will be needed or the warranty will be null and void.

If for any reason, after assembly, the tree does not light, please call our toll-free number 1-877-661-8324, and a qualified technician will assist you.

Bethlehem Lights® warrants this tree to the original purchaser against manufacture defects. A valid sales receipt must be retained as proof of purchase. The warranty of this pre-lit tree is void when the product is used for commercial purposes. Bethlehem Lights® will not be responsible for any shipping charges incurred if any part of a tree has to be sent in for repair.

Warranty on Lights:

For up to 5 years from date of purchase, Bethlehem Lights® will review and if deemed necessary, replace with available lights due to any manufacture defect found to the lighted portion of your tree.

Warranty on Tree:

For up to 5 years from date of purchase, Bethlehem Lights® will review, troubleshoot, repair and if deemed necessary replace with an available model due to any manufacture defect found to the tree. Replacement parts will be shipped out depending on the availability of the parts.

Note: This Christmas tree is a seasonal product. It is intended for indoor use only and for seasonal installation and use only (90 days max). Keep away from heat and moisture. Over time, flocked trees may change color. Do not wrap tree in plastic. Wrap in a light-colored sheet and store in a cool & dry environment.



Setup Instructions (continued):


Tree Storage:

- **Step 1:** Unplug power cord.
- **Step 2:** Remove decorations.
- **Step 3:** Lift each section directly up.
- **Step 4:** Separate the tree sections (starting at the top). Fold branches up to avoid crushing the tips. You can tie the branches up to make the sections easier to handle and set up in future years.
- **Step 5:** Unscrew tree stand to release the bottom section. Fold stand and tighten screw back into stand to prevent losing the screws.
- **Step 6:** Store in a cool, dry area.



Setup Instructions (continued):

Steady on:

- **WW:** Steady on warm white
-  : Steady on multi, can have 8 different multi by pressing the button
press the button once to get Red/Green/Blue/Yellow/Orange/Purple multi
press the button a second time to get Purple/Orange/Green multi
press the button a third time to get Red/Green/Warm white
press the button a fourth time to get Red/Blue/Warm white
press the button a fifth time to get Green/Warm white
press the button a sixth time to get Red/Warm white
press the button a seventh time to get Cool white/Warm white
press the button an eighth time to get Cool white/Purple/Teal
- **R:** Steady on Red
- **G:** Steady on Green
- **B:** Steady on Blue
- **CW:** Steady on Cool White
- **T:** Steady on Teal
- **P:** Steady on Purple
- **P:** Steady on Pink
- **O:** Steady on Orange

Glisten:

- **Warm White Glisten:** Press the button once to get warm white glisten
- **Red Glisten:** Press the button a second time to get red glisten
- **Green Glisten:** Press the button a third time to get green glisten
- **Blue Glisten:** Press the button a fourth time to get blue glisten
- **Cool White Glisten:** Press the button a fifth time to get cool white glisten
- **Teal Glisten:** Press the button a sixth time to get teal glisten
- **Purple Glisten:** Press the button a seventh time to get purple glisten
- **Pink Glisten:** Press the button an eighth time to get pink glisten
- **Orange Glisten:** Press the button a ninth time to get orange glisten
- **Multi Glisten:** Press the button a tenth time to get multi glisten



Setup Instructions (continued):

Shimmer:

- **Warm White Shimmer:** Press the button once to get warm white shimmer
- **Red Shimmer:** Press the button a second time to get red shimmer
- **Green Shimmer:** Press the button a third time to get green shimmer
- **Blue Shimmer:** Press the button a fourth time to get blue shimmer
- **Cool White Shimmer:** Press the button a fifth time to get cool white shimmer
- **Teal Shimmer:** Press the button a sixth time to get teal shimmer
- **Purple Shimmer:** Press the button a seventh time to get purple shimmer
- **Pink Shimmer:** Press the button an eighth time to get pink shimmer
- **Orange Shimmer:** Press the button a ninth time to get orange shimmer
- **Multi Shimmer:** Press the button a tenth time to get multi shimmer

Twinkle:

- **Warm White Twinkle:** Press the button once to get warm white twinkle
- **Red Twinkle:** Press the button a second time to get red twinkle
- **Green Twinkle:** Press the button a third time to get green twinkle
- **Blue Twinkle:** Press the button a fourth time to get blue twinkle
- **Cool White Twinkle:** Press the button a fifth time to get cool white twinkle
- **Teal Twinkle:** Press the button a sixth time to get teal twinkle
- **Purple Twinkle:** Press the button a seventh time to get purple twinkle
- **Pink Twinkle:** Press the button an eighth time to get pink twinkle
- **Orange Twinkle:** Press the button a ninth time to get orange twinkle
- **Multi Twinkle:** Press the button a tenth time to get multi twinkle



Setup Instructions (continued):

Trouble Shooting:

- If a branch or section will not light, check to be sure that all the cords are secured and firmly connected.





Setup Instructions (continued):

Firefly:

- **Warm White Firefly:** Press the button once to get warm white firefly
- **Red Firefly:** Press the button a second time to get red firefly
- **Green Firefly:** Press the button a third time to get green firefly
- **Blue Firefly:** Press the button a fourth time to get blue firefly
- **Cool White Firefly:** Press the button a fifth time to get cool white firefly
- **Teal Firefly:** Press the button a sixth time to get teal firefly
- **Purple Firefly:** Press the button a seventh time to get purple firefly
- **Pink Firefly:** Press the button an eighth time to get pink firefly
- **Orange Firefly:** Press the button a ninth time to get orange firefly
- **Multi Firefly:** Press the button a tenth time to get multi firefly
- **Red/Green/Warm White Firefly:** Press the button an eleventh time to get red/green/warm white firefly

Flash:

- **Warm White Flash:** Press the button once to get warm white flash
- **Red Flash:** Press the button a second time to get red flash
- **Green Flash:** Press the button a third time to get green flash
- **Blue Flash:** Press the button a fourth time to get blue flash
- **Teal Flash:** Press the button a fifth time to get teal flash
- **Purple Flash:** Press the button a sixth time to get purple flash
- **Pink Flash:** Press the button an seventh time to get pink flash
- **Orange Flash:** Press the button a eighth time to get orange flash
- **Multi Flash:** Press the button a ninth time to get multi flash
- **Red/Green/Warm White Flash:** Press the button an tenth time to get red/green/warm white flash
- **Teal/Cool White/Purple Flash:** Press the button a eleventh time to get teal/cool white/purple flash
- **Red/Blue/Warm White Flash:** Press the button a twelfth time to get red/blue/warm white/flash



Setup Instructions (continued):

Download the "Bethlehem" app!



1st: Scan the QR code to download the "Bethlehem" app onto your smartphone or tablet.

2nd: Now that the app is installed; scan the QR code again or input the Product ID: 010A to link the app to your tree - it is that easy!

NOTE: You need to enable *Bluetooth on your smartphone or tablet to use the Bethlehem app.

You can now control your tree's 81 lighting functions by either the remote control, smartphone or tablet.


Google Play



Apple store



Scan the QR code to download the remote app!

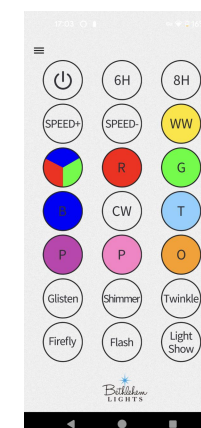



Setup Instructions (continued):

Light Show:

- **Light Show 1:** Press the button once to get light show 1
- **Light Show 2:** Press the button a second time to get light show 2
- **Light Show 3:** Press the button a third time to get light show 3
- **Light Show 4:** Press the button a fourth time to get light show 4
- **Light Show 5:** Press the button a fifth time to get light show 5
- **Light Show 6:** Press the button a sixth time to get light show 6
- **Light Show 7:** Press the button a seventh time to get light show 7
- **Light Show 8:** Press the button an eighth time to get light show 8
- **Light Show 9:** Press the button a ninth time to get light show 9
- **Light Show 10:** Press the button a tenth time to get light show 10
- **Light Show 11:** Press the button an eleventh time to get light show 11

SPEED +/-: When lights are initially on, the speed level is at regular speed. By pressing the (speed+) button, the speed level will increase (fast). By pressing the (speed-) button, the speed level will decrease (slow speed).

6H/8H: Press the button to 6H for 6 hour timer, 8H for 8 hour timer.

Controller Operation

You can also press the button on the controller (Fig 2) to go through each of the 81 functions.




Fig 2



Setup Instructions (continued):

Step 6: Make final adjustments to tree tips and decorate if desired

Please make sure to keep the instructions for reference when setting up your tree next year!

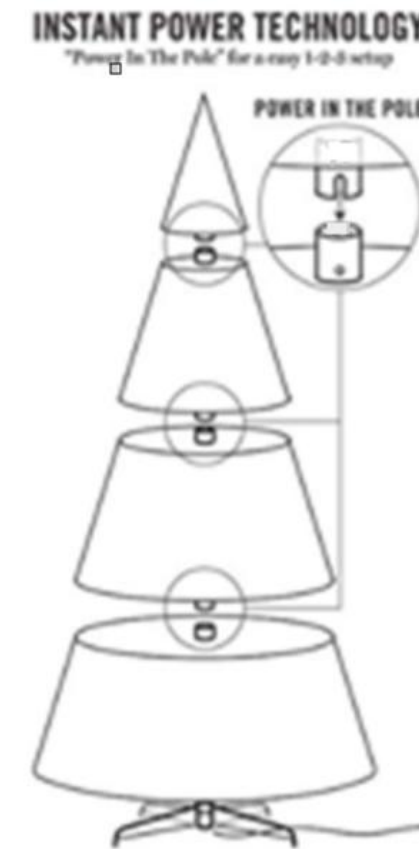

Safety First:

- Avoid touching electric carrying parts with sharp or heavy objects.

Care Instructions:

- Please note these are LED lights and they are not replaceable.
- When not in use store in a cool, dry location.
- Keep away from heat and moisture.
- If your tree has flocking, it may discolor over time.
- See warranty at the back of these instructions for additional information.