

S Hook

Assembly Instructions

1. Hanging your wind chimes from the S hook is very simple
2. Simply take the S hook out of the package and slip over the main chime cords
3. For best results, make sure that they are hung on a secure fixture



Caution!

1. Please make sure wind chimes are securely fastened to a solid foundation
2. Please keep away from children – children may become entangled which may cause serious injury

Magnetic Clapper

Instructions

1. The magnetic clapper essentially turns off your wind chimes
2. Simply slide the clapper up to the top and it will stick to the top of the frame
3. Clapper can be found in the middle of the wind chimes

