

ALL-TERRAIN FOLDING WAGON FABRIC REMOVAL INSTRUCTIONS



Tools Required (Not included)

Allen Key #H4



Wrench #10



Fabric can become soiled over time with use. For stubborn stains or extreme soiling, removal of fabric can make clean up easier.



CARE

Use a damp cloth to clean. Do not use chemicals. Do not machine wash.

WARNING! Not to be used as a children's ride wagon.


FABRIC REMOVAL INSTRUCTIONS

Step 1



The fabric of the wagon is secured at the front and back of the frame with hook and loop and snap fasteners. Release all to begin the fabric removal process.

Step 2

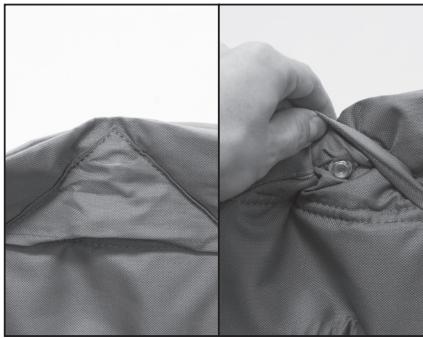

Locate the bolts on the sides of the wagon under the triangle shaped flaps.

Step 3



Using an H4 Allen Key and #10 wrench loosen and remove the nut on the inside of the wagon on both sides. Do not remove the bolt. It holds the frame together.

Step 4



Replace the washer and nut on the bolt to prevent loss.

Step 5



Release the hook and loop fastener loop securing the fabric to the frame under the wagon.

Step 6



The wagon fabric can now be removed from the frame by sliding it down the wagon handle.

TO PUT THE FABRIC BACK ON THE FRAME, REVERSE THE STEPS ABOVE.