


M49207: HEXAGON GAZEBO INSTRUCTIONS

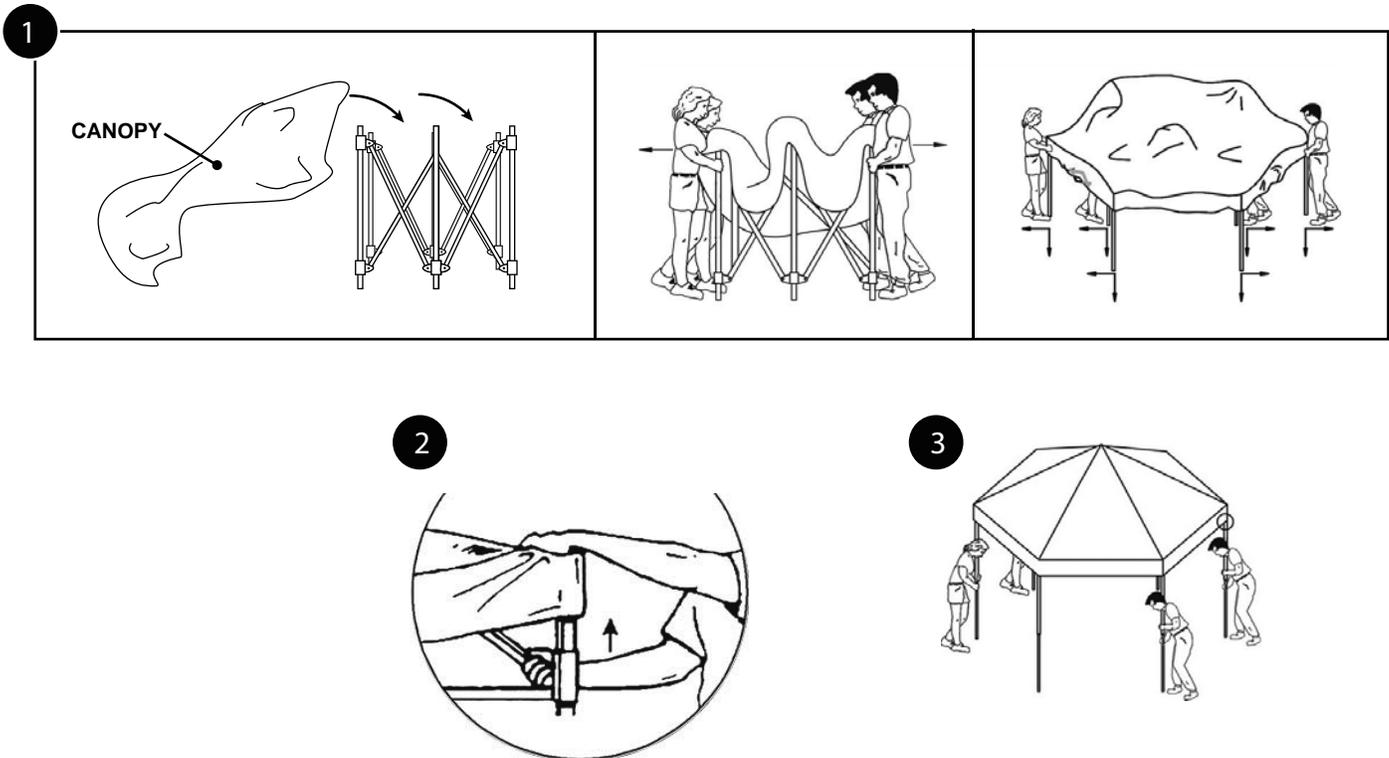

THE SETUP: OPEN GENTLY

Follow these instructions carefully to avoid pinching your hands or fingers in any of the moving parts as the frame opens and closes. **To erect the gazebo requires at least four people.**

1. Before opening the frame, layer the canopy over the top of the frame. Place gazebo in the center of the area to be sheltered. Remove the carry bag and stand the gazebo on its feet. With your partners, grasp the outer legs, slightly lift the frame off the ground and take a few steps backwards; stopping when the gazebo is fully extended. **Be careful not to pinch your fingers or to pull backwards too hard as this will result in the side supports bending.**
2. Lock and secure canopy frame. Engage the slider at each corner by pushing up with one hand while holding down the top of the leg with the other hand. A snap button will engage into the locating hole.
3. Place a foot on the foot plate on the bottom of the legs and lift up the leg. Slide the inner leg out until the snap button is engaged in the locating hole. Use the ropes attached to the ring at each corner of the roof cover and stakes to secure your gazebo to the ground (use the stakes through the hole in each of the legs to ensure the canopy will not blow away). Tie each of the ropes with the plastic ring on the corner and steel peg, then fix the peg onto the ground. Continue the same steps for each leg.


Once your gazebo is fully set up, attach the hook and loop fastener mosquito netting (see page 3 for instructions)

CAUTION


DO NOT LEAVE THE GAZEBO UP FOR EXTENDED PERIODS OF TIME. THIS ITEM IS NOT DESIGNED TO BE A PERMANENT FIXTURE

M49207: HEXAGON GAZEBO INSTRUCTIONS


4

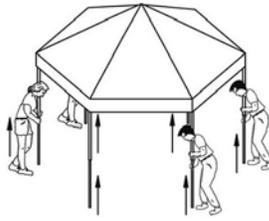


5

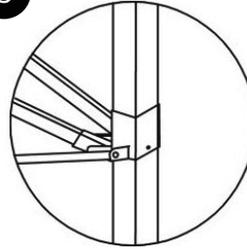

6

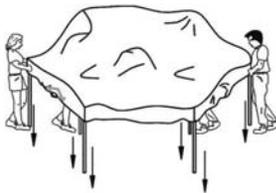

7

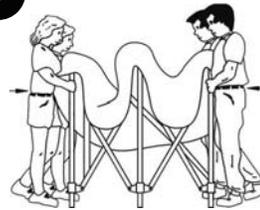

THE TAKE DOWN: CLOSE GENTLY



Follow these instructions carefully to avoid pinching your hands or fingers in any of the moving parts as the frame opens and closes. **To collapse the gazebo requires at least four people.**

4. Remove the hook and loop fastener mosquito netting then remove any leg stakes and rope. Lift up the outer legs slightly from the ground. Depress the snap button and push the telescopic inner legs into the outer legs.
5. Release the slider at each corner of the gazebo by using a slight upward pressure with one hand while depressing the snap button to release the slider with the other hand. Push the slider down past the snap button..
6. Grab the top of the diamond and slightly lift up. Shake the canopy a little.
7. Pull hands apart while stepping towards your partner until the unit is three quarters closed. Grasp the outer legs, slightly lift off the ground and push together until fully closed. Finally, having made sure the canopy material is completely dry, fold up the gazebo into it's storage bag.

CAUTION

1. Do not use in high winds.
2. Do not leave up for extended periods of time. This item is NOT designed to be a permanent fixture.
3. Do not leave out for continuous periods in direct sun or rain. The fabric will fade and/or deteriorate under extended exposure.
4. We will not be held responsible for damages due to foul weather.

M49207: HEXAGON GAZEBO INSTRUCTIONS

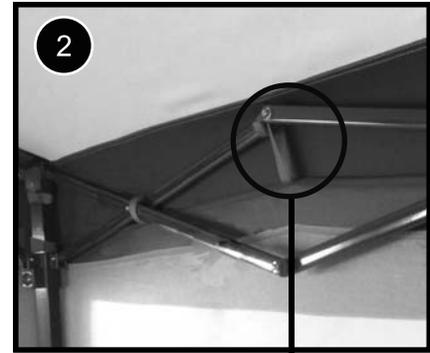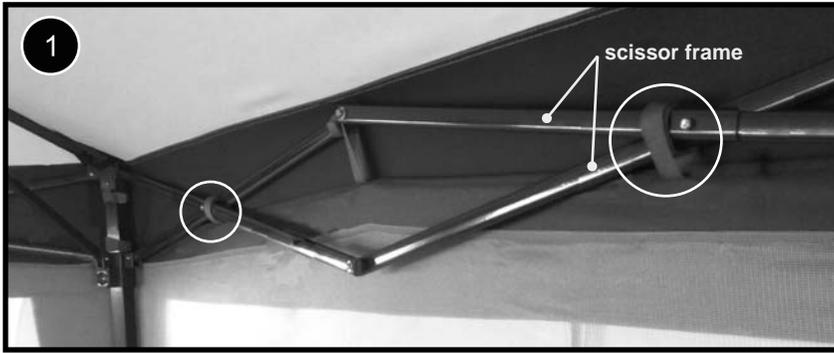

ATTACHING THE MOSQUITO NET:

1. Remove mosquito net from its packaging.
2. Unzip one side of the mosquito net.
3. For each side of the gazebo, connect the mosquito net using their attached hook and loop fastener to where the scissor frame intersects, as shown in IMAGE 1 . Do this until the mosquito net is connected to all sides of the gazebo.
4. Further secure the mosquito net by connecting their straps with the plastic hook ends to the top joint of the scissor frame, as referenced in IMAGE 2 .
5. To close netting, zip it up completely .

WARNING



KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. THIS TENT IS MADE WITH FABRIC THAT MEETS CPAI-84 SPECIFICATIONS FOR FLAME RESISTANCE. IT IS NOT FIRE PROOF. THE FABRIC WILL BURN IF LEFT IN CONTINUOUS CONTACT WITH ANY FLAME SOURCE.