



# GRAVITY FREE RECLINER INSTRUCTIONS





To unfold recliner, you may need to release the locking system. If you purchased a recliner with a canopy, the canopy should be snapped to the frame, on the back of the recliner. NOTE: Some models may not have a canopy and/or drink tray. Recliner pictured may differ from the model you purchased. The illustrations below are for reference only and your recliner may appear different than illustrated.

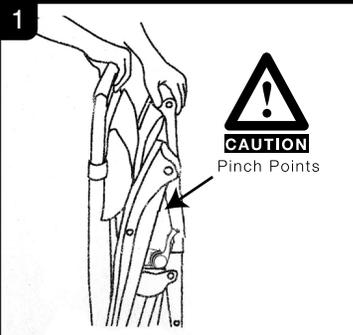




**!** Moving parts under armrest while reclining. do not put your hands under armrest while in motion.

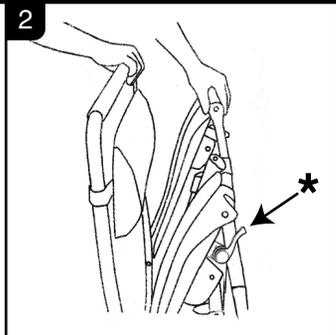

To release the locking system, lift lever on both sides of the recliner

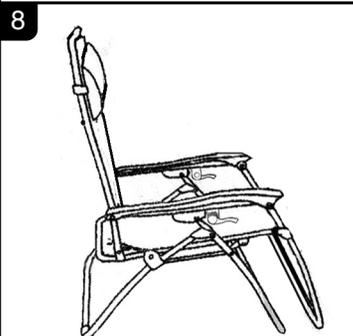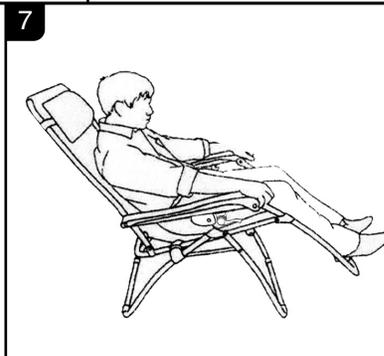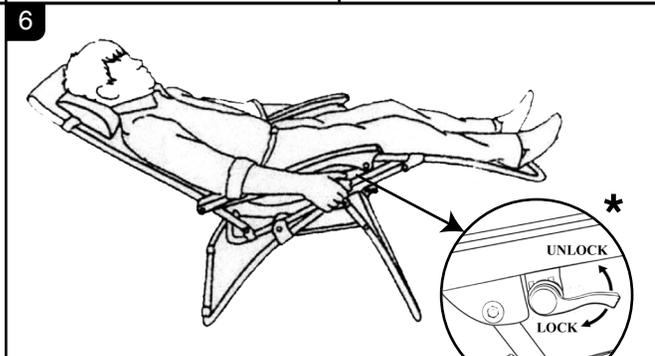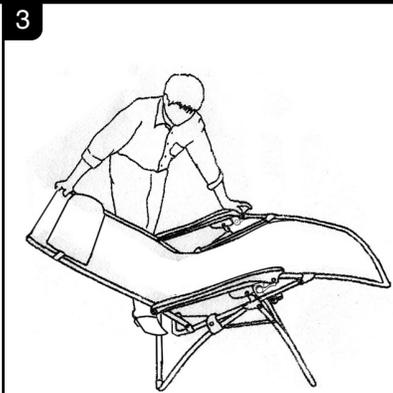

Before closing recliner, make sure the locks are unlocked.

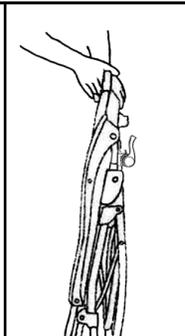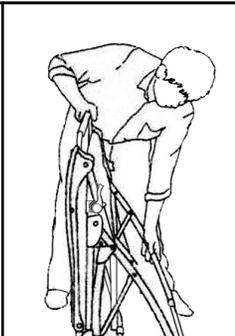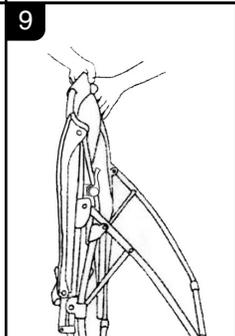

**!** **ATTENTION** **!**

Unlock the two locking mechanisms that are under the armrests before folding your recliner. If recliner is folded with out doing so, the locking mechanism will wear.

Make sure your recliner is completely unfolded before sitting in. Please be careful reclining while sitting in it. Body shape and weight will affect the way this recliner operates. Be careful and proceed with caution. To reduce the risk of injury, DO NOT play on, stand, or jump on the recliner. The recliner is intended for sitting and reclining only.


## TROUBLESHOOTING

How to adjust lock tension, if needed.


To adjust the lock tension, it is recommended to use a socket wrench with a drive socket size of 1/2 in (13mm) and a 1/4 in slotted screwdriver.



Remove the plastic caps covering each nut of the recliner lock using a 1/4" slotted screwdriver.

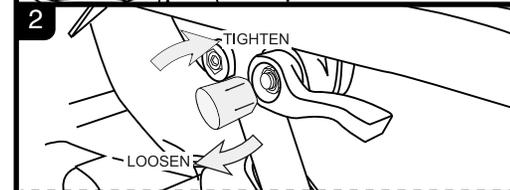

Use a socket wrench to tighten or loosen the recliner lock nut to the desired tension. Turn to right to tighten, left to loosen. The locks must be loose in order for the recliner to lock properly.

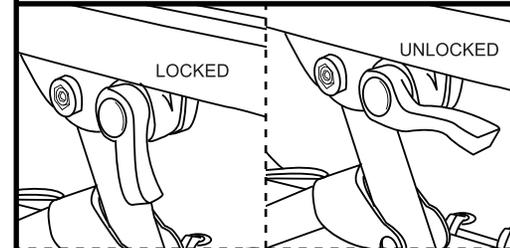

Once the desired tension of the lock nut is reached, pop the plastic caps back in to cover the nuts. To lock the recliner, move the lever down. To unlock the recliner, move the lever up.

IF YOU PURCHASED A GRAVITY FREE RECLINER WITH A PILLOW, SEE BELOW FOR INSTALLATION INSTRUCTIONS. PLEASE NOTE THAT THE RECLINER, AND/OR PILLOW PICTURED BELOW MAY DIFFER IN STYLE AND/OR COLOR FROM WHAT YOU HAVE PURCHASED.

## ATTACHING THE PILLOW

BUNGEE CORD SHOULD BE IN A PLASTIC BAG WITHIN THE PLASTIC BAG CONTAINING THE PILLOW



1 Thread bungee cord through eyelid of pillow.



2 Make sure canopy is unsnapped and brought to front of chair. Bring pillow around the front



3 Make sure the flat part of the pillow is resting above the snap holders and flat against the fabric of the chair. Thread other end of bungee cord through the pillow's eyelid.

