Garden Reflections 9' Umbrella with Cover

Assembly & Care Instructions

Item: M64847
Model: UMB-M64847
Taupe, Burnt Orange, Navy Blue,
Emerald, Brick Red, Dark Grey,
Plum, Sky Blue, Multi-Stripe

IMPORTANT : RETAIN FOR FUTURE REFERENCE READ CAREFULLY

For assistance with assembly or customer service, please contact:

Toll Free: 1-855-880-7205 (English is offered) 8am - 5pm, Monday through Friday, Eastern Standard Time

 
For outdoor domestic use only. Not for commercial use.

Designed in USA Made in China

Contents

Package Contents	. 2
Preparation	. 2
Set-Up and Operation	3-4
How To Change the Canopy	. 4
Care and Maintenance	. 4
Warnings and Cautions	. 5

Package Contents





В

Part	Description	Quantity
А	Umbrella Frame with Canopy	1
В	Bottom Pole	1
С	Finial	1
D	Removable Cover	1

Preparation


CAUTION: Do not use sharp tools to remove the protective material, as it may damage the product.

Before assembling make sure all parts are present. Compare parts with package contents list.


Estimated Assembly Time: 10 minutes

Tools required for Assembly: No tools required

Set-Up and Operation

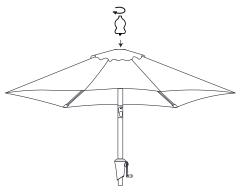

Step 1: Attach the finial on the umbrella top (if unattached) by screwing the finial onto the threaded screw-in adapter on the umbrella top. Twist until secure but do not over tighten.

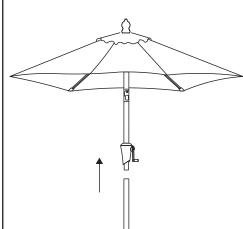


Step 2: Insert the bottom pole into the upper pole while pressing the snap button on the upper pole until the snap button locks into place.




Step 3: Turn the crank handle in clockwise direction to open the umbrella canopy, turn the crank in the opposite direction to close canopy.

To close the umbrella, it must be in the upright position.

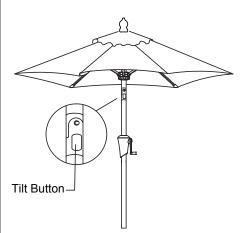

Step 4: Tilt the umbrella to the desired angle while pressing the tilt button to release the umbrella top. Release the button to maintain the desired angle.

Set-Up and Operation

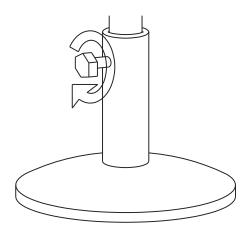

Step 5: We recommend that you stand and secure the umbrella to an umbrella base (not included).

How to Change the Canopy

- Step 1: Remove your umbrella from the table or stand.
- Step 2: Unscrew the finial from the top of the umbrella.
- Step 3: Take the canopy off each one of the ribs.
- Step 4: Replace new canopy back onto each one of the ribs.
- Step 5: Attach the finial to the top of the umbrella.
- Step 6: Place umbrella back into the table or stand.

Care and Maintenance

- Simply clean the umbrella canopy with soft brush and mild detergent.
- Do not machine wash or dry.
- Do not iron.
- AIR DRY the canopy thoroughly before storing for extended period of time.

Warnings and Cautions



WARNING: Keep children away from umbrella during assembly to avoid injury.



WARNING: To prevent damage to the canopy, open the umbrella facing the opposite direction that the wind is blowing.



WARNING: Do not use the umbrella during periods of high winds and rain as this may result in personal injury and/or damage.



WARNING: Always take the umbrella down when not in use.



CAUTION: If the crank becomes too hard to crank, check to see if the rope has come off the pulley. If you continue to turn the crank, the rope or crank handle could break.



CAUTION: Placement of the umbrella over or near a swimming pool can cause premature fading of the canopy. This is not covered under our warranty.



CAUTION: We recommend that you insert the umbrella into an umbrella base (not included) for securing the umbrella.

Customer Service Toll Free 1-855-880-7205

8am - 5pm Eastern Time, Monday through Friday