
$\prod_{n=1}^{\infty} \prod_{s=1}^{\infty}$ Self-Contained 4-in-1 Fountain Tower with Planter Bowl^{TT}

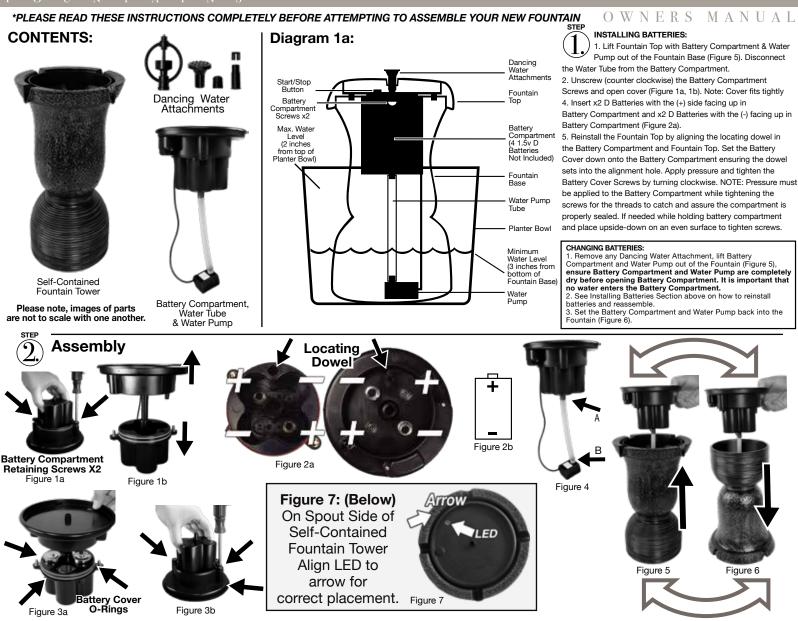

1. Take the Fountain Top/Battery Compartment and Water Pump, connect one side of the Water Tube to the Water Pump and the other end to the bottom side of the Battery Compartment (A & B of Figure 4).

Find a suitable bowl and place it on a flat, level surface. Place the Fountain Base, without the Fountain Top with Battery Compartment and Water Pump, into the center of the bowl.
Lower the Fountain Top with Battery Compartment and Water Pump into the Fountain Base.

you align the Fountain Top to the Fountain Base. Fit these into place and your Fountain Top and Base should be secure. Fountain Battery Compartment should be flush with fountain top (Figure 6). 4. Fill bowl with water, water level should be 4 inches from the bottom of the Fountain Base. (Diagram 1a).

Turn Fountain on and set timer: When the Fountain is off, set the run time from 1 to 4 hours by slowly pressing the button 1 to 4 times (Figure 7a & 7b). 3 seconds after pressing the button, the LED light will repeatedly flash the number of times the button was pressed (Figure 7a). This indicates the number of hours the Fountain will run every day. The Fountain will turn on at the same time, for the selected number of hours, daily thereafter.

Stop Fountain for one day: To stop the Fountain manually for one day, press the button once (Figure 7a & 7b). The Fountain will turn off for one day, but will still turn on at the same time, for the same number of hours selected, daily thereafter.

Reset/Change the timer: To change the run time, stop the Fountain if its running by press the button once (Figure 7a & 7b). The Fountain will stop. Once the Fountain is off, you can press the button again to set the duration (See Step 1). Fully shut off and clear timer: To fully turn off the Fountain so that it will not turn on automatically the next day, press the button once to turn it off (Figure 7a & 7b). When the Fountain is NOT operating, simply press hold the button again for over 2 seconds, the LED will come on for 3 seconds steady to confirm daily program is off.

DANCING WATER ATTACHMENTS: (OPTIONAL): To prevent overspray there are 3 Dancing Water Attachments designed for large bowls and 1 designed for small bowls please use accordingly. When Fountain is not running, select one of the Dancing Water Attachments and attach to the outlet in the middle of the Fountain Tower (Figure 8a, 8b & 8c).



Figure 7a

Figure 7b

Figure 8a

Figure 8b

Figure 8c

(4) Troubleshooting

PRIMING THE WATER PUMP

STEE

If you find the Water Pump is running, but water is not flowing from your Fountain, you can try priming the Water Pump:

Turn off Fountain, grab both sides of the Fountain and quickly shake your Fountain for ten seconds. This is to dislodge any air bubbles that may be caught in your Water Pump. Press the button to turn your Fountain on. Water should be flowing from the top of your Fountain. If water is not flowing, press and hold button for over 2 seconds again to turn your Fountain off, and repeat the step above.

WATER PUMP CONNECTION

If your Fountain Water Pump becomes disconnected from the Water Tube inside of the Fountain or if the Water Tube gets disconnected from the Battery Compartment, go to the Assembly Section to reconnect the Water Pump.

5. Care & Maintenance

CLEANING YOUR FOUNTAIN

In order to keep your Fountain in tip-top shape and for a prolonged life, it is best if your Fountain and the bowl or water container that the Fountain is placed in are cleaned periodically. To clean your fountain, drain of all water and disassemble. Use a mild soap and a soft cloth to clean the parts of your Fountain.

COLD STORAGE

Turn power off, remove from container, clean and dry the Fountain of all water. Remove the batteries for long term storage and bring it indoors. (Now is a great time to clean the pump to remove any debris that may have accumulated throughout the year).

CLEANING THE WATER PUMP'S PARTS

The impeller inside of the Water Pump is what pushes water up through your Fountain, allowing you to enjoy the soothing sounds and wonderful sights of your Fountain. After long periods of usage, this part will need to be cleaned to make sure your Fountain runs optimally. Step 1: Remove the front panel of the Water Pump by

grabbing the sides of the front panel and pulling it off the unit.

Step 2: Remove the impeller chamber cover. This is tightly fitted but will come off.

Step 3: Remove the impeller from its chamber.

Step 4: Rinse the impeller until all debris has been

removed.

Step 5: Re assemble in reverse order.


Troubleshooting Guide PROBLEM SOLUTION Indicator light not turning on: Check batteries are installed correctly: See Installing Batteries Section. Indicator light not turning on: Check that batteries are new & good condition: See Installing Batteries Section. Pump is on but no water flow: Check water level. Water Not Flowing Pump is on but no water flow: Check pump is free of debris, kinks or obstructions. See Care & Maint. Section. Pump is on but no water flow: Check tube is connected properly. See Installing Batteries Section. Indicator light on: Check that batteries are new and good condition. See Installing Batteries Section. Pump is on but low water flow: Check pump is free of debris, kinks or obstructions. See Care & Maint. Section. Low Water Flow Pump is on but low water flow: Check water level. Air in pump: See Priming The Water Pump Section. Loud sound and weak flow: Air in pump: See Priming The Water Pump Section. Loud Sound Loud sound and weak flow: Check pump is free of debris, kinks or obstructions. See Care & Maint. Section. Pump suddenly stops: Check pump is free of debris, kinks or obstructions. See Care & Maintenance Section. Suddenly Stops

Need Help? Call us for assistance at: +1 (619) 449-2392 or you can email us at: customercare@berninifountains.com Our Customer Care Department is available: Monday - Friday 8:30am to 4:00pm PST 11:30am - 7:00pm EST

OWNERS MANUAL



Sitep 2 Simply remove the Battery Compartment, Water Tube & Water Pump Assembly flip the Self-Contained Fountain Tower, set the Battery Compartment, Water Tube & Water Pump Assembly back into the Self-Contained Fountain Tower and you have a new look for your Self-Contained Fountain Tower, One Fountain two unique looks.

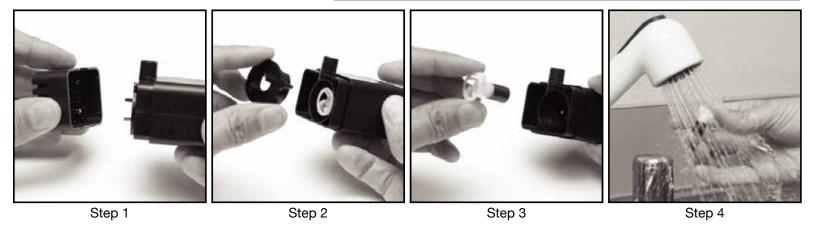

IMPORTANT BATTERY SAFETY INSTRUCTIONS:

WARNING: When using electric devices, basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury, including the following: WARNING: 1. Do not incinerate the battery even if it is severely damaged or is completely worn out. The battery can explode in a fire. Check with municipal codes in your area for possible special disposal instructions.

2. If liquid leaks from the battery cell, discontinue use immediately and dispose of properly.

3. Use only 4-1.5V D Cell Batteries.

4. Do not attempt to disassemble, remodel or destroy the batteries, as it may cause battery leakage, fire, or bursting; and could also create sulfuric acid spills from the battery resulting in possible burns to person and damage to the immediate environment.

5. Never dispose of batteries in the garbage. Disposal of batteries in the garbage is unlawful under state and federal environmental laws and regulations. Always take used batteries to your local battery-recycling center.

$\sum_{n} \sum_{s} Self-Contained 4-in-1$ Fountain Tower with Planter BowlTM

OWNERS MANUAL



Assembly Of Battery Compartment Housing and Battery Cover:

1. Place Battery Cover on Battery Compartment Housing. Turn over assembled Battery unit and place on a flat, level surface. Using a Phillips screwdriver (not included) first, tighten left screw down firmly.

2. After tightening the left screw, you will notice a small gap between the Battery Cover and the Battery Compartment Housing.

3. Using a Phillips screwdriver (not included) tighten the right screw down firmly.

4. After both screws have been tightened, you may notice a small gap between the Battery Cover and the Battery Compartment Housing.

5. Press down firmly on the bottom of the Battery Compartment Housing to help tighten the gap.

6. Using a Phillips screwdriver re-tighten the screws (left screw first, right screw second) to further tighten the gap between the Battery Cover and the Battery Housing Compartment.

LIMITED ONE YEAR WARRANTY


This warranty gives you specific legal rights and you may also have other rights which vary from state to state. This product has a one year limited warranty on all materials and workmanship. Bernini® warrants the original purchaser of this product that the product will be free from manufacturing defects in workmanship and material for a period of one (1) year from the date of original purchase. If within one (1) year this product fails due to defect in material or workmanship, Bernini® will repair, replace or supply any defective part at their discretion. The purchaser must contact Bernini® and provide a description of the defective part, including digital pictures if requested, with the original purchase documentation as validation of warranty coverage. This warranty does not cover or apply to: (a) damage to the product due to misuse, mishandling, or abuse, (b) products not used in accordance with instructions, (c) product not assembled or installed according to instructions, and (d) normal wear and tear. Call us for assistance at +1 (619) 449-2392 or you can email us at customercare@berninifountains.com or mail us at: 9545 Pathway Street, Santee, CA 92071, Our Customer Care Department is available: Monday - Friday 8:30am to 4:00pm PST / 11:30am - 7:00pm EST

Please read first before returning:

Please call us for assistance at 1-619-449-2392 or email us at customercare@berninifountains.com. Our Customer Care Department is available: Monday - Friday 8:30am to 4:00pm PST, 11:30am to 7:00pm EST. If you have any questions regarding assembly, parts, or operation, please visit our website at www.berninifountains.com. You will find instructional videos on how to assemble and operate your fountain and keeps you up to date on our newest products. This product comes with a one year limited warranty against materials and workmanship.

$\sum_{n=1}^{\infty}$ Self-Contained 4-in-1 Fountain Tower with Planter Bowl^m

OWNERS MANUAL

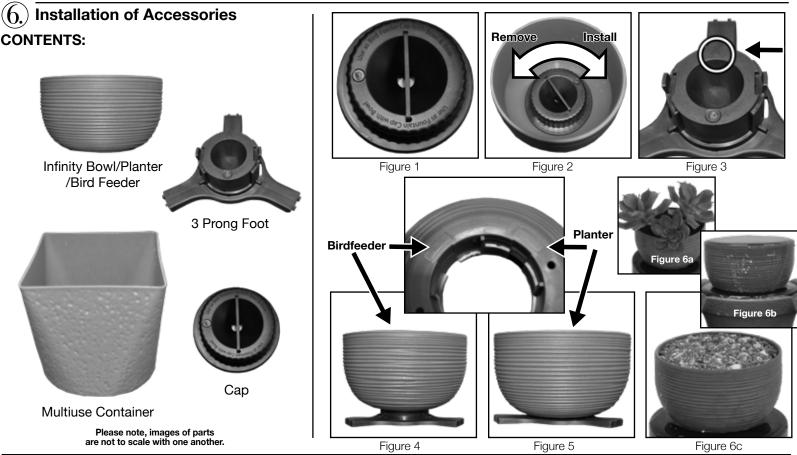

Infinty Bowl

To install the Bowl as an Infinity Pool, take the Bowl and the Cap, screw the Cap into the inside of the bowl turning clockwise (Figure 1, 2 & 6b). Do not overtighten. Place infinity Bowl on the fountain spout just as you would place one of the Dancing Waters Attachments. Push button to enjoy your fountain.

Planter

To install the Bowl as a Planter, take the Bowl and 3 Prong Foot, line up the arrows on the 3 Prong Foot to the "Planter" position located on the bottom of the bowl (Figure 5). Align the arrows and push firmly to lock in place. There are 2 small holes on the bottom of the planter that will allow water to be absorbed from the bottom of the bowl when fountain is running (Figure 6a, 7 & 8). Place the Bowl and Foot on top of the fountain. Be sure not cover the button or light on top of the fountain. Push on 3 Prongs Foot to secure. Once Planter is in place use your favorite soil (do not over pack) and plant your new addition to your family. Push button to enjoy your fountain.

How the Self-Watering System Works

Your self-watering garden fountain waters from the bottom up. Do not worry if you do not see the top soil becoming wet after the first day or two of use. The bottom layer of the soil will be watered every time you run the fountain. After approximately 3 days, the soil will reach its maximum water level. The water will steadily climb to just below the surface of the soil, while your fountain is on, the water level rises, watering your plant from bottom to top. (Figure 7).

When your fountain is off, the roots of your plant will be aerated to produce strong healthy roots. When the fountain is on, the water level will rise above the surface of the top planter bowl, saturating the soil (Figure 8). **Bird Feeder**

To install the bird feeder, take the Infinity bowl and 3 prong foot, line up the arrows on the 3 prong foot to the bird feeder position located on the bottom of the bowl (Figure 4 & 6c). Align the arrows and push firmly to lock in 3 prong foot. Place the bowl and foot on top of the fountain. Be sure not cover the button or light on top of the fountain. Push on 3 prongs foot to secure. Fill bowl with bird food, avoid over-filling to prevent bird seed from going in your fountain. Push button to enjoy your fountain.



Figure 7



Figure 8

Water Container

A multi-use water container has been included to use with your fountain (Figure 9). Once your fountain is fully assembled, place your fountain into the Water Container. To secure fountain, place the Fountain Tower into the Water Container and turn until the notches are aligned and the Fountain Tower is level and secure (Figure 10), press firmly. (Applies to both sides/styles of the Fountain Tower) Your Water Container is multifunctional, not only can it be used as your fountains water container; it can also be used as a spacer for a deeper container (Figure 11), a liner for a non-waterproof container or a container with a hole in the bottom, as a complementary planter or anyway you choose (Figure 12 & 13). To use your water bowl as a spacer, fill container with water, then submerge water bowl sideways until water bowl is completely submerged. Then turn the bowl upside down, (bowl will float to surface.) Take fully assembled Fountain Tower and place on top of spacer. Just as you would your favorite bowl, make sure your pump is fully submerged in water.



Figure 9



Figure 10









Figure 13