



Thank you for purchasing FlashPad™ 3.0, the innovative electronic light & touch game board for solo or group play. Please kindly take a few minutes to read the instruction manual to enjoy full features of FlashPad™ 3.0.

**WARNING:**  
CHOKING HAZARD - Small parts.  
Not for children under 3 yrs.

### GETTING STARTED:

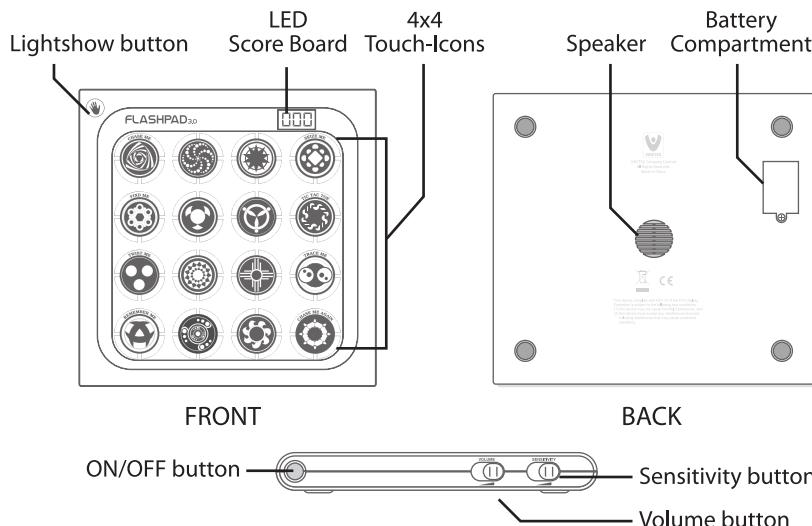

### BATTERY INSTALLATION:

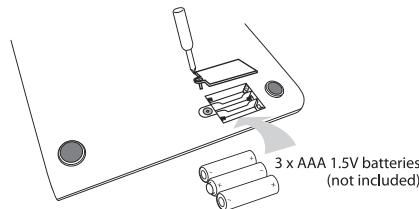


Adult supervision is recommended when replacing batteries.


- 1 Use a phillips screwdriver to unscrew the battery door.
- 2 Install three AAA 1.5V batteries (not included) in the battery compartment. Make sure to follow correctly the positive(+) and negative(-) polarities with the corresponding markings inside battery compartment.
- 3 Reinstall the battery door and tighten the screws.

### GAME SELECT MODE:

Push the ON/OFF button once to switch on FlashPad™ 3.0. 8 Touch-Icons will light up in RED and background music beat will be played. Now select one of the eight games (Chase Me/Find Me/Twist Me/Remember Me/Seize Me/ Tic Tac Toe/ Trace Me/ Chase Me Again) by touching the corresponding Touch-Icon.

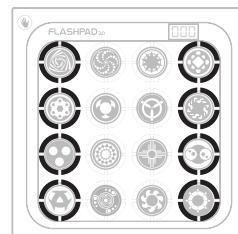


### SENSITIVITY SETTINGS :

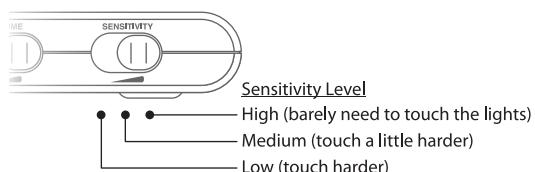

**Remarks:** Game will end automatically and go back to GAME SELECT mode if you change the sensitivity level.


### SCORE MEMORY RESET/ CHECKING THE HIGH SCORE :

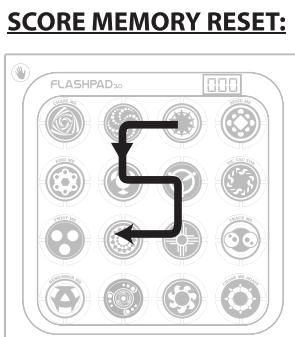

In GAME SELECT mode, to reset/delete all the high scores memory, draw a "S" in the centre 6 icons will clear score memory and reset all high score to zero. The 16 icons will flash 3 times with Red color and come back to GAME SELECT mode.

### CHECKING THE HIGH SCORE:

In GAME SELECT mode, press and hold the corresponding game icon for 3 seconds. Then you will hear: "High Score" with the score of corresponding game shown on the LED score board, and return to the GAME SELECT mode again.

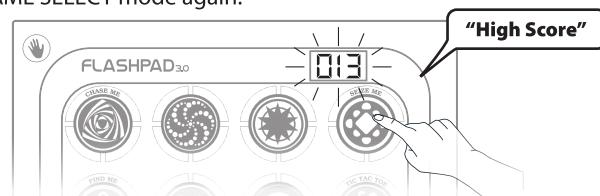

NOTE: There is no score record for "Tic Tac Toe" game.

### BATTERY SAFETY INFORMATION:

- Batteries should always be replaced by an adult. - Do not mix old and new batteries. - Do not mix alkaline, standard(Carbon-Zinc), or rechargeable(Nickel-Cadmium or Nickel Metal Hydride) batteries. - Non-rechargeable batteries are not to be recharged. - Rechargeable batteries are to be removed from the toy before being charged. - Rechargeable batteries are only to be charged under adult supervision. - Different types of batteries or new and used batteries are not to be mixed. - Only batteries of the same or equivalent type as recommended are to be used. - Batteries are to be inserted with the correct polarity. - Exhausted batteries are to be removed from the toy. - The supply terminals are not to be short-circuited. - Do not dispose of battery in fire. Battery may explode or leak as a result. - Remove batteries from the toy before prolonged storage. - Disposed of used batteries properly. - Batteries should be recycled or disposed of as per state and local guidelines. - Please retain this information for future reference.

### FCC/EMC REQUIREMENTS:

This device complies with part 15 of FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


Note : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


## GAME INSTRUCTION:

### Chase Me

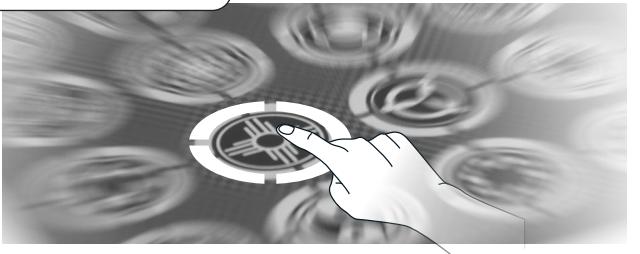


Touch all the light up RED icons within the 2 seconds time limit, skip the GREEN icons. As the game proceeds, the number of RED and GREEN icons in each stage will increase.

### Find Me

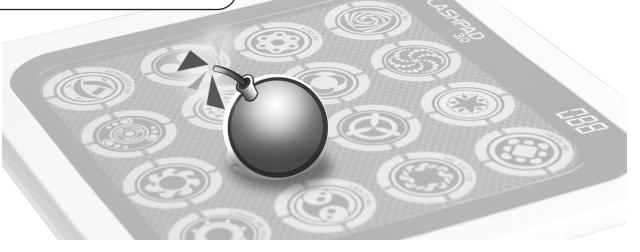


All the 16 icons on the game panel will light up and find the hidden bomb which is randomly assigned.

### Twist Me

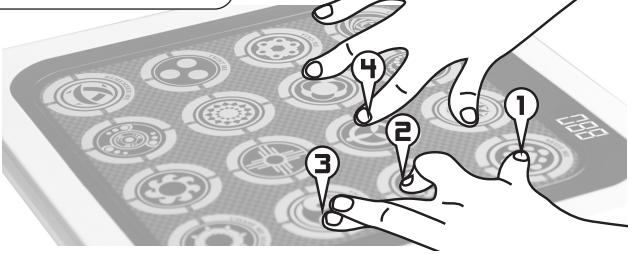

TOUCH AND HOLD THE YELLOW ICONS ONE BY ONE. As the game proceeds, the number of Yellow icons will increase.

### Seize Me

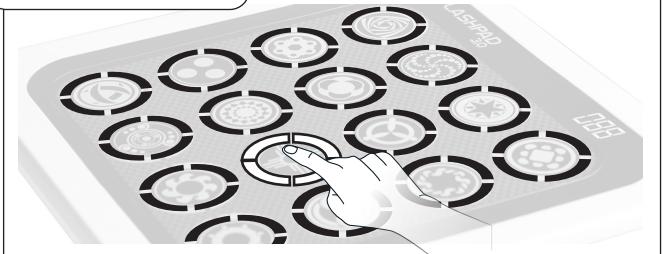


Touch the icons which is different from the pattern during the lightshow. The more different icons you can seize, the more scores you get!

### Tic Tac Toe



Play the classic 2 players game "Tic Tac Toe" (RED vs GREEN) on the area as shown above.

### Trace Me

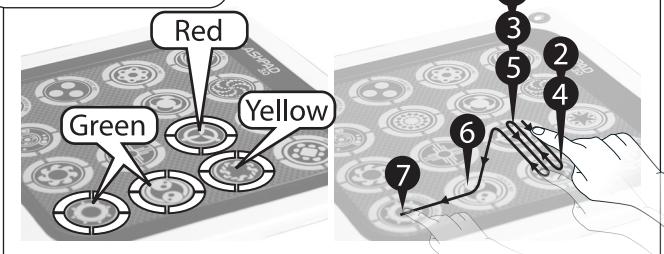


In each stage, to fade out all the lights by slide through the icons in all direction:

- Green Light: Pass 1 time.
- Yellow Light: Pass 2 times.
- Red Light: Pass 3 times



**Stage Select:** Select unlocked stages (total 50 stages)

### Chase Me Again

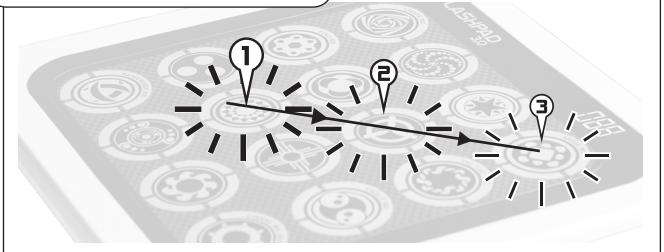

The icons will light up in sequence. The player then have to copy by slide through the icons.



ViRZTEX Company Ltd.  
1203, Energy Plaza, 92  
Granville Road,  
Tsimshatsui East,  
Kowloon,  
Hong Kong



Warning! Not suitable for children under 36 months. Small parts. Choking Hazard.



If at any time in the future you should need to dispose of this product please note that waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)

Product and colors may vary.  
Carefully read the provided instruction manual as it contains important information.  
Conform to product safety standard ASTM F963-08 and EN71 regulatory requirements.  
Please retain this information for future reference.  
Before use remove and dispose of any plastic bags and any other packaging and keep them out of reach of children.