

AH400/401 AH452 Wand Dis-assembly for Users



AH452 Wand



AH400/401 Wand

AH400 AH452 Handle Dis-assembly

First Step: Using screwdriver, press hard in on the latch and pull up on the plastic pole.

NOTE:

AH452: The slot of the wand will be located on **left** side, if you are standing behind the vacuum.

AH400/401: The slot of the wand will be located on **right** side, if you are standing behind the vacuum.



AH452 Wand



AH400/401 Wand