


FOR MORE HELP and HELPFUL VIDEOS, VISIT
OUR WEB SITE www.EasyEDGEsweeper.com

EMAIL EasyEDGEsweeper@gmail.com
CALL (774) 234-6722

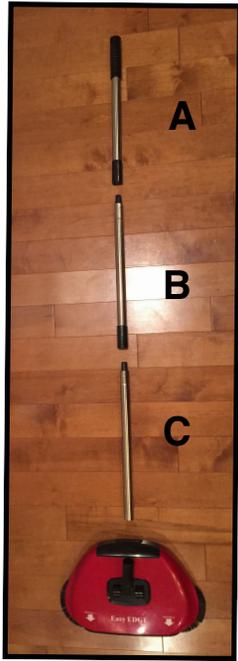

HOW TO ASSEMBLE THE HANDLE

Step 1 - Remove the body and 3 handle parts from carton.

Step 2 - Take handle PART A screw on to handle PART B.

Step 3 - Take handle PART B screw on to handle PART C.

HOW TO CONNECT HANDLE TO BODY

Take fully assembled handle and push into body of unit until tight.

Please Note: It does NOT screw into body, it pushes/slides into the unit.

HOW TO OPERATE THE EASY EDGE SWEEPER

Holding the handle firmly, push down slightly to drive the Easy EDGE FORWARD, using the arrows as a guide to pick up debris.

HOW TO EMPTY THE Easy EDGE



To empty debris, hold the Easy Edge over a garbage can, locate the disposal door in the back of the Easy Edge. Lift the door and empty the debris.



Important Tips

To keep your Easy Edge working smoothly, use included brush to clean the center (long) brush.

If sweeper becomes hard to move forward, this indicates that you must remove the round brushes and clean out trapped debris. You can rinse clean your EasyEDGE sweeper at any time.

Limited 6 Month Warranty

Subject to the EXCEPTIONS and EXCLUSIONS identified below, upon receipt of the product, we will repair or replace (with new or remanufactured components or products), at the manufacturer's option, free of charge from the date of purchase by the original purchaser, for six months, any defective or malfunctioning part. This warranty applies to product used for personal, and not commercial or rental service. This warranty does not apply to the brushes or routine maintenance components. Damage or malfunction caused by negligence, abuse, neglect, unauthorized repair, or any other use not in accordance with the User's Guide is not covered.