

Eko




HOVER
SCRUBBER™
OMNI

user guide

täko

WHAT YOU GET: PARTS FOR YOUR HOVER SCRUBBER™ OMNI

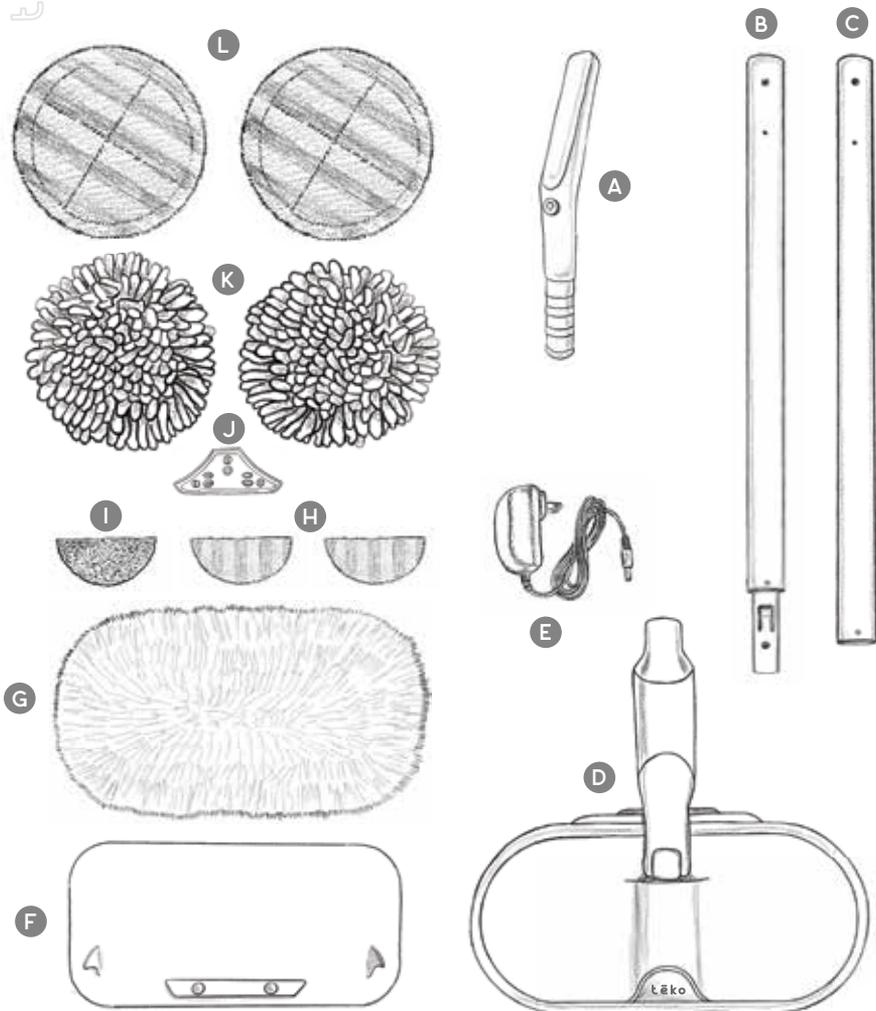

- A** Handle with on/off button
- B** Top aluminum pole
- C** Bottom aluminum pole
- D** Main body
- E** Charger
- F** Baseboard magnetic attachment


- G** Baseboard dusting cloth
- H** Power wedge microfiber pad (x2)
- I** Power wedge scrubbing pad
- J** Power wedge base
- K** Chenille pads (x2)
- L** Microfiber pads (x2)

Quick Start Guide:

Wahoo! Congratulations on your purchase of our best Hover Scrubber model ever!


Step 1

Assemble the unit by connecting the pieces based on the matching stickers: A to A, B to B and C to C. The metal pins on the handle & main unit will lock into the holes creating a "click" sound when locked into place. You may remove stickers once assembled.

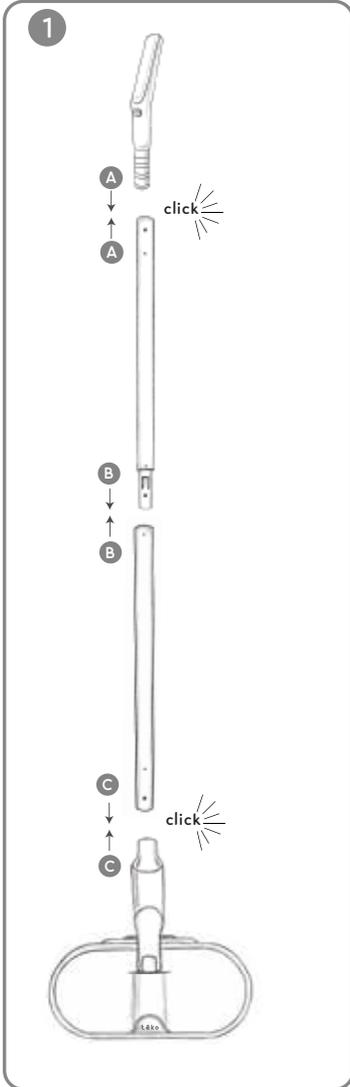


Step 2

Fully charge the unit prior to using. Plug the power adapter into an outlet, then plug into the charge port of the main unit-note: Pull the tab of the protective closure to access the charging port. The indicator light will show flashing red while charging and solid green when fully charged.

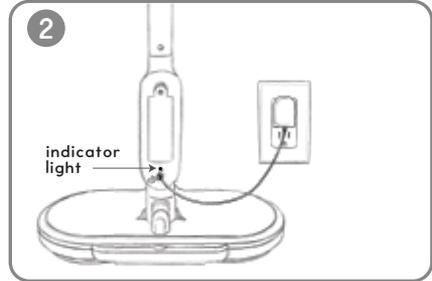


Step 3

Attach power wedge to base. Attach desired pads.

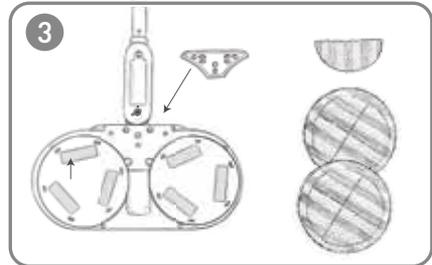


Step 4

Congratulations! Your Hover Scrubber Omni is ready to work!

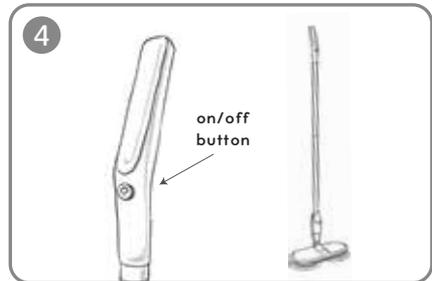


Assembly Guide: A detailed guide to assembly


Step 1 Assemble the main unit

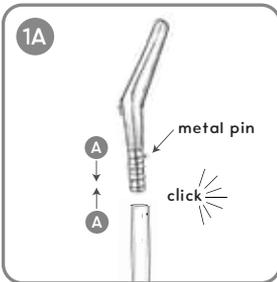

1A Connect handle and top aluminum pole by pressing in the metal pin on the handle and aligning it with the hole in the top aluminum pole. Labeled A to A.

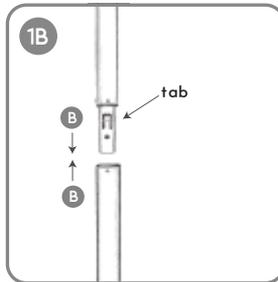

1B Connect the top aluminum pole and bottom aluminum pole. The poles are designed so the tab of the top aluminum pole locks into place with the bottom aluminum pole. Labeled B to B.

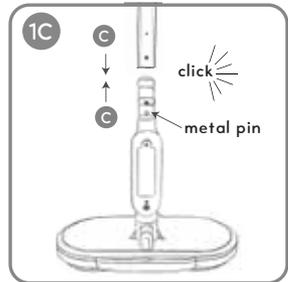

1C Connect the main body to the bottom aluminum pole by pressing in the metal pin on the main body and aligning it with the hole in the bottom aluminum pole. Labeled C to C.


Step 2 Charging the main unit-please fully charge before using



2A Now that your main unit is fully assembled, it's time to charge it. Pull the tab of the protective closure to access the charging port.






2B Plug the adapter into an outlet and the cable into the charging port on the unit. Please fully charge your unit prior to using. A full battery charge takes 4-5 hours.

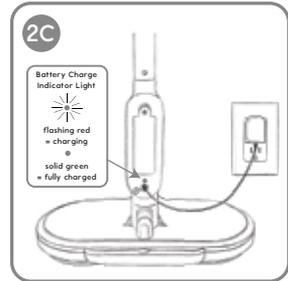

2C The battery charge indicator light shows the charging status. A flashing red light means the unit is still charging, solid green light means the unit is fully charged and ready to use.

Assembly Guide: A detailed guide to assembly

Step 3 Attachments

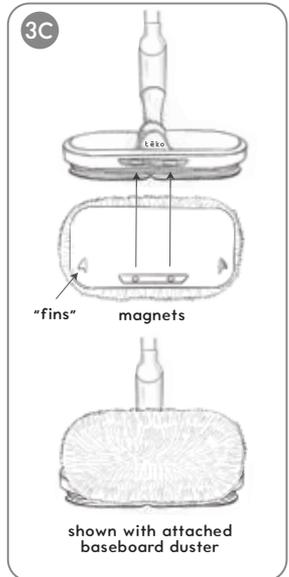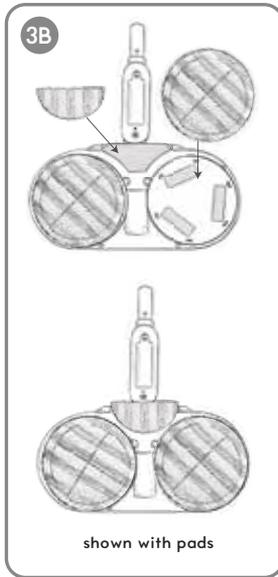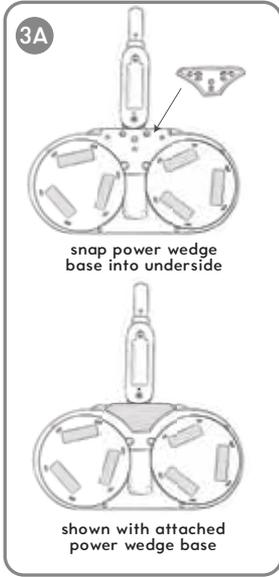


3A Power wedge base -attach the power wedge base to the underside of the main unit by snapping into place.

3B Attach desired pads to the underside of the main unit. Align and center the pads- securely attach to the hook and loop tape that is mounted on the main unit discs and power wedge.

3C To attach the baseboard duster, align the magnets to the front of the main unit-it will click into place. The "fins" on the baseboard attachment keep it securely positioned. Attach the baseboard pad to the hook and loop tape on the baseboard attachment.

Usage Guide: A detailed guide to usage


If using a water/cleaning solution Can also use dry

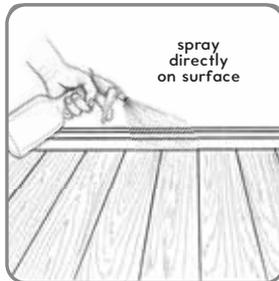


Usage Guide:

A detailed guide to usage

How to use cleaning pad styles

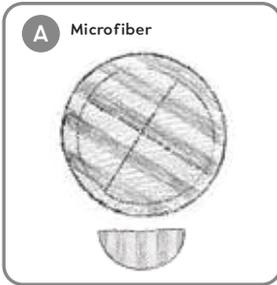


A Microfiber: A great all purpose cleaning pad. Super absorbent material, will not leave any residue or particles when wiping. Easily removes dirt, pet hair and dust. Use wet or dry.

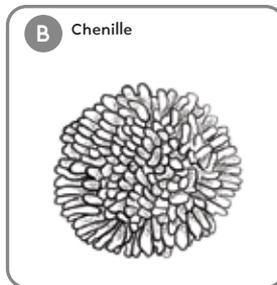

B Chenille: Thick chenille pad picks up dust and pet hair with ease. Super-soft chenille and microfiber fabric won't scratch up your hard surfaces. Use wet or dry.



C Scour Pad: Use for tough, stuck-on messes. Loosens debris for easy clean-up. Use wet.

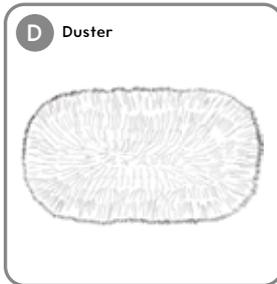

D Duster: Super soft and fluffy, great for picking up dust and debris from baseboards. Use dry.

Care Instructions:

Please machine wash pads at 40°C and tumble dry after each use.

Surfaces for the Hover Scrubber™ Omni

- Hardwood floors
- LVT floors
- LVF
- Tiles
- Linoleum
- Metal
- Stone
- Vinyl
- Concrete
- Painted Walls (except flat paint)
- Glass

Troubleshooting: Just in case...

1 The Hover Scrubber Omni rotates slowly or stops working.

The battery is low or drained and needs to be recharged.
Pressing down too hard-try decreasing pressure.
The safety circuit breaker tripped-simply turn the unit off, wait 30 seconds and turn the unit back on.

2 The Hover Scrubber Omni rotates unevenly.

The pads are not centered-turn the unit off and recenter the pads.

Troubleshooting: Just in case...

3 Unit will not turn on.

- Check the connection between the top aluminum pole & bottom aluminum pole to make sure they are fitted tightly together and there is no gap.
- Ensure there is a proper electrical connection by confirming that the handle is connected to the top pole and the main unit is connected to the bottom pole.

4 Disassembling the aluminum tubes.

- Please use a small metal tipped object (such as a paperclip) to push into the hole to release the lock mechanism.

IMPORTANT BATTERY SAFETY INSTRUCTIONS

WARNING: When using electric devices, basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury, including the following:

WARNING:

1. This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. YRD#: HI2105 This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Importer YRDLLC, Address:9545 Pathway Street, Santee, CA 92071 telephone number: 1+ (619) 449-2392

2. Rechargeable Lithium Ion batteries are potentially hazardous and can present a serious FIRE HAZARD if damaged, defective or improperly used. Failure to read, and follow Li-ion safety instructions and warnings may result in personal injury, fire, and property damages if the battery is charged and/or used improperly. DO NOT SHORT CIRCUIT. Short circuits may cause fire, and injury!
3. If liquid leaks from the battery cell, discontinue use immediately and dispose of properly.
4. Do not charge battery in rain or in wet location.
5. Use only the included battery.
6. Battery Type is: Li-ion Battery 7.4v 2000mAh..
7. Do not attempt to disassemble, remodel or destroy the battery, as it may cause battery leakage, fire, or bursting, and could also create sulfuric acid spills from the battery resulting in possible burns to person and damage to the immediate environment.
8. Charge battery using the specified charger and under the charging conditions as specified. Charging the battery under any other conditions may cause the battery to overheat, emit hydrogen gas, leak, ignite or burst.
9. When charging the battery always do so in a well ventilated area and where you can observe the charging process.
10. Never dispose of batteries in the garbage. Disposal of batteries in the garbage is unlawful under state and federal environmental laws and regulations. Always take used batteries to your local battery-recycling center.

PLEASE READ FIRST BEFORE RETURNING

Please call us for assistance at 1+ (619) 449-2392
or email us at customercare@tekoclean.com

Our Customer Care Department is available:

Monday - Friday 8:30am to 4:00pm PST, 11:30am to 7:00pm EST

If you have any questions regarding assembly, parts, or operation, please visit our website at www.tekoclean.com. You will find instructional videos on how to assemble and operate your HoverScrubber™ Omni, and keeps you up to date on our newest products. You can also email us with any questions you have.

This product comes with a one year limited warranty against materials and workmanship.

Please review the list of accessories included with your Hover Scrubber™Omni on page 2. Please note, images of parts are not to scale with one another.

LIMITED ONE YEAR WARRANTY

This product has a one year limited warranty on all materials and workmanship. Hover Scrubber™Omni warrants the original purchaser of this product that the product will be free from manufacturing defects in workmanship and material for a period of one (1) year from the date of original purchase. If within one (1) year this product fails due to defect in material or workmanship, Teko will repair, replace or supply any defective part at their option. The purchaser must contact Teko and provide a description of the defective part, including digital pictures if requested, with this original purchase documentation as validation of warranty coverage. This warranty gives you specific legal rights and you may also have other rights which varies from state to state.

This warranty does not cover or apply to: (a) damage to the product due to misuse, mishandling, and abuse, (b) products not used in accordance with instructions, (c) product not assembled or installed according to instructions, and (d) normal wear and tear.

Call us for assistance at 1+ (619) 449-2392 or you can email us at:
customercare@tekoclean.com

Our Customer Care Department is available:

Monday - Friday 8:30am to 4:00pm PST / 11:30am - 7:00pm EST



Scan this QR code for the latest
version of these instructions

Santee, California 92071

Email: customercare@tekoclean.com

On the web: www.tekoclean.com

Facebook & Pinterest: [tekoclean](https://www.facebook.com/tekoclean)

Instagram: [@tekoclean](https://www.instagram.com/tekoclean) Twitter: [@yrdllc](https://twitter.com/yrdllc)

© Yeiser Research & Development, LLC, 2023. All rights reserved.

Made in China

001343 HSO G5 V1a us