 


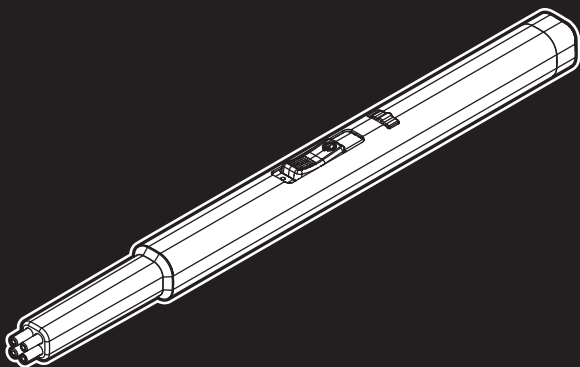

HALO[®]

USER MANUAL FOR
RECHARGEABLE
LIGHTER WAND+ (3-PACK)



SAFETY INSTRUCTIONS

FOR ALL QUESTIONS RELATED TO SAFETY, WARRANTY
OR EXCHANGE REQUESTS, PLEASE CONTACT US.

1-800-255-6061

YOUR SAFETY IS IMPORTANT TO US.

Please read instructions carefully and utilize the proper precautions before operating this equipment. Save instructions for future reference.

- When used correctly, lithium-ion rechargeable batteries provide a safe and dependable source of portable power. However, if they are misused or abused, this may result in leakage, burns, fire, or explosion, causing personal injury or damage to other devices.
- Misusing or incorrectly connecting your Rechargeable Lighter Wand+ may cause electric shock to users and damage equipment.
- Keep your Rechargeable Lighter Wand+ dry and away from moisture, water, and corrosive materials.
- Do not expose your Rechargeable Lighter Wand+ to moisture, water, rain, or snow.
- Keep your Rechargeable Lighter Wand+ away from heat sources, including open flames, radiators, stoves, ovens, and any other devices that produce heat.
- Do not expose to fire or excessive temperature. Do not expose to heat above 212°F (100°C) or incinerate.
- In the unlikely event of leakage or explosion use sand or a chemical fire extinguisher.
- Do not disassemble your Rechargeable Lighter Wand+. There are no user-serviceable parts inside. Incorrect reassembly may result in shock or fire hazard.
- Do not drop or subject to strong impacts. Do not operate your plasma lighter wand if it has received a sharp blow, or has otherwise been damaged in any way.
- Do not puncture, crush, or subject to mechanical shock.
- Keep away from children and pets. The Rechargeable Lighter Wand+ is not a toy.
- Make sure the Rechargeable Lighter Wand+'s charging ports do not become contaminated with lint or other debris. Use a canned-air type of product periodically to ensure that the port openings are clear.
- Do not touch the plasma prongs while igniting the lighter.

PRODUCT MAINTENANCE



IF THE RECHARGEABLE LIGHTER WAND+ OVERHEATS, BECOMES SWOLLEN, OR IS DEFORMED IN ANY WAY, IMMEDIATELY STOP USING THE PRODUCT AND CONTACT CUSTOMER SERVICE.

EQUIPMENT CLEANING:

- Please make sure that the device is disconnected from all input power and output devices.
- Wipe with a clean, dry cloth.
- Do not use corrosive cleaners or solvents.
- Do not insert metal objects into the ports to clean them as this could cause electrical shock. Blow any debris out with a canned-air type of product.

DISPOSAL/RECYCLING:

Do not put the device and its accessories in the trash can. Items must be properly handled in accordance with local laws and regulations. For additional information, please see www.epa.gov.



 
WARNING
Cancer and Reproductive Harm
www.P65Warnings.ca.gov



**CONFORMS TO
UL1642**


PRODUCT OVERVIEW

CHARGE YOUR RECHARGEABLE LIGHTER WAND+

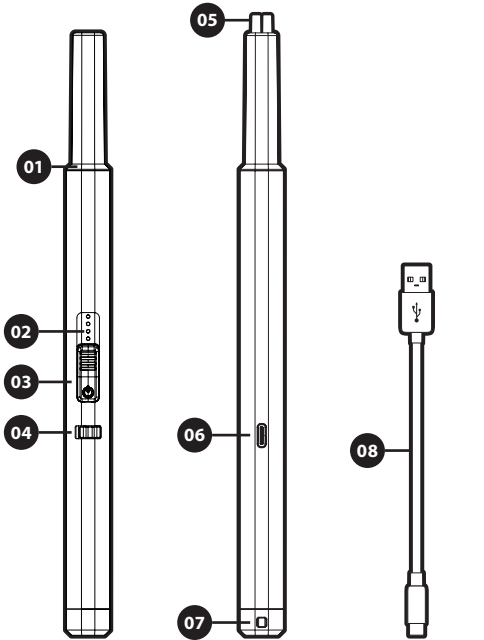

- 1 LED Light Ring
- 2 LED Battery Level Indicator
- 3 ON/OFF Power Slider
- 4 Lock Switch
- 5 Dual Arc Plasma Prongs
- 6 USB-C Charging Port
- 7 Lanyard Hole
- 8 USB-A to USB-C Cable

 Fully charge the Rechargeable Lighter Wand+ before use. To charge, connect the Rechargeable Lighter Wand+ to the included USB-C cable. The unit can be recharged from any USB powered port, like a wall adapter, car adapter, laptop and more. The Rechargeable Lighter Wand+ should be fully charged in approximately one hour (5-100%).

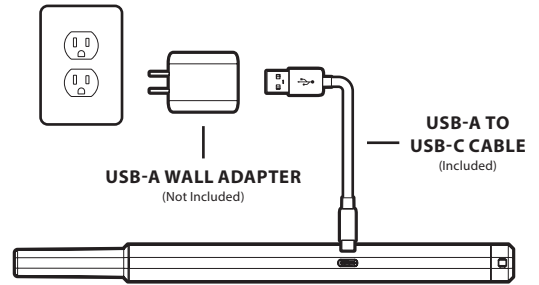

LED BLUE INDICATOR

The blue LED indicator is located near the Power Slider. When product is in use, indicators will light to indicate battery level. When charging, the indicator will flash to indicate the current charge level. When fully charged, all four indicators will be on solid.

BATTERY LEVEL (In-Use)

- 100%
- 75%
- 50%
- 25%

WHEN CHARGING



FULLY CHARGED



USE YOUR RECHARGEABLE LIGHTER WAND+



**IMPROPER USE OF THIS PRODUCT COULD
RESULT IN MINOR OR MODERATE INJURY.**

NOTE: To preserve battery life and prevent unintentional activation, the unit will power off automatically if the power button is pressed and held for more than 30s.

 
NOTE: The Rechargeable Lighter Wand+ arc will shut off after 10s of continuous ignition.



STEP 1: UNLOCK
Slide the lock switch
to the left to unlock the
power slider.


3

USE YOUR RECHARGEABLE LIGHTER WAND+

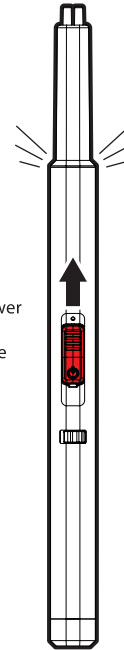

STEP 2: IGNITE

 Press and hold the power
button. While holding
the power button, slide
the slider forward.

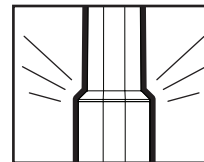

LED LIGHT RING

The light turns on automatically
when the unit power is on. To use
the light without igniting the arc,
press and hold the power button
without sliding the slider forward.

4

Scan the QR code below to register your product.
For product information and videos, visit WWW.HALOPOWER.COM.



**PRODUCT
REGISTRATION**

ACTIVATE YOUR WARRANTY TODAY

Your HALO Rechargeable Lighter Wand+ has a 90 day warranty from the date of purchase. By registering your warranty, you will help protect your investment and save a record of your purchase with our customer service team.

Ignitions Per Charge	100
Battery Specifications	Lithium Ion, 260mAh, 3.7V, 0.962Wh
External Power Input	USB-C 5VDC input @ 1.0A (max)
Recharge Time	Approximately 1 Hour
Operating Temperature	Charge: 32°-113°F (0°-45°C) Discharge: 23°-104°F (-5°-40°C)
Storage Temperature	-4°-140°F (-20°-60°C)
Dimensions	6.5 x 0.66 x 0.79 in. (230 x 16.7 x 20mm)
Weight	2.63oz (0.075kg)

FCC NOTE

COMPLIANCE WITH FCC REGULATION

This device complies with part 15 of the FCC Rules and RSS-Gen of IC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced technician for help.
- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAUTION: To comply with the limits of the Class B digital device, pursuant to Part 15 of the FCC Rules, this device must be used with certified peripherals and shielded cables. All peripherals must be shielded and grounded. Operation with non-certified peripherals or non-shielded cables may result in interference to radio or reception.

NOTE: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

ALLIANCE CONSUMER GROUP

700 Henrietta Creek Rd, Roanoke, Texas 76262

Toll-Free: 800.255.6061

www.acgbrands.com



HALO®

WWW.HALOPOWER.COM