


START THE COZYPOD
PRESS the  ON button.




TURN OFF COZYPOD
LONG PRESS the  ON button.



CHANGING FAHRENHEIT TO CELCIUS
LONG PRESS the Fahrenheit icon to switch back and forth to Celcius. The CozyPod will remember your setting.

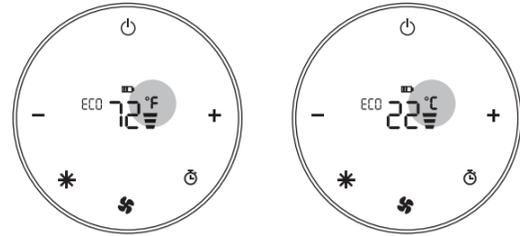

TIMER FUNCTION
a. SHORT PRESS the timer icon  to start.
b. Choose 1 - 12 hours on the timer.
c. LONG PRESS the icon to shut the timer off.

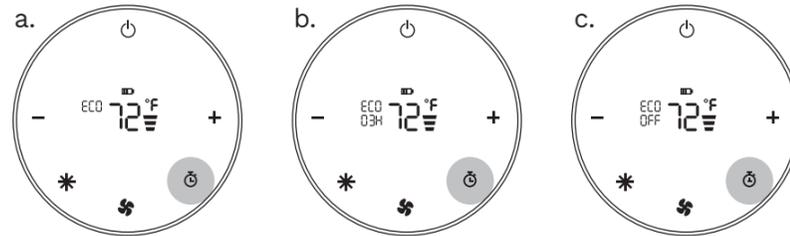

LIGHTING CONTROL
SHORT PRESS the lighting icon  to toggle between the lighting brightness.




TWO HEATING MODES

HEAT BLAST MODE
PRESS the  fan icon to set the heat level. There are 3 different heating powers shown by the number, and bars.



ECO MODE
a. LONG PRESS the  fan icon to enter Eco mode
b. PRESS - and + buttons to choose the desired temperature.
c. PRESS the  fan icon to adjust the power

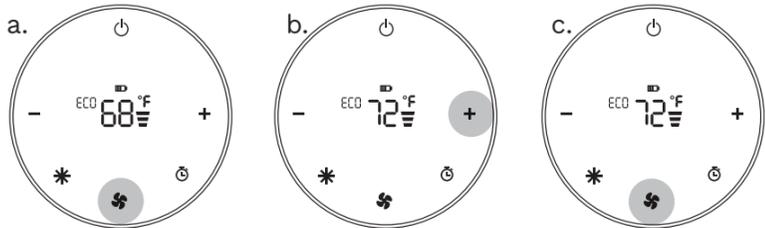


When turning on CozyPod, it will display the room temperature. Eco Mode means that the CozyPod will automatically turn off when the desired room temperature is reached. When the temperature falls two degrees below the set temperature, the CozyPod will turn back on until the desired temperature is reached.

TROUBLESHOOTING

PROBLEM	SOLUTION
The remote isn't turning on	<ul style="list-style-type: none"> Make sure the main power unit is turned on to start the flow of electricity. With CozyPod plugged in, return the remote to the charging dock.
The heater turned off automatically	<ul style="list-style-type: none"> Check the Eco Mode settings. If your room temperature is higher than the set temperature, CozyPod will turn off to preserve energy. The unit has a 24 hour safety setting to not be kept on continuously more than a full day.
ERROR MESSAGES	
HH	OVERHEAT PROTECTION The unit is too hot and needs to cool down before being turned on again.
E1	OPEN CIRCUIT The unit has a faulty circuit and should not be used. Contact our support team.
E2	SHORT CIRCUIT The unit has a short circuit and should not be used. Contact our support team.

MUST READ BEFORE USE
SAVE THESE INSTRUCTIONS

VENTY
COZYPOD

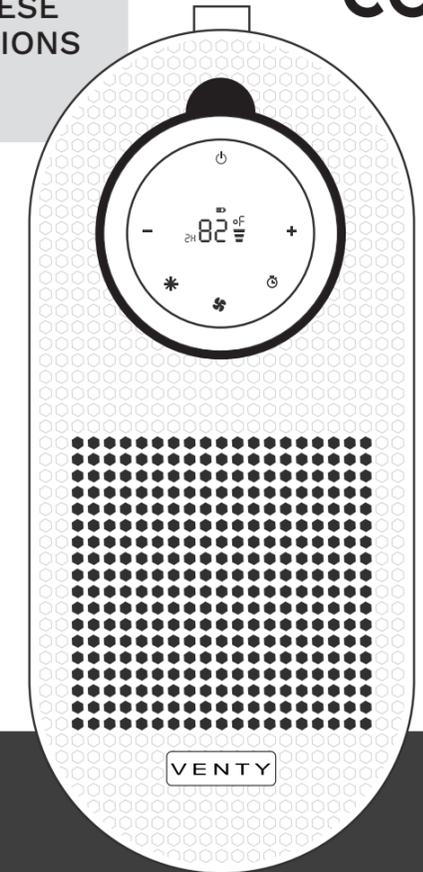

COZYPOD
USER MANUAL

**MUST
READ
BEFORE
USE**

**IMPORTANT INSTRUCTIONS
SAVE THESE INSTRUCTIONS**

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following: Read all instructions before using this heater.

- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Use the top silicone piece when moving this heater.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or those in need of assistance, especially whenever the heater is left operating and unattended.
- Always unplug this heater from power when not in use.
- Do not operate any heater with a damaged plug or after the heater malfunctions, has been dropped or damaged in any manner. Discard heater, or return to a Venty service facility for examination and/or repair.
- Do not use this heater outdoors.
- This heater is not intended to use in bathrooms, laundry areas, and any similar humid indoor environment. Never locate the heater where it may fall into a bathtub or other water containers.
- Always plug this heater directly into a wall outlet/receptacle. Never use it with an extension cord or relocatable power tap (outlet/power strip). Plug the heater directly into a 120V – 240V outlet. Faulty wall outlet connections may cause the wall outlet to overheat. Be sure that the heater plugs tightly into the outlet before using.
- To disconnect the heater, turn controls off then remove the CozyPod from the outlet.
- Do not insert any objects into the ventilation or exhaust openings as this may cause electric shock or damage the heater.

CARE AND MAINTENANCE

Turn off the heater and unplug it from power when not in use. Use only a soft cloth to wipe the outer surfaces gently. Do not use any cleaning agents or detergents. Never immerse the heater in water. Be careful not to get the heating element and switches wet. To achieve the best performance, we suggest cleaning the heater at least once during the operating season or before storing it when it will not be in use for a long period. Maintenance For storage, you may leave the heater covered to protect it from dust. Store it in a cool, dry location and remove the power plug so that it does not bend while not in use.



Note that CozyPod is meant for smaller rooms, bedrooms, and offices. If placed in a large open space, Eco Mode may not reach your desired temperature but will blow heat constantly.

TECH SPECS

PRODUCT NAME	Venty CozyPod
MAX POWER	500W / 4.2A
INPUT VOLTAGE	100V-240 50/60Hz
HEATING METHOD	PTC
SOUND	30-36db
PRODUCT WEIGHT	1.5lbs
REMOTE BATTERY	3.7V 400mh
SIZE	23.1cm x 10cm x 5.6cm


ventyfan.com | support@ventyfan.com

UNDERSTANDING YOUR COZYPod

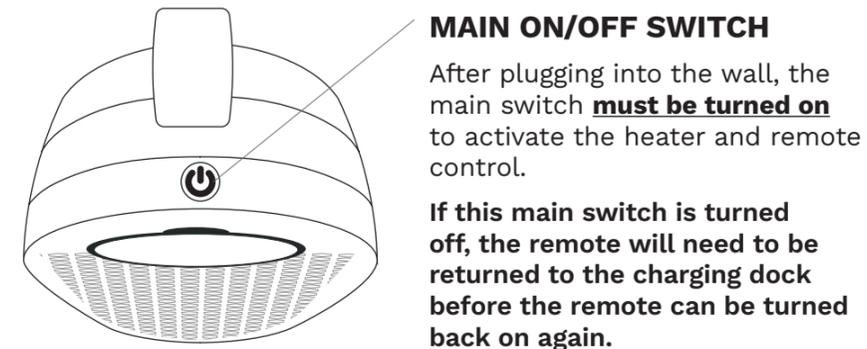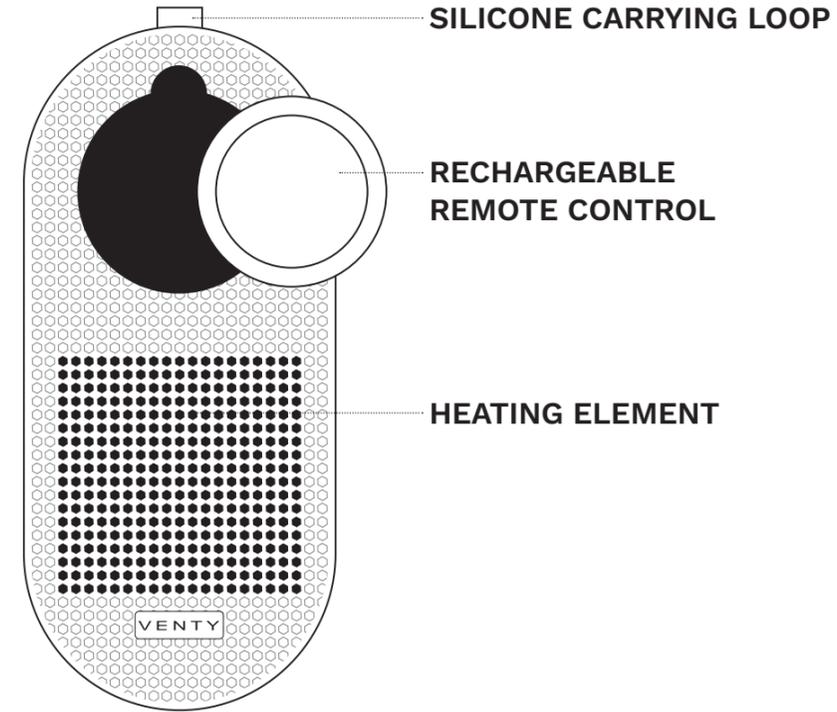


MAIN ON/OFF SWITCH
After plugging into the wall, the main switch **must be turned on** to activate the heater and remote control.
If this main switch is turned off, the remote will need to be returned to the charging dock before the remote can be turned back on again.

HOW TO INSTALL AND REMOVE THE SOCKET HEAD

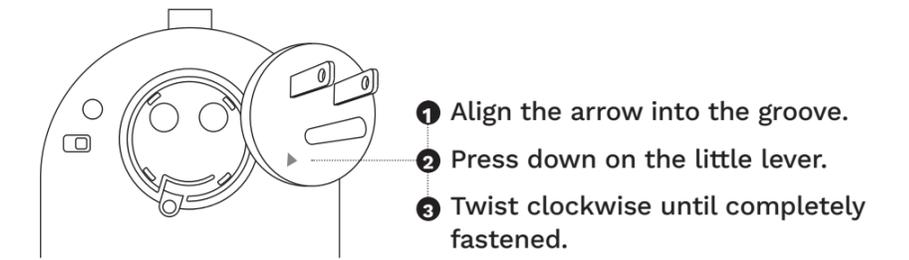

UNDERSTANDING YOUR WIRELESS CHARGING REMOTE

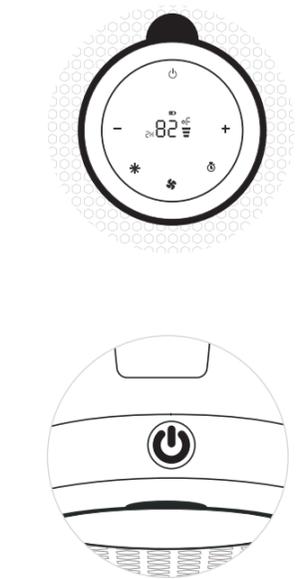

CHARGING YOUR REMOTE
The CozyPod features a patented wireless charging remote. It is the only heater with a self charging remote. While the remote is within the CozyPod, it will automatically charge when CozyPod is plugged into a socket. The CozyPod remote will show how much battery is left in the remote both by the battery bar, as well as a charging icon that will show the battery level once placed back into the magnetic pod.
MUST BE POWERED ON
The CozyPod **MUST** be powered on for the remote to work. If this button is turned off, the remote must be returned to the charging dock before being powered on again.