

LIMITLESS™

Airi™ Voice Controlled Fan

User Manual



WAIVER & RELEASE

By using the Limitless Airi™ Voice Controlled Fan, you hereby agree that Limitless Innovations, Inc., an Illinois corporation and its affiliates (“Limitless”) shall have no liability for any losses associated with property damage, personal injury or loss of life that are incurred by you or by any third party in connection with or relating in any manner whatsoever to your use of the Limitless Airi™ Voice Controlled Fan. By using the Limitless Airi™ Voice Controlled Fan, you hereby agree at all times to comply fully with all safety warnings, operating instructions and general safety information in this user manual. By using the Limitless Airi™ Voice Controlled Fan, you further agree to hold harmless Limitless, (and Limitless’ officers, directors, shareholders and employees) in connection with any losses sustained by you (including, without limitation, losses arising in whole or in part from property damage, personal injury or loss of life) relating in any manner whatsoever to your use of the Limitless Airi™ Voice Controlled Fan.

WARNINGS

- Do **NOT** touch the blades while the Airi™ Voice Controlled Fan is running.
- The Airi™ Voice Controlled Fan is **NOT** a toy and should be kept away from children.
- Do **NOT** use the Airi™ Voice Controlled Fan near an electric field.
- Do **NOT** use the Airi™ Voice Controlled Fan in direct sunlight or extreme heat for extended periods of time.
- Do **NOT** use the Airi™ Voice Controlled Fan if it has been damaged and/or modified.
- Do **NOT** subject the Airi™ Voice Controlled Fan to harsh chemicals.
- Do **NOT** submerge the Airi™ Voice Controlled Fan or its accessories in water.
- Do **NOT** insert any foreign objects into openings of the Airi™ Voice Controlled Fan.
- Do **NOT** store the Airi™ Voice Controlled Fan in high humidity conditions.
- Do **NOT** paint or apply coatings to the Airi™ Voice Controlled Fan as you might affect moving parts or damage internal components.
- Do **NOT** use the Airi™ Voice Controlled Fan near a water source such as a pool, bathtub, or shower.
- This product must be used upright on a level surface. Do **NOT** place it at an angle or upside down.
- Do **NOT** bend or pull the power cord to avoid damaging it.
- Do **NOT** force the rotation of the machine head to avoid damaging the rotating head mechanism.
- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do **NOT** dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Only use **3V CR2032** Batteries for the Remote.
- Non-rechargeable batteries are **NOT** to be recharged.

⚠️ WARNINGS cont'

- Do **NOT** force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do **NOT** mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

⚠️ WARNINGS

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in **as little as 2 hours**.
- **KEEP** new and used batteries **OUT OF REACH of CHILDREN**.
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.




WHAT'S INCLUDED

- (1) Airi™ Voice Controlled Fan
- (1) Remote with 3V CR-2025 Battery Installed (**NOTE:** Battery is replaceable)

COMPONENTS

1. Fan
2. Tilt Adjustment
3. Control Panel
4. Touch Controls
5. Digital Display
6. Speaker/Microphone
7. Assembly Knob
8. Adjustable Pole
9. Height-Adjustment Knob
10. Weighted Base
11. Washer
12. Base Screw

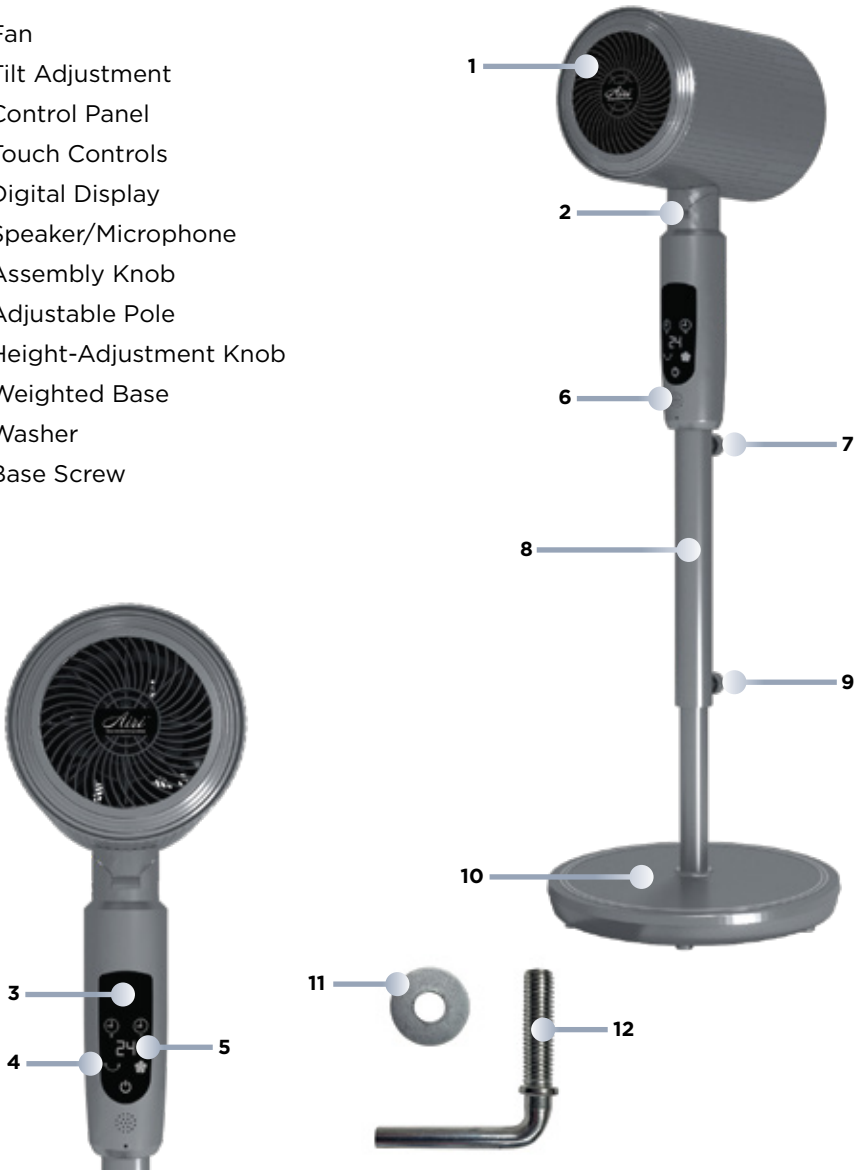

TECHNICAL SPECIFICATIONS

Model Number:	LIM-VCF-XXX
AC Input:	110V 50-60Hz 0.5A
AC Power Cord:	60" Long
Control Type:	Voice Activation Prompts / Control Panel / Remote
Operating Language:	English
Oscillation:	60°
Tilt Adjustment:	Up / Down
Adjustable Wind Speed:	3x Modes - Low Medium High
Adjustable Height:	34.6" (Shortest) and 42.5" (Tallest) Length
Weight:	8.8 lbs

ASSEMBLY INSTRUCTIONS

Prepare the Adjustable Pole

Remove the base screw and washer from the Adjustable Pole. Loosen the Height-Adjustment Knob, but do **NOT** remove it.

Note: Loosening this knob allows the inner pole to move freely.

Extend the Inner Pole

Gently pull the inner pole out approximately 3 inches, then re-tighten the Height-Adjustment Knob to hold it in place.

Do **NOT** over-tighten.

Attach the Weighted Base


Insert the exposed end of the inner pole into the top opening of the Weighted Base.

Carefully turn the unit over. Reinsert and tighten the base screw and washer (clockwise) to secure the Adjustable Pole to the Weighted Base. Tighten until secure, but do **NOT** over-tighten.

Attach the Fan Unit

Loosen the Assembly Knob on the Adjustable Pole.

Do **NOT** remove it. Align the small notch (divot) on the Fan unit with the Assembly Knob, then gently insert the Fan unit into the top of the Adjustable Pole. Re-tighten the Assembly Knob to hold the Fan unit in place. Tighten until secure, but do **NOT** over-tighten. **Note:** Turn the Assembly Knob clockwise to tighten.

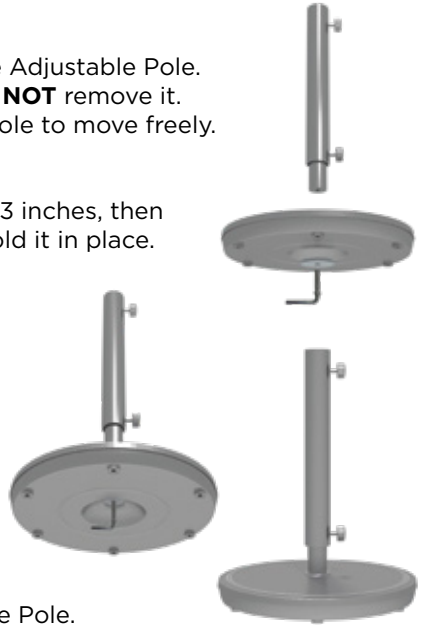

OPERATING INSTRUCTIONS

Using the Touch Controls or Remote Control

Adjusting the Tilt:

Manually push the head of the Fan to the desired angle (up or down).

Turning the Fan On/Off:

Press the On/Off Button  on the Control Panel or the Remote.

Wind Speed:

Press the Fan Button  to cycle through speeds: F3 - High | F2 - Medium | F1 - Low

Oscillation:


Press the Oscillation Button  to enable left-right oscillation.
Press again to stop.

Timer:


Use the Timer +  and Timer -  buttons to set the timer in 1-hour increments, up to 24 hours.

Display Auto-Shut Off:

If no Touch Controls or Buttons are pressed for 5 minutes, the LED Display turns off. Press any Control/Button to wake it.

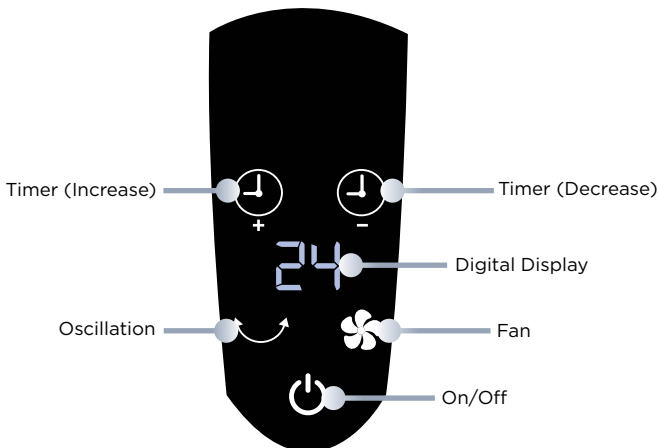

Control Panel (Fan)

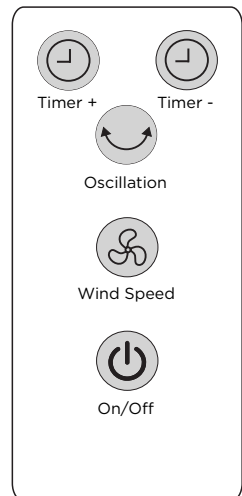

Remote Control

REPLACING THE REMOTE BATTERY

1. Locate the Battery Tray & Release Latch:

Turn the Remote over. At the top edge, you'll see the Battery compartment along with a small latch lever on the left-hand side.

2. Squeeze the Latch to Unlock the Tray:

Use your thumb to press the latch inward (toward the tray). This releases the Battery tray so it can slide out.

3. Pull Out the Battery Tray:

While holding the latch squeezed, use your other hand to grip the edge of the tray and pull it straight outward. The thin Battery tray will slide out from the top.

4. Replace the Battery:


Lift the Battery out of the tray if it needs replacement. Place a new Battery into the tray with the positive (+) side facing up, matching the orientation shown.

5. Slide the Tray Back In:

Align the tray with the top opening and push it straight back in until it clicks securely under the latch.

6. Test the Remote:

Press any button to confirm the Fan responds normally.

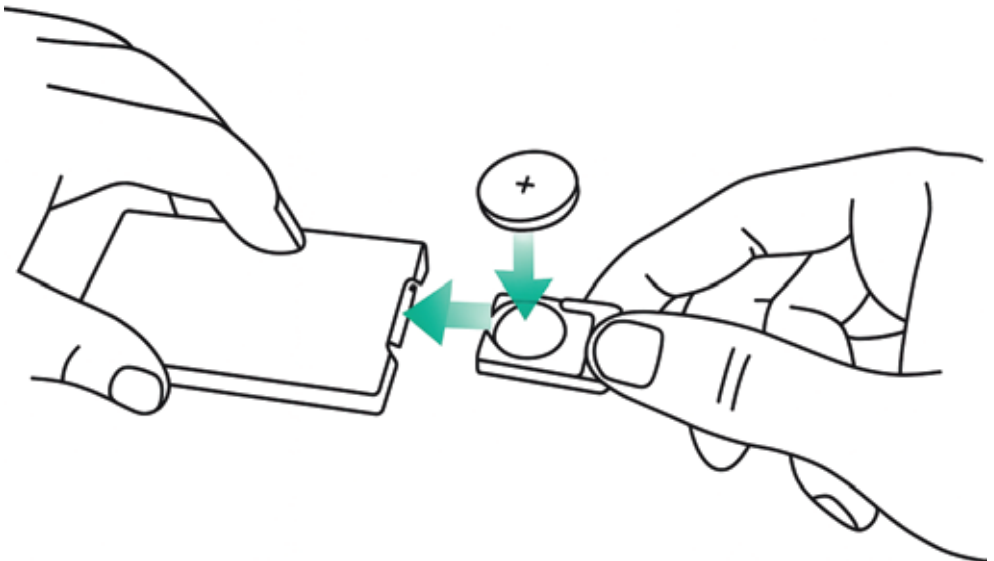

VOICE COMMANDS

PROMPT

RESPONSE / ACTION

Plugging the Fan in

Welcome to the Limitless Voice-Activated Smart Fan. Please wake me up by saying "Hello Airi™"

Hello Airi™

Lets chill

Entering Sleep Mode

I'm going to drift off now

Increase Volume

Volume Increased

Decrease Volume

Volume Decreased

Set Volume to Maximum

Volume set to Maximum

Mute Sound

Volume set to Minimum

Turn Fan On

Ready to initiate wind protocol

Turn Fan Off

Air flow sequence completed

Set Wind Speed to Low

The winds whisper... low

Set Wind Speed to Medium

Not too soft, not too wild - the Goldilocks of breezes

Set Wind Speed to High

Fan-tastic choice. Full throttle ahead

Set Timer for 1 Hour

Cool mode engaged for 1 hour — then it's nap time for me

Set Timer for 2 Hours

Cool mode engaged for 2 hours — then it's nap time for me

Set Timer for 3 Hours

Cool mode engaged for 3 hours — then it's nap time for me

Set Timer for 4 Hours

Cool mode engaged for 4 hours — then it's nap time for me

Set Timer for 5 Hours

Cool mode engaged for 5 hours — then it's nap time for me

Set Timer for 6 Hours

Cool mode engaged for 6 hours — then it's nap time for me

Set Timer for 7 Hours

Cool mode engaged for 7 hours — then it's nap time for me

Set Timer for 8 Hours

Cool mode engaged for 8 hours — then it's nap time for me

VOICE COMMANDS cont'

PROMPT	RESPONSE / ACTION
Set Timer for 9 Hours	Alright, 9 hours of fresh air coming right up
Set Timer for 10 Hours	Alright, 10 hours of fresh air coming right up
Set Timer for 11 Hours	Alright, 11 hours of fresh air coming right up
Set Timer for 12 Hours	Alright, 12 hours of fresh air coming right up
Set Timer for 13 Hours	Got it! I'll stay breezy for 13 hours
Set Timer for 14 Hours	Got it! I'll stay breezy for 14 hours
Set Timer for 15 Hours	Got it! I'll stay breezy for 15 hours
Set Timer for 16 Hours	Got it! I'll stay breezy for 16 hours
Set Timer for 17 Hours	Timer locked in for 17 hours. Breeze guaranteed.
Set Timer for 18 Hours	Timer locked in for 18 hours. Breeze guaranteed.
Set Timer for 19 Hours	Timer locked in for 19 hours. Breeze guaranteed.
Set Timer for 20 Hours	Timer locked in for 20 hours. Breeze guaranteed.
Set Timer for 21 Hours	Timer set for 21 hours. I'll keep things cool till then!
Set Timer for 22 Hours	Timer set for 22 hours. I'll keep things cool till then!
Set Timer for 23 Hours	Timer set for 23 hours. I'll keep things cool till then!
Set Timer for 24 Hours	Timer set for 24 hours. I'll keep things cool till then!
Cancel Timer	Alright, no schedule, no rules — just pure air chaos.

VOICE COMMANDS cont'

PROMPT

RESPONSE / ACTION

Turn On Oscillation

Oscillation engaged. I call this move 'The Breeze Shuffle.'

Turn Off Oscillation

Oscillation off. I'll stop showing off now.

Turn On the Display

Back in the spotlight — don't I look cool?

Turn Off the Display

Display off. Still cool, just stealthier.

USING THE VOICE COMMANDS

Activate the Fan by saying **“Hello Airi”**. Once activated, proceed with a command using one of the prompts below:

⚙️ Basic Controls

- Turn Fan On
- Increase Volume
- Set Volume to Maximum
- Turn Fan Off
- Decrease Volume
- Mute Sound

NOTE: “Increase Volume” and “Set Volume to Maximum” commands will unmute the volume.

❄️ Wind Speed (Low - High)

- Set Wind Speed to Low
- Set Wind Speed to Medium
- Set Wind Speed to High

🕒 Timer (1–24 hrs)

- Set Timer for 1–24 Hours (Fan will operate for the selected duration)

NOTE: Example: “Set Timer for 5 Hours” OR “Set Timer for 12 Hours”)

- Cancel Timer

NOTE: After **two minutes** of inactivity, the Fan will enter sleep mode. Once in sleep mode, the user must say “Hello Airi” to wake the Fan and issue additional voice commands.

↻ Oscillation

- Turn On Oscillation
- Turn Off Oscillation

💡 Display

- Turn Off the Display
- Turn On the Display

★ Helpful Tips

- Speak clearly within 3–6 feet of the fan.
- Pause briefly after saying “Hello Airi”.
- Reduce background noise for best recognition.



TROUBLESHOOTING

Fan Will Not Turn On:

- Ensure the Fan is securely plugged into a working power outlet.
- Confirm the Power Button on the Control Panel or Remote has been pressed.
- Check that the outlet is not connected to a wall switch that is turned off.
- Unplug the Fan for 10 seconds, then reconnect power.

Fan Is Not Responding to Voice Commands:

- Confirm the Fan is powered on and the display is active.
- Say the wake phrase clearly: "Hello Airi™".
- Reduce background noise (TV, music, other fans).
- Ensure you are within a reasonable distance of the microphone.
- If unresponsive, unplug the Fan for 10 seconds and plug it back in.

Oscillation Not Working:

- Make sure the Oscillation Button on the Control Panel or Remote is enabled.
- Check that the Fan head is not obstructed and can rotate freely.
- Do NOT manually force the Fan head—this may damage the mechanism.
- Reset power if oscillation stops unexpectedly.

Fan Speed Will Not Change:

- Press the Fan Speed Button to cycle through F1 (Low), F2 (Medium), and F3 (High).
- Verify that no timer or voice command is actively overriding settings.
- Unplug and reconnect power to reset controls.

Timer Not Setting / Timer Not Working:

- Confirm you are setting the timer in 1-hour increments (1-24 hours).
- Check that the Timer + or Timer - buttons are functioning normally.
- Try canceling the timer ("Cancel Timer"), then set it again.

LED Display Turns Off Unexpectedly:

- The display automatically turns off after 5 minutes of inactivity.
- Press any button on the Control Panel or Remote to wake the display.
- Use voice command: "Turn on the display."

Remote Control Not Working:

- Ensure there are no obstructions between the remote and the Fan.
- Replace the CR-2025 battery if the response is weak or inconsistent.
- Confirm you are pointing the remote toward the front of the unit.

Fan Head Will Not Tilt:

- Turn off the Fan before adjusting the tilt.
- Gently tilt the Fan head up or down—do not force movement.
- Check for debris or obstructions around the hinge.

TROUBLESHOOTING cont'

Unusual Noise or Vibration:

- Ensure the Fan is placed on a stable, level surface.
- Confirm the Height Adjustment and Assembly Knobs are tightly secured.
- Remove any objects touching or blocking the Fan head.
- If noise persists, power cycle the Fan.

Fan Airflow Feels Weak:

- Increase the Fan speed using the Control Panel, Remote, or a voice command.
- Check that the front airflow vents are clean and not blocked.
- Ensure oscillation is enabled for wider airflow coverage.

MAINTENANCE & STORAGE

- Please disconnect the power supply before cleaning and maintenance to allow the product to cool down.
- When cleaning, use a soft cloth dipped in a small amount of water or kitchen detergent to gently wipe the surface of the product.
- It is strictly prohibited to clean the product with solvents such as alcohol to avoid yellowing or corrosion of the product shell.
- After cleaning the product thoroughly, let it dry before storing away.

LIMITLESS™

Designed in USA. Made in China.
All rights reserved. Limitless™ and Airi™ are trademarks
of Limitless Innovations, Inc. Design and specifications
subject to change without notice. Products may vary
from images shown. All other trademarks included
herein are property of their respective owners.
Accessories sold separately.

**Scan to learn more
about using the
features of your Limitless
Airi™ Voice Controlled Fan.**



LimitlessInnovations.com
Support@LimitlessInnovations.com | (855) 843-4828

© **Limitless Innovations, Inc.**



@LimitlessInnovations



/LimitlessInnov



/LimitlessInnov



Limitless Innovations