

tri
STYLER

CHI GEMZ[®]
SMART ZIRCONIUM TITANIUM

MULTI-STYLING TOOL

Technical & Styling Tips



Preparation: How to use triStyler with Nozzle Attachment

1. Plug in the triStyler to the correct power supply.
2. Line up the smart magnets on the nozzle to the smart magnets on the dryer. The attachment will only fit properly when the smart magnets are lined up.
3. Select the heat and airflow desired.
 - Position I: COOL to set the style
 - Position II: LOW for Fine to Medium Hair
 - Position III: HIGH for Medium to Coarse Hair
4. To prevent burns, turn off the dryer and wait until the attachment has cooled off before removing or exchanging attachments. To remove the nozzle attachment, pull the attachment at the base.

How to use triStyler with Retractable Brush Attachment

1. Plug in the triStyler to the correct power supply.
2. Line up the smart magnets on the brush attachment to the smart magnets on the dryer. The attachment will only fit properly when the smart magnets are lined up.
3. Twist the cool tip to the right to show/display/expose the bristles.
4. Twist the cool tip to the left to retract the bristles.
5. Select the heat and airflow desired.
 - Position I: COOL to set the style
 - Position II: LOW for Fine to Medium Hair
 - Position III: HIGH for Medium to Coarse Hair
6. To prevent burns, turn off the dryer and wait until the attachment has cooled off before removing or exchanging attachments. To remove the brush attachment, pull the attachment at the base.