

Care

BE SURE TO UNPLUG THE PERFECTER
AND CARE AFTER IT COOLS DOWN.

- Do not rinse with water. It may damage the Perfecter.
- For cleaning the surface, wipe with a cloth dampened with water mixed with mild soap. Do not use products that include benzine and/or paint thinner. It may damage the Perfecter.
 - For cleaning the barrel, use cotton swabs.

NOTE: Be cautious not to leave the cotton fibers on the barrel.

- Clean often to avoid collecting dust and hair.

Caution When Storing

BE SURE TO CHECK THE FOLLOWING
BEFORE USING THE PERFECTER.

1. Turn the on/off button off, and unplug.
2. Be sure barrel has cooled off.
3. Do not wrap cord around the Perfecter.