

# FEATURES OF YOUR CLARISONIC® PEDI DEVICE

## SPEED SETTINGS

While the factory speed setting is recommended for optimal results (Speed 3), the Pedi device offers three speeds for user preference when using the Wet/Dry Buffing Brush Head. To change speeds, press the speed ▲ or ▼ buttons while the Pedi device is on. Speed is indicated visually on the illuminated bezel surrounding the button pad.

### Speed

### Visible indication

#### Wet/Dry Buffing Brush speed settings

Speed 3

upper LED light on

Speed 2

middle LED light on

Speed 1


lower LED light on

(+Pulse)

#### Smoothing Disc speed setting

Disc Speed

all LED lights on

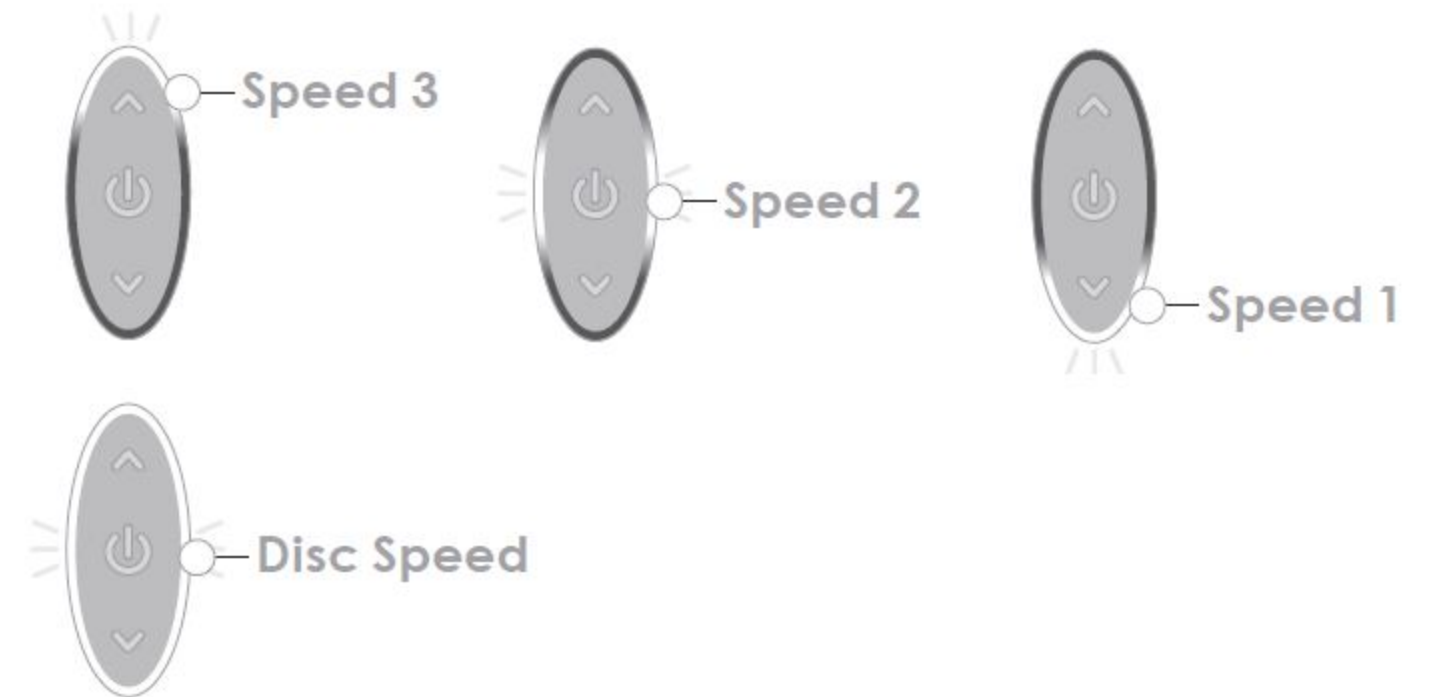

# CYCLE TIMER

For even and thorough care of your feet, the Pedi device has a timer that pulses momentarily at one-minute intervals to indicate it is time to move to another part of your foot. Pedi will automatically shut off when cycle is complete.

Attachment	Factory Setting	Optional Setting	To Decrease Cycle Time	To Increase Cycle Time
Pedi Wet/Dry Buffing Brush Head	2 minute cycle	1 minute cycle	While the handle is off, press and hold the ▼ button for 3 seconds. Handle will pulse once to indicate it is in the 1 minute cycle.	While the handle is off, press and hold the ▲ button for 3 seconds. Handle will pulse twice to indicate it is in the 2 minute cycle.
Pedi Smoothing Disc	3 minute cycle	2 minute cycle	While the handle is off, press and hold the ▼ button for 3 seconds. Handle will pulse twice to indicate it is in the 2 minute cycle.	While the handle is off, press and hold the ▲ button for 3 seconds. Handle will pulse three times to indicate it is in the 3 minute cycle.

**To pause** the cycle for up to 30 seconds, press the on/off button. The bezel will fade in and out in pause mode. To resume, press the on/off button.