

getting started

Attaching the brush head

1. Align the brush head so the bristles face the same direction as the buttons on the handle.
2. Firmly press the brush head down onto the shaft until it stops and is snugly in place.

Charging your brush

1. Plug the charger into a live outlet.
2. Place the toothbrush handle on the charger. The brush can be oriented in any direction.

Note: to keep the battery fully charged, you may keep your Sonic Blue Toothbrush on the charger when not in use. It takes 12 hours to fully charge the battery. A fully charged Sonic Blue Toothbrush can hold a charge for up to 2 weeks of brushing (two 2 minute brushings a day), without being placed on the charger.

Tip: To maintain the maximum capacity of the rechargeable battery, you must discharge it at least once every 6 months. To do this, unplug the charging unit and allow the battery to run down with normal use.

Battery charge indicator

1. The charging light will flash when the battery is low and needs to be charged.
2. When charging, the charging light indicator will be lit up red.