

## cleaning

*Do not clean brush heads, handle, charger or brush head storage attachment in the dishwasher.*

### **Toothbrush handle**

1. Remove the brush head and rinse the shaft area with warm water.
2. Use a damp cloth to wipe the entire surface of the handle.

### **Brush head**

1. Rinse the brush head and bristles after each use.
2. Remove the brush head from the handle and rinse the brush head connection at least once a week with warm water.
3. Make sure that the clear plastic in the center of the brush head where the light shines through is clear of build-up.

### **Charger**

1. Unplug the charger before cleaning.
2. Use a damp cloth to wipe the surface of the charger.

## storage

- If you are not going to use the product for an extended period of time, unplug it from the electrical outlet, clean it and store it in a cool and dry place away from direct sunlight.
- You can store brush heads on the pegs at the back of the charger.

## replacement

### **Brush head**

- Replace Sonic Blue Toothbrush brush heads every 3 months to achieve optimal results.
- Use only Sonic Blue Toothbrush replacement brush heads, which can be found at [GOSMiLE.com](http://GOSMiLE.com).