

# CARING FOR YOUR CLARISONIC DEVICE

To keep your device in optimum condition, care for it as follows. Do not use abrasive cleansers or chemicals to clean any part of the device. Do not put any part of the device in the dishwasher.

## HANDLE

There are no negative effects created by using common disinfectants such as isopropanol or bleach. However, we suggest gently cleansing the handle with warm soapy water to remove any residue. The handle is sealed and fully waterproof. Never attempt to open the handle for any reason.

**INFREQUENT USE:** The device should receive a charge occasionally. If you rarely use the device, charge it with the pLink every 3 months to maintain its charging capability.

## pLink CHARGER

**IMPORTANT:** Unplug the pLink charger, then wipe it with a soft, damp cloth. Do not immerse the charger in water.

## BRUSH HEAD

Once a week, remove the brush head from the handle and rinse with warm soapy water to remove any residue.

**To remove the brush head, 1.** Grip the brush head firmly, then push and twist it counterclockwise (like a medicine cap). **2.** Pull the head away from the handle.

**To attach** the brush head, push down and twist the head clockwise until it snaps into place. Be sure you hear a tight snap.

**TIP:** Use the brush head cap to easily remove and attach the brush head with a simple twist.

