



The Science of Fabulous

Featherweight **COMPACT**

CARE INSTRUCTIONS

1. Make sure that the inlet and outlet grills are clear of dust and lint for proper operating performance.
2. Your hair dryer is virtually maintenance free. No lubrication is needed.
3. Always remove the plug from the outlet and allow the appliance to cool before cleaning.
4. Use a small brush or brush attachment of a vacuum cleaner to remove dust and lint that may have accumulated on the metal mesh at the back of the dryer.
5. The hair dryer exterior may be wiped with a damp cloth.
6. **CAUTION:** Never allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the dryer. Damage will occur at the high flex point of entry into the hair dryer, causing it to rupture and short. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.
7. If the cord or hair dryer is damaged or does not operate properly, return it to a service center for repair.
8. This hair dryer has no user serviceable parts. Do not attempt to repair the appliance by yourself.

STORAGE

When not in use, your hair dryer should be disconnected and stored in a safe, dry location, out of reach of children. Do not wrap cord around dryer. Allow the cord to hang or lie loose and straight at the point of entry into the hair dryer.