

BRUSH HEADS

Brush heads need to be replaced every 3 months as the bristles become fatigued and less effective over time. Once a week, remove the brush head from the device and rinse with warm soapy water to remove any residue.

- **To remove the brush head:** 1) Grip the brush head firmly, then push and twist it counter-clockwise; 2) Pull the head away from the device.
- **To attach the brush head:** Push down and twist the brush head clockwise until it snaps into place. Be sure you hear a tight snap.

Tip: Use the brush head cap to easily remove and attach the brush head with a simple twist.

