

CARING FOR YOUR DEVICE

To keep your Clarisonic device in optimum condition, care for it as follows:

Do not use abrasive cleansers or chemicals to clean any part of the Clarisonic device.

Do not put any part of the Clarisonic device in the dishwasher.

DEVICE

Once a week remove the brush head and wash the device using warm soapy water to remove any residue buildup. The device is sealed and fully waterproof. Never attempt to open the device for any reason.

USB CHARGER

IMPORTANT: Unplug the USB charger, then wipe it with a soft, damp cloth. Do not immerse the charger in water.

STORAGE

If you are not using the device for long periods of time (weeks/months), unplug the charger, clean the brush head and device, and store it in a cool dry place away from direct sunlight.

INFREQUENT USE: The device should receive a charge occasionally. If you rarely use the device, charge it with the supplied charger and wall power supply every 6 months to maintain its charging capability.

Device Disposal at End of Product Life: Your Clarisonic device is sealed and contains rechargeable NiMH batteries. These batteries are non-replaceable and the sealed device is non-repairable. When your device reaches end of life: it no longer holds a charge, does not function and is out of warranty; this device must be recycled or disposed of per your local regulations. Do not dispose of it in fire.