

CARE

BE SURE TO UNPLUG THE PERFECTER. LET IT COOL DOWN.

For cleaning the Perfecter barrel, use the Calista Glide™

1. Press the On/Off button to turn the unit off, and unplug.
 2. Holding the Glide™ with your thumb and index finger, starting at the bottom of the barrel, place the prongs directly on the barrel between the rows.
 3. Move the Glide™ up along the rows.
 4. Reaching the top of the barrel, lift and pull up the Glide™.
 5. Remove/dispose of build-up and excess hair.
 6. Repeat on each row.
- *Clean often to avoid collecting dust and hair.*
 - *Do not rinse with water. It may damage the Perfecter.*



Glide™

CAUTION WHEN STORING

BE SURE TO CHECK THE FOLLOWING BEFORE USING THE PERFECTER:

1. Turn the On/Off button off, and unplug.
2. Be sure barrel has cooled off.
3. Do not wrap cord around the Perfecter.