

CHANGING THE MICRO-PEDI ROLLER

The Micro-Pedi roller contains fragile parts, please handle them with care.

Please take extra care when replacing the Micro-Pedi roller.

Note: Micro-Pedi rollers that are broken or worn could cause damage to the skin.

Change the Micro-Pedi roller as needed for best result. Rollers last for a few sessions depending on frequency of use and size of area being treated. Replace as needed.

Replace the Micro-Pedi roller when you find any defects to the roller or when you find them less effective.

Make sure the unit is turned off before replacing the Micro-Pedi roller.

1. Pull down the release button, on the side of the unit, while the end cap is facing up and the Micro-Pedi roller will pop out (fig. 6 & 7).
2. After the Micro-Pedi roller pops out, remove it from the cylinder holding the end cap of the Micro-Pedi roller (fig. 8) and dispose of it.



3. Remove the Micro-Pedi roller from the replacement container (fig. 9), by pressing the bottom with your pointer finger and catching it in the palm of your opposite hand.

4. Place a new Micro-Pedi roller into the unit until you hear a 'click' sound. Be sure to insert the new Micro-Pedi roller into the unit with the thinner side going into the unit (fig. 10 & 11).

5. After placing a new Micro-Pedi roller into the unit check that it has been firmly installed with no signs of shaky or loose parts (fig. 12).

