





1 Insert plug into base of unit.

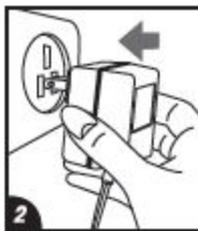

2 Place the adapter into socket.




3 Remove the plastic protective cover.

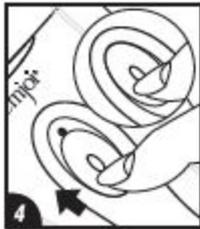


To turn On the unit, press and hold the safety switch lock and at the same time slide it up to the desired speed.

- 0 Power OFF
- I Low speed (recommend for fine hair or sensitive areas)
- II High speed (recommend for coarse hair)

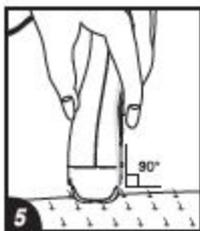

Hold the unit vertical to the skin and make sure the **Emjoi® eRase™ e84** logo is facing you. Both of the tweezer heads should be touching the skin.

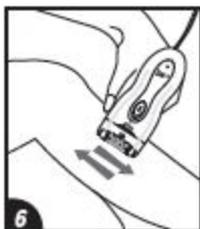

Hold the skin taut and move the unit in a back and forth motion (short / quick) in the direction of hair growth. Do not apply heavy pressure; just move the unit back and forth over the surface of the skin. After each movement, lift the unit from the skin and move to a new section. The 84 tweezer head is not a shaver so you cannot go from your ankle to your knee in one motion. Work in small sections until the hair is removed and then move up to the next section until all the unwanted hair is removed.



For sensitive areas like the upper lip, chin and underarms place the sensitive cover onto the tweezer head. This will hide some of the tweezers to make removing hair from the root more comfortable.



When using on the face, the **Emjoi® eRase™ e84** can be used on the upper lip, chin and jaw line only.

This item is not recommended to be used on the cheeks or forehead.

When using on the upper lip, chin and jaw line you must hold the unit so only one of the tweezer heads is parallel (making contact) with the skin. Slant the unit at a slight angle so one of the heads will be touching the skin.



Before cleaning, make sure to turn off your unit and unplug it from the electrical outlet. Use the cleaning brush to gently brush the tweezers to remove any hair.