

Pop Sonic Trimmer

How to use the Pop Sonic Trimmer:

Hold the trimmer edge flat against your skin. Without pressure, glide against your skin on any area with unwanted hair. When you're done, turn the trimmer off and use the brush to gently wipe away any hair or dust.

How to use the eyebrow attachment:

Make sure the trimmer is Off. Pick which side you'd like to use – We recommend starting with the longer side then moving to the shorter side if desired. Using the larger opening on the attachment, slide eyebrow attachment over the head of the trimmer and push down until it clicks into place.

Tips & Tricks for using your Pop Sonic Trimmer:

- Slowly glide the trimmer against the direction the hair grows to capture and trim the most amount of unwanted hair.
- The edge of the trimmer should be flat against your skin to get as close as possible to the base of each hair.
- The vibrations & blade do all the work, so no need to use any pressure. Do not press or push. Simply glide across your skin to remove unwanted hair.
- To replace the battery, start by removing the cap. With one hand, hold the trimmer blade side of the device. With the other hand, hold the patterned aluminum casing and pull apart. Place 1 "AAA" battery inside and replace the patterned casing.
- Always remember to brush off any leftover hair on your trimmer to keep it clean.
- There's a small switch at the top of the trimmer near the blade. It is only meant to be used to remove the blade if something gets stuck.

NOTE: While the trimmer is great at removing small patches of fine hair, it is not meant to replace your shaver, razor or epilator. This devices leaves you with a soft, natural look & feel.

EYEBROW ATTACHMENT:

- Start with the longer side first to determine which side is appropriate.
- Use the natural shape of your brows to help guide the trimmer.
- Start with the widest part of your brows
- Go slowly and in small sections to avoid over trimming

Best Places to Use the Trimmer:

Eyebrows	Bikini Area
Side Burns	Knees
Chin Hair	Ankles
Bikini Area	Neck
Ears	Feet
Nose	Hands
Mustache	
Beard	



Information Provided by Pop Sonic