



FEATHERWEIGHT LUXE 2i

User Guide

Professional hair dryer

Model No. 73840, 73841, 73842, 73843, 73844, 73845, 73846,
73847, 73848, 73849, 73870, 73871

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:



KEEP AWAY FROM WATER

Electricity and water are a dangerous combination and can cause death by electric shock. Do not allow electrical cords to come into contact with water or other liquids.

ELECTRICAL APPLIANCES ARE ELECTRICALLY LIVE WHEN PLUGGED IN, EVEN IF TURNED OFF.

To reduce the risk of death by electric shock:

1. Always unplug the appliance immediately after using.
2. Do not use while bathing.
3. Do not place or store the appliance where it can fall or be pulled into a bath tub or sink.
4. Do not place in or drop into water or other liquid.
5. If the appliance falls into water, unplug it immediately. Do not reach into the water.

IMPORTANT SAFETY INSTRUCTIONS



To reduce the risk of burns, electrocution, fire or injury to persons:

1. An appliance should never be left unattended when plugged in.
2. Close supervision is necessary when this appliance is used on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water. Return the appliance to a service center for examination and repair.
5. Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
6. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair and the like.
7. Never use while sleeping.
8. Never drop or insert any object into any opening.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.

IMPORTANT SAFETY INSTRUCTIONS



WARNING

10. Do not use an extension cord with this appliance.
11. Do not direct hot air toward eyes or other heat sensitive areas.
12. Attachments may be hot during use. Allow them to cool before handling.
13. Do not place the appliance, while it is operating, on any surface.
14. While using the appliance, keep hair away from the air inlet.
15. Do not operate with a voltage converter.



Do not use the appliance near a bath tub, washbasin or other vessel filled with water. Never place the appliance in water or any other liquid.

SAVE THESE INSTRUCTIONS

GROUND FAULT CIRCUIT INTERRUPTERS

FEATHERWEIGHT LUXE 2i



This Message About...

GROUND
FAULT
CIRCUIT
INTERRUPTERS

... can save a life!

GROUND FAULT CIRCUIT INTERRUPTERS

FEATHERWEIGHT LUXE 2i

If you must use your hair dryer in the bathroom, install a GFCI now! Your local electrician can help you decide which type is best for you – a portable unit that plugs into the electrical outlet or a permanent unit installed by your electrician. The National Electrical Code now requires GFCIs in the bathroom, garages and outdoor outlets of all new homes.

Why do you need a GFCI?



Electricity and water don't mix. If your hair dryer falls into water while the dryer is plugged in, the electric shock can kill you, **EVEN IF THE SWITCH IS "OFF"**.

A regular fuse or circuit breaker won't protect you under these circumstances. A GFCI offers you far greater protection.

A GFCI can save your life! Compared to that, the price is small!

Don't wait...Install one now!

* GFCI is a sensitive device which reacts immediately to a small electric current leak by stopping the electricity flow.

OPERATING INSTRUCTIONS

FEATHERWEIGHT LUXE 2i

**This appliance is intended for household use.
Use on Alternating Current (60 Hz) only.**

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified technician. Do not attempt to defeat this safety feature.

OPERATING INSTRUCTIONS


FEATHERWEIGHT LUXE 2i

CHECK ALCI EVERY TIME YOU USE THIS HAIR DRYER

This hair dryer is equipped with an Appliance Leakage Circuit Interrupter (ALCI), a safety feature that renders it inoperable under some abnormal conditions, such as immersion in water.

To make sure the ALCI is functioning properly and the exclusive water sensing system (ALCI) is working, perform the following test:


1. Plug in the hair dryer and press the test button on the plug.
2. The hair dryer will stop working. There will be an audible click and the reset button will pop out.
3. To reset the ALCI with a Reset button: Unplug the unit. Then push the Reset button in, and reinsert the plug into the outlet.
4. Be sure to repeat the test every time you use this hair dryer to confirm the ALCI is operational.
5. If the ALCI is not functioning properly, return the hair dryer to a service center.
6. If a water immersion occurs, bring this unit into a service center. Do not try to reset.

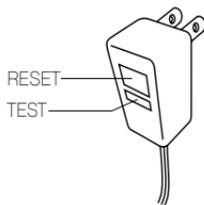

Should the dryer go off and the Reset button pop out during use, this could indicate a malfunction in the dryer. Remove the plug from the outlet and allow the dryer to cool. Reset the ALCI. Reinsert the plug into the outlet. The dryer should function normally. If not, return it to a service center for examination and repair.

OPERATING INSTRUCTIONS


FEATHERWEIGHT LUXE 2i

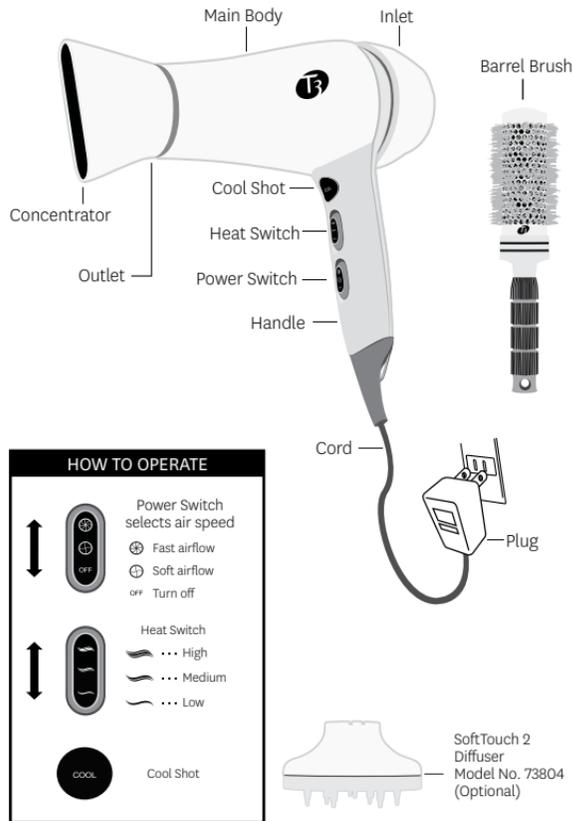

HOW TO USE YOUR

FEATHERWEIGHT LUXE 2i

- 1 Select desired speed and heat levels. Fine and processed hair types should use the Low heat setting.

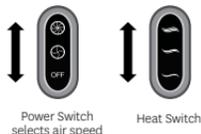

- 2 Holding the hair dryer 6-8 inches away, rough dry towel-dried hair until 70-90% dry.



- 3 Divide hair into 3-4 inch sections and slowly brush through each section with a round bristle brush. Apply tension with the brush while directing the dryer nozzle at the brush.



- 4 Finish by pressing the Cool Shot and blowing cool air over the section for a polished look.



MAINTENANCE INSTRUCTIONS

FEATHERWEIGHT LUXE 2i

1. Make sure that the inlet and outlet grills are clear of dust and lint for proper operating performance.
2. Your hair dryer is virtually maintenance free. No lubrication is needed.
3. Always remove the plug from the outlet and allow the dryer to cool before cleaning.
4. Use a soft cloth, small brush or brush attachment of a vacuum cleaner to remove dust and lint that may have accumulated on the metal mesh at the back of the dryer.
5. The hair dryer exterior may be wiped clean with a damp cloth.
6. **CAUTION:** Never allow the power supply cord to be pulled, twisted or severely bent. Never wrap the cord tightly around the dryer. Damage will occur at the high flex point of entry into the hair dryer, causing it to rupture and short. Inspect the cord frequently for damage. Stop use immediately if damage is visible, if the unit stops or if it operates intermittently.
7. If the cord or hair dryer is damaged or does not operate properly, return it to a service center for repair.
8. This hair dryer has no user serviceable parts. Do not attempt to repair the appliance yourself.

STORAGE

When not in use, your hair dryer should be disconnected and stored in a safe, dry location, out of reach of children. Do not wrap the cord around the dryer. Allow the cord to hang or lie loose and straight at the point of entry into the hair dryer.

T3 LIMITED WARRANTY TERMS & CONDITIONS

T3 Micro will repair or replace (at our option) T3 products for twenty-four (24) months from the date of purchase if they are defective in workmanship or materials. This limited warranty does not cover (1) damage due to misuse or abuse, such as incorrect voltage supply, dropping, or failure to follow enclosed instructions or (2) tampering, such as repair or attempt to repair. To obtain service under this warranty, please visit t3micro.com/warrantyclaim to submit a warranty claim, or call us at (866) 376-8880 to receive detailed instructions. You will be required to provide proof of purchase.

THIS LIMITED WARRANTY IS ONLY VALID IF THE PRODUCT IS PURCHASED FROM AN AUTHORIZED SELLER OF T3 GOODS AND IF THE ORIGINAL SERIAL NUMBER ON THE PRODUCT HAS NOT BEEN REMOVED OR OTHERWISE TAMPERED WITH.

Any implied warranties, obligations, or liabilities, including but not limited to the implied warranty of merchantability and fitness for a particular purpose, shall be limited in duration to the 24 month duration of this written limited warranty. Some states do not allow a limitation on how long an implied warranty lasts, so the above limitation may not apply to you.

IN NO EVENT SHALL T3 BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED.

Visit www.T3micro.com/register to complete your warranty registration.

MODEL NO.

73840, 73841, 73842, 73843, 73844, 73845,
73846, 73847, 73848, 73849, 73870, 73871

SPECIFICATIONS

Operating Voltage: 125V
Power Consumption: 15A

T3 Micro, Inc.
Venice, CA USA
Made in China



WARNING

Do not use the appliance near a shower, bathtub, washbasin or other vessel filled with water. Never place the appliance in water or any other liquid.

