

CHANGING THE MICRO-NAIL™ ROLLER

The Micro-nail™ roller contains fragile parts, please handle them with care. Please take extra care when replacing the Micro-nail™ roller.

Note: Micro-nail™ rollers that are broken or worn could cause damage to the nails.

Change the Micro-Smooth (Gray) and Micro-Shine (White) rollers as needed for best results. Rollers last for a few sessions depending on frequency of use and size of the area being treated. Replace as needed.

Replace both Micro-Smooth (gray) and Micro-Shine (white) rollers at the same time for best results. Replace when you find them less effective or have any defects in the roller.

Make sure the unit is turned off before replacing the Micro-nail™ roller.

1. Pull off the Micro-nail™ roller at the top of the unit (fig. 8) and dispose of it.
2. Place a new Micro-nail™ roller onto the head (fig. 9) and press it down onto the unit (fig. 10).
3. After placing a new Micro-nail™ roller into the unit check that it has been firmly installed with no signs of shaky or loose parts (fig. 11).

