



Sporticulture.com  
Glenwood, MD

# Instructions For Inflatable Snowman Player

## BEFORE USING THIS PRODUCT:

FOLLOW THESE INSTRUCTIONS AND SAVE FOR FUTURE REFERENCE.

## IMPORTANT SAFETY INSTRUCTIONS

1. This is a seasonal decoration and is not intended for permanent installation or for year-round use. It is recommended not to use for more than 90 consecutive days.
2. Do not attempt to inflate during unusually strong winds. If it becomes too windy for safe operation, simply allow your inflatable to deflate, secure it, and wait for better conditions before re-inflating.
3. Keep away from children: this is an electrical product - NOT a toy. Keep this product out of reach of children.
4. Protect the electric fan and power cord from exposure to water. This precaution will reduce the risk of electrical shock.
5. Do not use anything with this product that is not included in the original manufacture's packaging when purchased.
6. Do not expose the product to sharp items, as these may cause rupture and damage.
7. The repair of the damaged main connection cable is only allowed for a qualified technician.
8. Do not hang ornaments or other objects on the product.
9. Do not close door or window on the power cord or extension cords, as this may damage the product's wire insulation.
10. Do not secure the wiring of the product with staples, nails or other sharp objects, or place wiring on sharp hooks or nails.
11. When the temperature is below 5 F (115 C), the motor may temporarily stop running. The motor will begin functioning again in higher temperatures.

## **WARNING:**

This inflatable has a plug that will fit into a polarized outlet only one way. This is a safety feature. If you are unable to insert the plug into the electrical outlet, try reversing the plug.

If the plug still does not fit, contact a qualified electrician.

Never use the plug with an extension cord unless you can fully insert the plug into the extension cord.

Do not alter the plug. Do not attempt to defeat the safety purpose of the polarized plug.






## Set Up and Use

1. Place inflatable in a clean, open area, free from obstruction or other debris.
2. Roll out fabric and lay out the contents.
3. Plug in the adaptor in the appropriate electric outlet.
4. Turn unit upright. Make sure the air intake of fan is clear of fabric and free of obstruction.
5. Be sure the zipper is closed in order to let the inflatable figure fully inflate.
6. Once fully inflated, clip the nylon tethers to each of the attached loops on the side neck of the inflatable. Hook 2 Tethers to each loop. extend one tether to the front and one tether to the rear on each side. Attach a stake to the end of the tether and drive the stakes into ground.
7. To secure the inflatable from winds, insert a stake into the ground through each of the holes in the lower tabs of the inflatable figure. You may need to partially deflate the figurine, to make inserting stakes easier. Once stakes are inserted into ground, fully re-inflate.
8. Adjust the sealed weight-bag to position your inflatable
9. To deflate, simply unplug from the outlet device and open zipper on back of inflatable. Do not unplug by pulling on cord but rather by the plug directly.

## Package Contents

| Part | Description                  | Quantity |
|------|------------------------------|----------|
| A    | Inflatable Unit with adapter | 1 Piece  |
| B    | Tether Ropes                 | 4 Pieces |
| C    | Stakes                       | 7 Pieces |

|    | Input              | Output          |
|----|--------------------|-----------------|
| US | 120V-60Hz<br>0.26A | 12V---1A<br>12W |

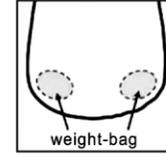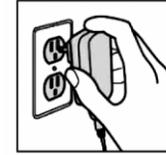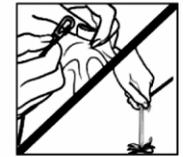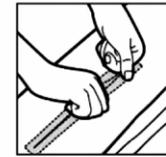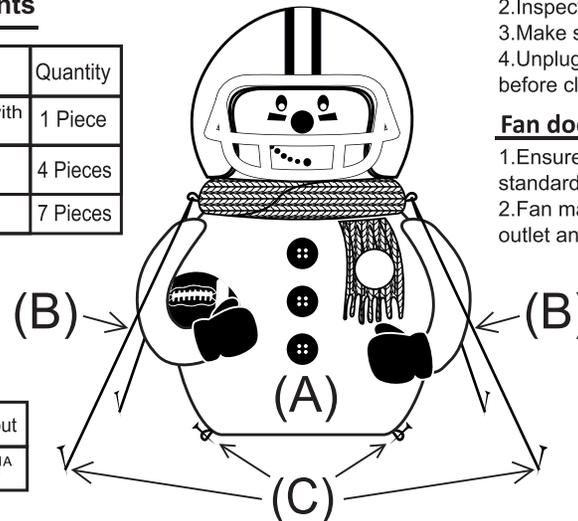

## Care and Maintenance

1. Periodically check to ensure there are no holes or tears in the inflatable figure. If you find any tears in the fabric, you can repair them with needle and regular thread. No special thread is necessary.
2. Only use mild detergent with cold water and use a soft damp cloth to wipe clean the figure.
3. Periodically unplug the product from the electrical outlet to allow the transformer and fan to cool down to avoid overheating and /or product damage.
4. Neatly fold and store the product in a cool, dry location that is away from sunlight or heat sources.
5. Unplug, roll up and store in originals package or similar size box.
6. Do not wipe clean the motor.

## Trouble Shooting Guide

### Item will not fully inflate:

1. Ensure zippers on the back of each inflatable figure are closed.
2. Inspect fabric for tears and holes; repair if necessary.
3. Make sure the fan is not obstructed by any debris or snow.
4. Unplug fan from the electrical outlet and let cool down completely, before clearing debris.

### Fan does Not operate:

1. Ensure fan is plugged into a working outlet (for indoors, a standard AC outlet, for outdoors a GFCI outlet).
2. Fan may be overheated. Unplug the fan from the electrical outlet and let cool down completely.