



GUMDROP PATHWAY LIGHTS

For the delight and amusement of all people age 14 and over. For indoor or outdoor use.

A. OPERATION

1. Open the battery compartment cover and insert 3 x C batteries (not included) into the battery compartment. Align "+" and "-" as marked inside the battery compartment.
2. Close the battery compartment cover.
3. Five stakes are included for ground staking. Insert the stakes into each gumdrop bottom, position each gumdrop so they can stand on their own and push into the ground. Make sure all gumdrops are stable while taking the weather into consideration.
4. Press the switch to the "ON" or "TIMER" position to light the mechanism.
 - a) Press the switch to "TIMER" and the unit will have lights for 6 hours and then automatically shut off. The unit will restart 18 hours later.
 - b) Press the switch to the "ON" position for continuous lights.
 - c) Press the switch to the "OFF" position to turn off the lights.

Note: Due to the nature of the product, excess texture has been applied to ensure your item is beautiful after transportation and unpacking. Therefore, please know that a fair amount of loose texture is normal. Once the item is unpacked and placed in your home, the texture will remain on the product unless jostled or moved.

PLEASE NOTE: USE CAUTION WHEN HANDLING AS THERE MAY BE SHARP OR ROUGH POINTS ALONG THE GUMDROP SURFACE.

B. TROUBLESHOOTING

PROBLEM	LIKELY CAUSE	SOLUTION
No light	Batteries not inserted correctly	Make sure to align the "+" and "-" as marked inside the battery compartment
	Timer is on	Unit will restart at the end of the 18-hour cycle. To start immediately, press the timer switch to "OFF" and then to the "ON" or "TIMER" position.
	Switch is at "OFF" position	Move the switch to the "ON" or "TIMER" position
	Batteries exhausted	Change to new batteries

C. CARE INSTRUCTIONS

1. Before using or reusing, inspect product carefully. Discard any products that have cracks in enclosure or exposed wire.
2. When storing the product, carefully remove from the current location to avoid any undue strain or stress on the conductors, connections and wires.
3. When not in use, store neatly in a cool, dry location protected from sunlight and heat.
4. If necessary, clean product by wiping with a soft, dry cloth. Do not use any corrosive cleanser or chemical solution on this item.

D. BATTERY INSTRUCTIONS

1. Do not dispose batteries in fire. Batteries may explode or leak.
2. Do not mix old and new batteries.
3. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
4. Replace batteries of the same brand.
5. Failure to insert batteries in the correct polarity, as indicated in the battery compartment, may shorten the life of the batteries or cause batteries to leak.
6. Remove fully discharged batteries immediately.
7. Remove all the batteries for storage of the unit to avoid battery leakage.
8. Batteries should be recycled or disposed of as per state and local guidelines.

The following is only applicable to customers in the USA:

FEDERAL COMMUNICATIONS COMMISSION, PART 15:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Made by Mr. Christmas LLC
5425 E Raines Rd. Ste 5, Memphis, TN 38115-6701
Email: customerservice@mrchristmas.com