

Size:10x10cm

<p>PRODUCT OVERVIEW</p> <ol style="list-style-type: none">1. Power Button & Indicator Light2. UV Lights3. MAX Fill Line4. Power Port5. Power Cable  <p>TWO CLEANING MODES</p> <ul style="list-style-type: none">• Mode 1 (Standard Clean) 5 min. Ultrasonic cleaning with UV light. Indicator light shows Blue.• Mode 2 (Power Pulse Clean) 10 min. Pulsed & Ultrasonic cleaning with UV light. Indicator light shows Green.• Touch the top button to switch between modes. 	<p>USE YOUR ULTRASONIC OASIS</p> <ul style="list-style-type: none">• Fill the stainless steel tank with water slightly below the MAX line, as adding objects will raise the waterline. WARNING: Running device without water will damage it.• Put your items in the water. All objects should be completely immersed. Check to make sure you do not exceed the "MAX" fill line.• Close the lid and connect the power cord to an outlet.• Press the power button to start Mode 1 cleaning. The indicator light will be Blue. Cycle time is 5 minutes; once complete, the light will turn off and the Oasis stops automatically.• Press the Power button again to start Mode 2 cleaning. The light will turn Green. Cycle time is 10 minutes; once complete, the light will turn off and the Oasis stops automatically.  <p>Fill slightly below MAX line.</p>  <p>Put items completely into water</p>  <p>Press the power button</p>	<p>USE YOUR ULTRASONIC OASIS (cont'd)</p> <ul style="list-style-type: none">• You can press the power button a third time to turn it off at any time.• Once the cleaning process is done, unplug the power cord. Then, open the lid and remove your clean items.• Carefully pour the water out and wipe the inside of the Oasis with a clean cloth. WARNING: Do not get the power button wet. <p>OTHER CLEANING METHODS</p> <ul style="list-style-type: none">• Using Detergent: If you want better results, you may add a few drops of dish soap. We recommend using commercial dish washing detergent — preferably without any lipid-replenishing substances ("balm").• Partial Cleaning: For the partial cleaning of bigger objects, use the device with its lid open. <p>WARNING: Do not touch the liquid during operation!</p>  <p>Unplug Oasis before opening</p> <p>PARTIAL CLEANING</p>	<p>OTHER CLEANING METHODS (cont'd)</p> <ul style="list-style-type: none">• Ultra cleaning: When items require extensive cleaning, use Mode 2 cycle. Then, replace the water and repeat the Mode 2 cycle. Do this until your item is cleaned to desired results. <p>CARE & MAINTENANCE</p> <ul style="list-style-type: none">• Always unplug the Oasis device before cleaning it.• Use a cloth to clean and dry the tank after each use. This will prevent limescale.• Never immerse the device, cable or power plug in water or any other liquid.• Do not clean the ultrasonic cleaner with corrosive detergent or sharp objects.• Store the device in a cool, dry place.• Handle with care when moving the device. Check device and cable for damage before each use and do not use if damaged. <p>WHAT TO CLEAN</p> <ul style="list-style-type: none">• Personal items: Glasses, dentures, toothbrushes, razor blades, baby items, menstrual cups, etc.• Jewelry: Necklaces, rings, earrings, bracelets, chains, etc.• Metal parts: Coins, medals, badges, valves, etc.	 <p>Discover other Pop Sonic Products! https://shoppopsonic.com</p>
--	--	--	--	--

Size:10x10cm

<p>WARNINGS</p> <ul style="list-style-type: none"> -This device is not intended for use by individuals with restricted physical or mental capacities, including children, without responsible adult supervision. -Store the device, packaging, and accessories out of children's reach. -Do not use this device near bathtubs, showers, washbasins, or other containers with water. -Ultraviolet rays only have a bactericidal effect on the surface of objects directly exposed to them. -Carefully consider if this product is suitable for disinfecting your commonly used items. -For complete sterilization, if disinfecting items, turn each surface to face the UV lamp after disinfecting one side. -Ultraviolet rays can kill organic cells and may cause skin and eye burns. During operation, keep the upper cover closed to prevent direct UV exposure, and keep children away from the product. Do not touch the water while the Oasis is turned on. -Do not use flammable or explosive detergents. -Special cleaning detergent should be used in cases of difficult and/or stubborn dirt, such as grease, resin, rust, wax, pigments, etc., that cannot be removed with water and all-purpose cleaner. 	<ul style="list-style-type: none"> -Keep device away from water. Do not handle with wet hands. -DANGER OF ELECTRIC SHOCK -If the device falls into water, unplug immediately. Only then remove the device from the water. Do not use the device again. -Do not operate the device if it or the cable shows visible signs of damage. -Only plug into a properly installed socket that supplies voltage matching the rating plate. The socket must be easily accessible after connection. -Keep cable away from sharp edges or hot surfaces. Do not crush or twist the cable. -Do not wrap the cable around the device (risk of cable breakage). -Always pull out the plug when device is not in use. -To avoid any risk, do not modify the device or accessories. -Do not replace the cable yourself. Use the original power cable only. -Do not place the device on hot surfaces, near heat sources, or open fire. Place the device on a dry, hard, and even surface. -DRY RUNNING WILL DAMAGE THE DEVICE. 	<ul style="list-style-type: none"> -When filling the tank, ensure the "MAX" marking is not exceeded. -Do not run the device for extended time or continuously. -Do not use aggressive or abrasive cleaners. -Do not hit the device. Be careful when moving the device. -Do not expose the device to temperatures below 14°F or above 104°C. -No liability is assumed for scratched or damaged objects. -Loosely framed stones, glued ornaments on decorative items, and loose items may detach during the cleaning process. Consult your dentist, particularly for dentures, including veneers. <p>Thank you for purchasing this authentic Pop Sonic product.</p> <p>For questions about your product, please call Pop Sonic customer services at (800) 772-9174 or email help@shoppopsonic.com.</p> <p>DISCLAIMER</p> <p>Users of this device use it at their own risk. Neither Pop Sonic nor its retailers assume any responsibility or liability for any injuries or damages, physical or otherwise, resulting, directly or indirectly, from the use of this device.</p>	<p>WARRANTY</p> <p>Pop Sonic warrants the Ultrasonic Oasis for a period of 1 year after the original date of purchase, against defects due to faulty workmanship or materials. For warranty claims, you must register your device and log in to your account at www.shoppopsonic.com, then select the option to make a warranty claim.</p> <p>Our customer service department will then contact you to initiate the warranty procedure. This warranty covers working parts. It does not cover damage due to normal usage or accidents such as dropping the device.</p> <p>Other exclusions include misuse or neglect to the device. This warranty is void if any other charging cables besides the one you received is used with your device.</p> <p>For any warranty claims, proof of purchase must be provided. For this reason, please keep your receipt for the duration of the warranty period.</p> <p>Shipping costs are non-refundable.</p>	 <p>POCKET WARMER User Manual</p>
--	--	---	---	--