

Size:6x8cm

PRODUCT OVERVIEW

1. Protective Cap
2. Screen Cover
3. Charge Indicator
4. Power Button
5. Charging Port
6. Charging Cable



USE YOUR POCKET SHAVER

- Remove the protective cap
- Press the power button to start the shaver.
- The screen will show the current battery level.
- Use light pressure while moving the shaver across our skin in target areas.
- Press the power button to turn off your shaver.

CHARGING

- Using the included cable, connect the shaver to an adapter and plug it in.
- Battery level will display digitally during charging.
- Full charge takes about 90 min. to complete

- Do not use the shaver while charging. Do not use a high-powered charger or charge it for more than 90 minutes at a time.

CARE & MAINTENANCE

- The shaver should be powered off and unplugged for cleaning.
- Carefully unscrew the screen cover of the blade head.
- Use a dry soft brush to clean the rotation components.
- Do not wash the shaver with water. Keep water out of the charging port to avoid circuit failure.
- Handle components gently to protect yourself and the device.
- Charge the shaver at least once a month to prolong its life.

Discover other
Pop Sonic Products!
<https://shoppopsonic.com>

