

---

# SECUREBRITE™ WATERPROOF/FIREPROOF KEEPSAKE BOX WITH LOCK INSTRUCTIONS


---

## USING THE LOCK

To open, press the Lock Release Button (A), inward to unlock and release the zipper pulls. To lock, simply push the ends of each zipper pull into the spring loaded locking clips ((B).


Please NOTE: The Lock is preset to 0-0-0.

Water and fire resistant, clean with damp cloth.

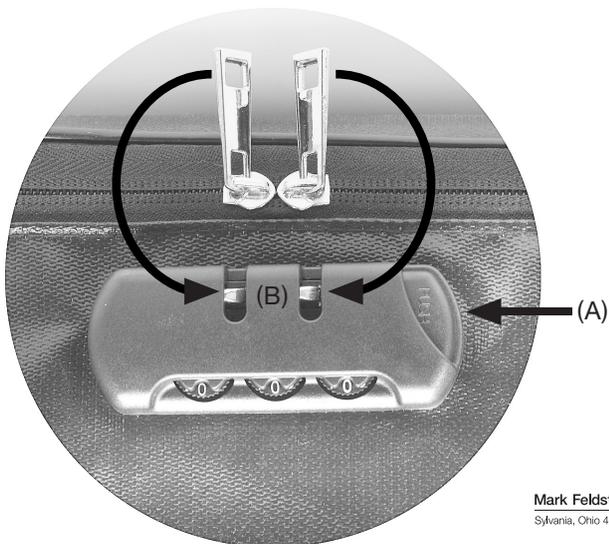

## SETTING THE LOCK COMBINATION

The lock comes with a preset combination of 0-0-0. To set a personal combination, spin Combination Number Dials (C) to 0-0-0. Press and hold the Lock Release Button (A), while holding the Lock Release Button spin the Combination Number Dials (C) to any 3 digit combination of your choice. Release Lock Release Button (A). Your personal combination is now set. Please remember this combination. To reset your personal combination, set the Combination Number Dials to your personal combination and follow the steps above.

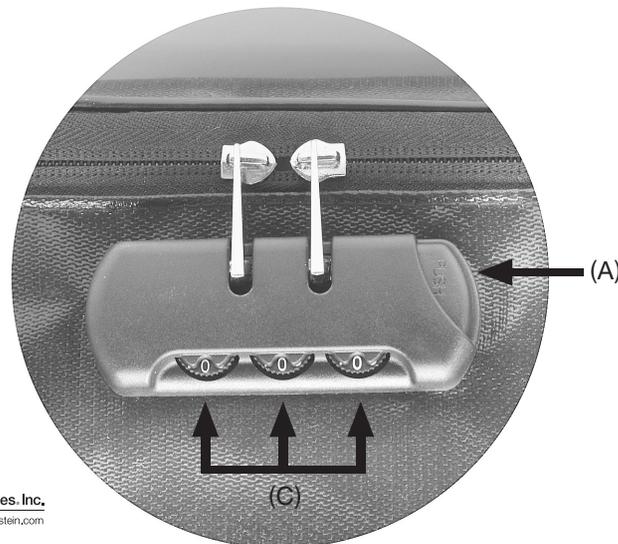

  
**Mark Feldstein & Associates, Inc.**  
Sylvania, Ohio 43560 • [www.markfeldstein.com](http://www.markfeldstein.com)

Made in China

---