

**SAFETY INFORMATION:**

- The blades are very sharp so use extreme caution when cleaning your Rave Fabric Shaver
- The Rave is not waterproof so do not use excess water when cleaning the device or it may damage the electronics.
- Children should not use this device unless supervised by a responsible adult.
- Do not use the Rave on skin or hair!
- Do not use the Rave on anything while you are wearing it.
- Always unplug and turn off the Rave before cleaning it.
- The Rave is made with a lithium battery and you should not try to remove it. These types of batteries carry inherent dangers if mishandled and can catch fire, explode, or cause burns if disassembled or damaged.
- Lithium batteries are subject to local disposal regulations and should not be discarded in regular trash. Check your local laws and regulations for disposal information.
- Lithium batteries can be recycled. For recycling information contact your local recycling service or visit online recycling resources.



**Thank you for choosing Pop Sonic.**  
For questions about your product, contact Pop Sonic at (800) 772-9174 or [help@shoppopsonic.com](mailto:help@shoppopsonic.com).

**WARRANTY**

Pop Sonic warrants the Rave for a period of 1 year after the original date of purchase, against defects due to faulty workmanship or materials. For warranty claims, you must register your device and log in to your account at [www.shoppopsonic.com](http://www.shoppopsonic.com), then select the option to make a warranty claim.

Our customer service department will then contact you to initiate the warranty procedure. This warranty covers working parts. It does not cover damage due to normal usage or accidents such as dropping the device.

Other exclusions include misuse or neglect to the device. This warranty is void if any other charging cables besides the one you received is used with your device.

For any warranty claims, proof of purchase must be provided. For this reason, please keep your receipt for the duration of the warranty period.

Shipping costs are non-refundable.

**DISCLAIMER**

Users of this device use it at their own risk. Neither Pop Sonic nor its retailers assume any responsibility or liability for any injuries or damages, physical or otherwise, resulting, directly or indirectly, from the use of this device.

**pop  
sonic**



**RAVE FABRIC SHAVER  
User Manual**

### PRODUCT OVERVIEW

- 1.LED Display
- 2.Power Button
- 3.Charging Port
- 4.6-Blade System
- 5.Protective Mesh Cover
- 6.Charging Cable



### SPECIFICATIONS

Product size: 7.8x7.8x7.8cm  
Battery: 500mAh  
Charging time: 40mins  
Working time: 1 hour

Weight: 132g  
Current: 0.33A  
Rated voltage: 3.7V

### BEFORE YOU START

- Charge the Rave fully before first use.
- Do not apply too much pressure or you may damage the material you are working on.
- Try the Rave on a smaller surface area before you use it on the entire surface to make sure you are getting the desired results.
- Removing pilling from heavier fabric will take several swipes and more pressure can be used due to the durability of the surface.
- Use caution on delicate materials.

### CHARGING

- Connect the USB cord to the charging port of the Rave (fig.1), connect other side to a charging block or computer (not included) and let charge.



fig.1

- While charging, the numbers on the LED display will flash with current percentage charged. (fig.2)
- When battery is sufficiently charged, the display will show a solid 99. (fig.3)
- Unplug the Rave before using it again.
- Rave will run for 60 minutes or more on a full charge.



fig.2



fig.3

### USING YOUR RAVE FABRIC SHAVER

- Make sure the Rave is sufficiently charged.
- Unplug the Rave before using; it is designed to be used cordless.
- Start by turning the Rave on by pressing the power button on the top of the device, the motor will start running.

- Gently wipe the steel mesh over the fabric surface and continue swiping back and forth until pilling or lint is removed.
- When finished, turn off by pressing the power button on the top of the device, the motor will stop running.

### CARE & MAINTENANCE

- Make sure the Rave is powered off and unplugged before attempting to clean.
- To remove collection bin cover surrounding the steel mesh, turn counterclockwise until it comes off.
- Dump out lint and use small brush to remove particles caught in tight areas, both on the blade side and the mesh side. It also helps to blow on the blade area.
- When finish cleaning, screw the cover back on by turning clockwise until it is secured tightly in place.