

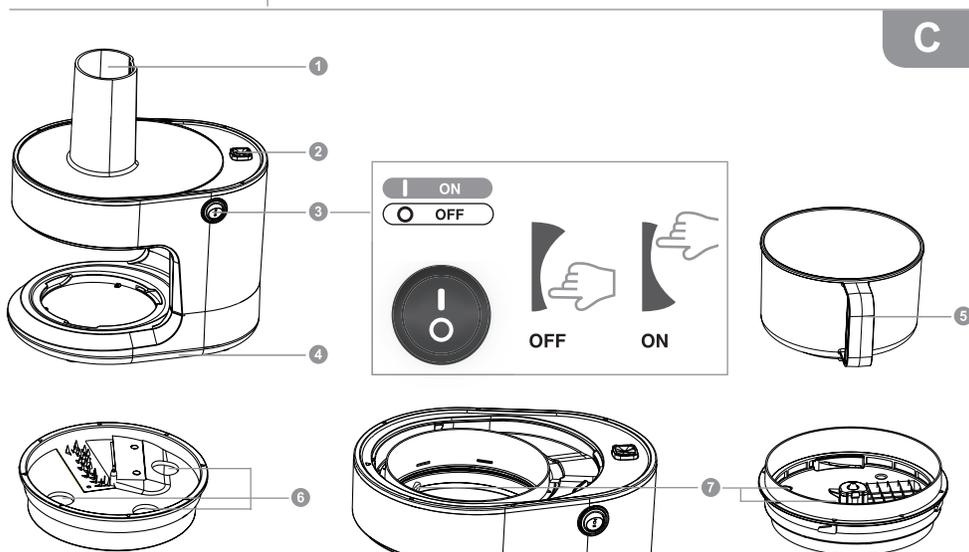
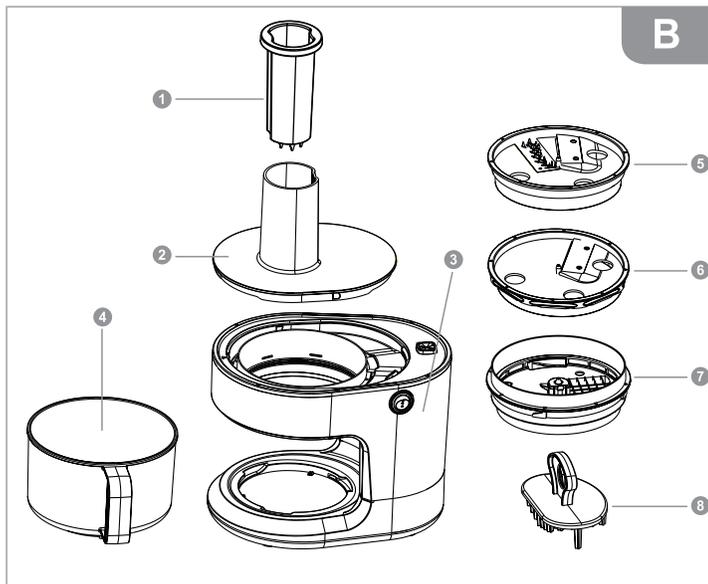


Instruction Manual


MPUS80024-STSMS

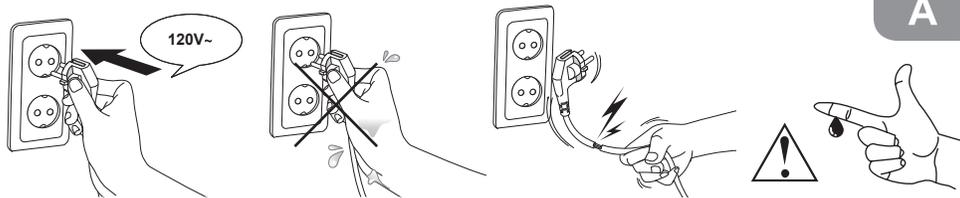


1

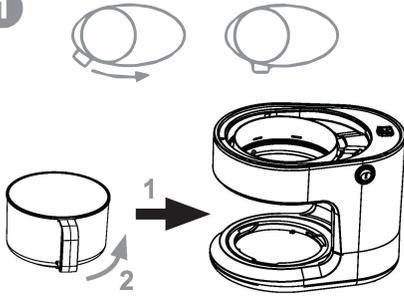


2

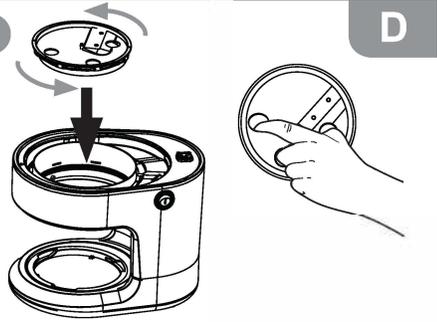


3

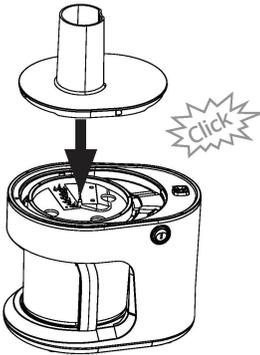

4

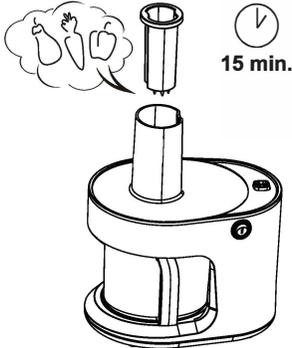


5

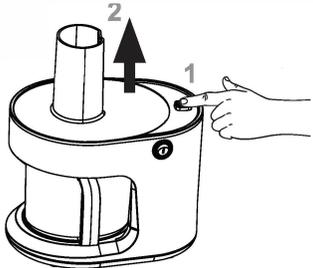

6

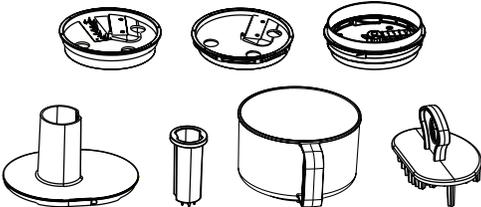

			
	✓	✓	✓
	✗	✗	✓

SAFETY INSTRUCTIONS



Electrical Shock Hazard

Keep the device dry; avoid water contact.

Follow Instructions Carefully

Adhere to guidelines for safe operation.

Burn Hazard

Exercise caution near hot surfaces.

When using this appliance, follow these precautions:

- Use the device according to this instruction manual.
- Install the device on a stable surface.
- Use only tools included in the product set.
- To prevent electrical shock, do not immerse the cord in water or other liquids. If water enters the unit, contact an authorized MasterPRO service center.
- Ensure the power supply matches the device's specifications.
- Avoid using the device in areas with flammable vapors.
- Never attempt to open the device yourself; it may cause electrical shock, lead to malfunction, and void the warranty.

For repairs, contact an authorized MasterPRO service center.

- If moved from a cool to warm place or vice versa, wait 1-2 hours before use.
- Do not immerse the entire product or wires in water to prevent electrical shock.
- Exercise caution when using the device near children.
- Avoid touching hot parts to prevent injury.
- Keep the power cord short to avoid injury risks.
- Do not let the cord hang over sharp edges or touch hot surfaces.
- Avoid connecting the device to an overloaded power grid.
- Do not place the device near gas or electric stoves and ovens.
- Protect the device from bumps, falls, and vibrations.
- Unplug the device from the power source after use, and before cleaning or changing accessories.
- Do not use the device outdoors.
- This appliance is not for use by persons with reduced physical, sensory, or mental capabilities unless supervised or instructed on safe usage.
- Keep the product away from children.
- If the power cord is damaged, it must be replaced by a specialist from an authorized MasterPRO service center to avoid danger.
- Use only the tools included in the product set.
- When cleaning the appliance, do not use abrasives or organic cleaners (alcohol, gasoline, etc.). It is permitted to use a small amount of neutral detergent for cleaning.

RECOMMENDATIONS



Read this instruction manual before using the device and keep it for future reference.

- All illustrations in this manual are schematic representations and may differ from actual images.
- Do not open or touch moving parts during operation to avoid injury.
- Only use the provided pusher to feed ingredients into the loading part.
- Do not operate the device without a cover.
- The device features a safety lock; it will not operate if the cover is improperly placed.
- Handle attachments with care; they are very sharp.

PACKAGE INCLUDES (IMAGE B)

1. Pusher	1 Piece
2. Cover	1 Piece
3. Body	1 Piece
4. Plastic Cup	1 Piece
5. Strips Disc	1 Piece
6. Slices Disc	1 Piece
7. Dicing Disc	1 Piece
8. Nozzle Cleaner	1 Piece
9. Instruction Manual	1 Piece
10. Product Guarantee Sheet	1 Piece

DESCRIPTION (IMAGE C)

Input Hole	1
Cover Unlock Button	2
On/Off Button	3
Rubber Feet	4
Cup Handle	5
Finger Holes	6
Disc Installation Pins	7

USAGE (IMAGE C)

Before the first use, wipe the body with a soft, dry cloth. Wash the cup, cover, shredders, disc-nozzle, and pushers with warm water and dishwashing liquid. Dry thoroughly and wipe with a clean cloth. **Ensure the device is unplugged before assembly or disassembly.**

Assembly Order (IMAGE D):

1. Place the device on a flat, stable surface. Insert the cup into the body and turn clockwise until secured. (D-1)
2. Install the desired shredder or dicing disc. (D-2) For safety and ease, shredders have finger holes, and the knife should face the cover unlocking button. (C-7)
To remove, press the release button and turn counterclockwise. Carefully, remove the disc by holding the plastic edge of the disc.
3. Secure the cover with the loading hole until it clicks into place. (D-3) For strip or slice shredding, position the cover with the loading hole to the right; for spiral shredding, position to the left. (D-6)
4. To remove the cover, press the unlock button. (D-5)

Operation Instructions:

1. Assemble as indicated. (D-1 to D-3)
2. Plug in the device.
3. Turn on by pressing the button. (C-3)
4. Use the pusher for prepared ingredients. (D-4)
5. Turn off the device and unplug it after shredding.

Maximum continuous use: 15 minutes. Allow a 10-minute interval between cycles. Do not chop ingredients above 175°F /80°C; let them cool first.

PREPARATION RECOMMENDATIONS

Operation	Ingredients Prep	Note
 <h3 style="text-align: center;">Strips / Fine Spiral Shredder Disc (5)</h3>		
<p>For...</p> <ul style="list-style-type: none"> - Slicing fresh potatoes for frying. - Cutting fresh root vegetables for the preparation of the first courses. - Cutting boiled root vegetables for making salads or snacks 	<p>Select vegetables by size so that they pass freely into the loading hole. Cut large vegetables.</p> <p>Ingredients must be firm (cucumber, radish, fresh potato, carrot, etc.)</p> <p>Push the ingredients through with the included pusher tool; pressing them lightly against the knives.</p>	<p>Start with the least “coloring” ingredients, such as potatoes, and end with carrots or beets.</p>
 <h3 style="text-align: center;">Slice / Wide Spiral Shredder Disc (6)</h3>		
<p>For food prep and slicing</p>	<p>Select vegetables by size so that they pass freely into the loading hole. Cut large vegetables.</p> <p>Ingredients must be firm (cucumber, radish, fresh potato, carrot, etc.)</p> <p>Push the ingredients through with the included pusher tool; pressing them lightly against the knives.</p>	
 <h3 style="text-align: center;">Dicing Disc (6)</h3>		
<p>For food preparation of salads, snacks, soups, main courses, or baby food.</p>	<p>Select vegetables by size so that they pass freely into the loading hole. Cut large vegetables.</p> <p>Push the ingredients through with the included pusher tool; pressing them lightly against the knives.</p>	<p>Let boiled ingredients cool before chopping.</p>



CAUTION

DO NOT use the device to grind ice, cheese, or chocolate.

CLEANING & MAINTENANCE (IMAGE F)

- Clean all parts immediately after use.
- Turn off and unplug the device.
- Remove the pusher, ensure moving parts are stopped, detach the cover, and remove the shredder or disc nozzle. Turn the cup counterclockwise to detach.
- Use the special tool for cleaning the disc.
- Dishwasher safe components should not exceed 140°F/60°C.
- Wipe the motor unit with a soft, damp cloth. Never immerse it in water.
- Dry all parts thoroughly and store in a clean, dry place.

TROUBLESHOOTING

Issue	Possible Cause	Solution
Device is not turning on.	No voltage in socket	Unplug the device and wait until the voltage recovers
Device stopped during operation.	Motor protection may have been activated to prevent overheating.	Unplug the device and let cool 15-20 minutes. Then, plug in the device into the socket and turn it on. If problem persists, contact an authorized MasterPRO service center or customer service.
Device began to operate slowly.	Ingredient(s) may be stuck.	Immediately turn off the device and unplug it. Remove the cover and shredder disc. Inspect and remove any stuck piece(s) of food.

SPECIFICATIONS

Model	MPUS80024-STSMS
Power Consumption (Max.)	300 W
Voltage	120 V ~ 60 Hz
Protection Class	II
Storage & Transportation Temperature	-13°F to 95°F (-25°C to 35°C)
Operating Temperature	41°F to 95°F (5°C to 35°C)
Humidity Requirements	15 - 75% without condensation
Dimensions	11.614 x 8.622 x 10.236 in. (295 x 219 x 260 mm)
Weight	5.29 lbs (2.4 kg)

**** Product must be stored in a dry, ventilated area at a temperature above -13°F**