


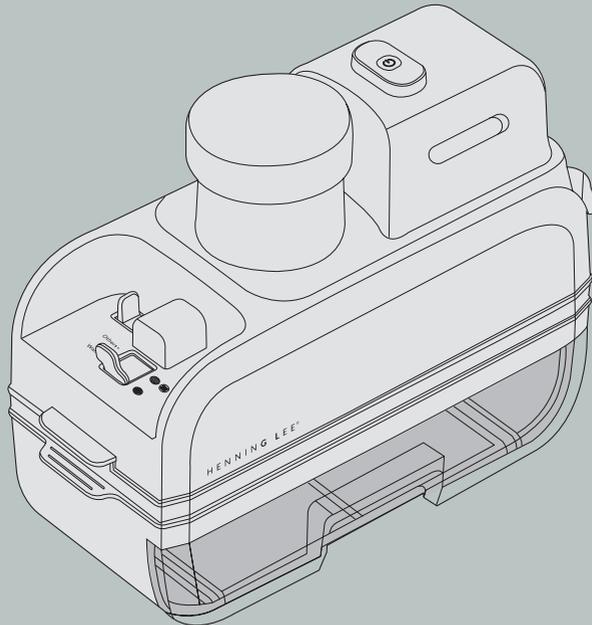

HENNING LEE™

EVERY FRY FRENCH FRY MAKER

INSTRUCTION MANUAL



**FOR YOUR SAFETY AND CONTINUED ENJOYMENT OF
YOUR APPLIANCE, ALWAYS READ THE INSTRUCTION
MANUAL CAREFULLY BEFORE USING.**



HENNING LEE™

EVERY FRY FRENCH FRY MAKER

IMPORTANT SAFEGUARDS

Please read the following user manual carefully before using the electrical appliance and keep it for future reference.

1. READ ALL INSTRUCTIONS carefully and completely before using the appliance.
2. Use appliance for its intended use only. Only suitable for personal or household use.
3. This appliance should not be used by children or persons with reduced physical sensory or mental capabilities or lack of experience or knowledge. Close supervision is required when using the appliance near children. DO NOT let children play with the appliance or cord at any time.
4. DO NOT operate with wet hands, and ensure the operating environment is dry.
5. DO NOT let excess cord hang over the edge of a table or cook top/worktop, or touch a hot surface.
5. NEVER stick your fingers, other body parts, or foreign objects into the Feed Port.
6. Avoid overloading the appliance. It is recommended that the continuous working time of this appliance should not exceed 3 minutes. After 3 minutes of continuous working time, allow a 5-minute rest time before using again. After 3 cycles of continuous work, let the appliance cool for 30 minutes before reusing to maximize product longevity.
7. This appliance can not be used to process excessively hard ingredients (such as frozen ingredients) or meat, etc.

DANGER – To reduce the risk of electrical hazard:

1. If the power cord or appliance is damaged, stop operating the appliance. It must be replaced by a qualified professional.
2. DO NOT place the Main Engine, power cord or plug in water or other liquids.
3. DO NOT use the appliance on wet or hot surfaces, or near a heat source.
4. DO NOT reach for an appliance that has fallen into water. Unplug the appliance from the receptacle immediately.
5. Always unplug appliance from the receptacle after use. To disconnect, unplug the power cord from the receptacle. DO NOT disconnect by pulling on the cord.
6. DO NOT place the appliance where it can be pulled into the sink or other liquid.
7. Unplug the appliance before cleaning and when not in use.
8. Plug your appliance into an exclusive, properly installed, grounded wall outlet.

NOTICE

Polarized Plug

WARNING! Shock Hazard: This appliance has a polarized plug where one prong is wider than the other. This plug will fit into a polarized outlet one way only. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way. If the plug fits loosely into the outlet, or the outlet feels warm, do not use that outlet.

Short Power Cord Information

The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled or tripping over a longer cord. If a longer cord is necessary, you may use an approved extension cord, provided the electrical rating of the extension cord is equal to or greater than the rating of the appliance. Care must be taken to arrange the extension cord so that it will not drape over the countertop or tabletop where it can be pulled on or accidentally tripped over.

IMPORTANT TIPS

 

1. DO NOT lay down or invert the appliance.
2. French Fry Maker must be placed on an even, flat surface.
3. Blades are very sharp. When removing a blade from the Blade Holder, DO NOT touch the blade directly to avoid injury.
4. When cutting ingredients, ensure that the size is suitable for the feed port to avoid jamming the appliance.
5. If the appliance makes abnormal sounds or vibration, immediately stop using and try troubleshooting (See page 9).
6. Do not shift the Slice Type Lever while the appliance is operating. Slice Type Lever shifting should only be done when the appliance is in a static state.

BEFORE FIRST USE

1. Remove the exterior and interior packaging, and check that all the accessories are included. If anything is missing, contact Henning Lee customer service.
2. Remove all detachable parts. Wash in warm water with a small amount of mild detergent. DO NOT wash the Main Engine with water. Wipe with a soft cloth.
3. Check the power supply. Plug in the power supply to make sure it is working properly. Make sure that the power supply voltage is the same as the voltage labeled on the appliance.

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY. DO NOT USE FOR COMMERCIAL PURPOSES.**

GET TO KNOW YOUR FRENCH FRY MAKER

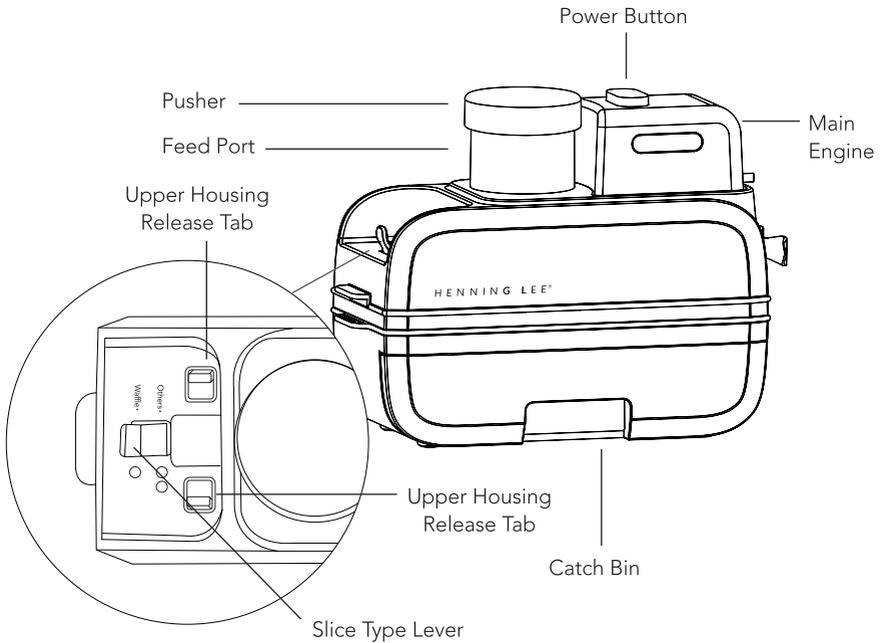


Upper Housing



Blade Holder



 
Main Engine



Pusher



 Catch Bin Housing



Catch Bin



Blade Storage Box



Cleaning Brush



Waffle + Wave Slice




2.5 mm Slice




4.5 x 5 mm Julienne Slice

OPERATION


1. Before using, ensure that the appliance is placed on a flat surface. Remove the Main Engine by pulling upwards.

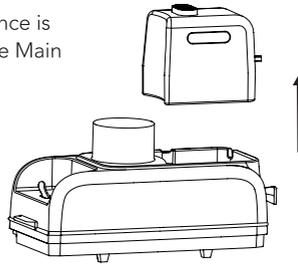


2. Pinch inward the two Upper Housing Release Tabs on Upper Housing and lift it out with the other hand to separate it from the Blade Holder.

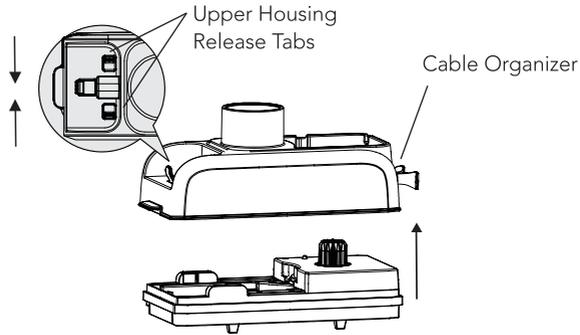

3. Manually rotate the Rotation Wheel on the Blade Holder until the two triangular marks align. Place the blade into the Blade Holder Groove, and gently push down on the plastic housing of blade to secure in place.

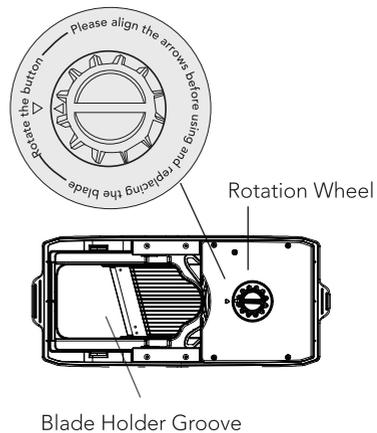


4. Attach the Upper Housing to the Blade Holder, and with a "click" the two components are locked together.

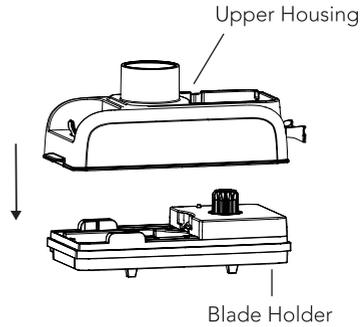


5. Place the Preassembled Module installed in the previous 4 steps onto the Catch Bin Housing. Place the Main Engine into the slot on the Preassembled Module.

NOTE: The Catch Bin must be fully inserted into the Catch Bin Housing for the product to operate.

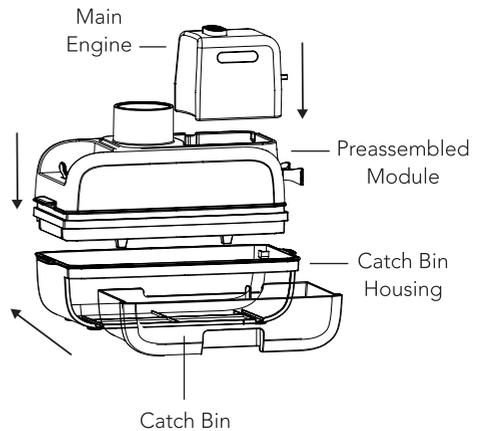

6. Prepare the ingredients. Wash and cut ingredients into appropriate sizes. To avoid ingredients getting stuck, make sure the size of the ingredients is suitable for the Feed Port.

7. Place the prepared ingredients (e.g. russet potatoes) into the Feed Port. Press and hold the Power Button while pressing the pusher downwards to slice the ingredients. After the slicing is complete, release the Power Button, pull out the Catch Bin, and remove the finished ingredients.

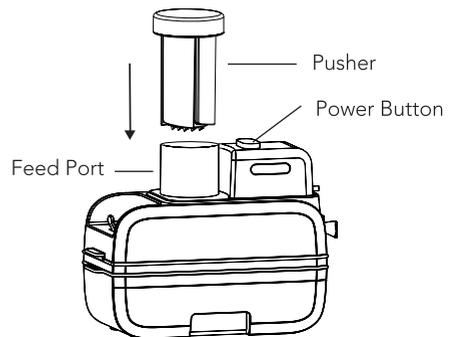


HOW TO USE EACH BLADE

Waffle Slice:

Insert the Waffle + Wave Slice Blade as described in step 3 on page 5. Push the Slice Type Lever to the "Waffle" Mode, then you can begin to Waffle Slice the ingredients by following the Operation section on page 5 of User Manual.

NOTE: You must press and hold the Pusher to drive the ingredients to rotate and achieve the waffle effect.

Slice Type Lever:
Waffle Mode

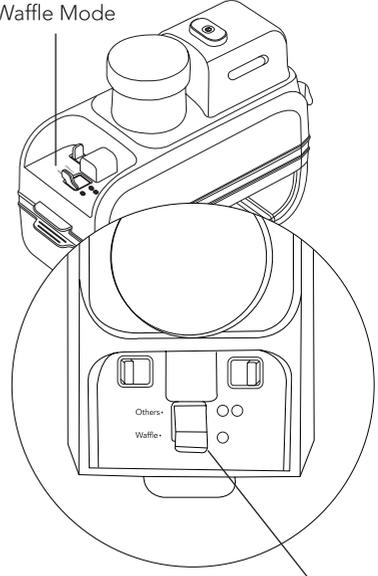

Wave Slice:

Insert the Waffle + Wave Slice Blade as described in step 3 on page 5. Push the Slice Type Lever to the "Others" Mode, then you can begin to Wave Slice the ingredients by following the Operation section on page 5 of User Manual.

2.5 mm Slice:



Insert the 2.5 mm Slice Blade as described in step 3 on page 5. Push the Slice Type Lever to the "Others" Mode, then you can begin to Slice the ingredients by following the Operation section on page 5 of User Manual.

4.5 mm x 5 mm Julienne Slice:


Insert the 4.5 mm x 5 mm Slice Blade as described in step 3 on page 5. Push the Slice Type Lever to the "Others" Mode, then you can begin to Julienne Slice the ingredients by following the Operation section on page 5 of User Manual.

Slice Type Lever:
Others Mode


Slice Type Lever

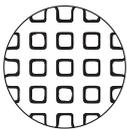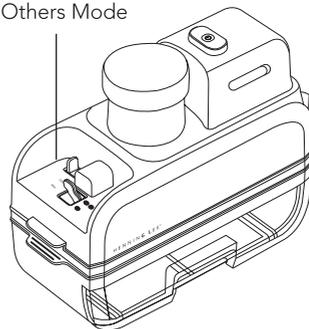


Waffle Slice

 

Wave Slice

 

Slice

 


Julienne Slice


DISASSEMBLY METHOD

1. Remove the Main Engine and Pusher.

NOTE: All parts, with the exception of the Main Engine, are dishwasher safe.

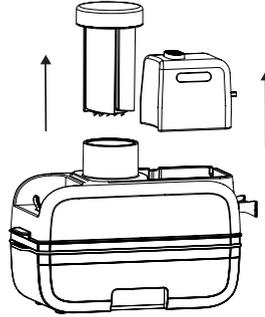


2. Pinch inward the two Upper Housing Release Tabs on the Upper Housing and lift it out with the other hand to separate it from the Blade Holder.


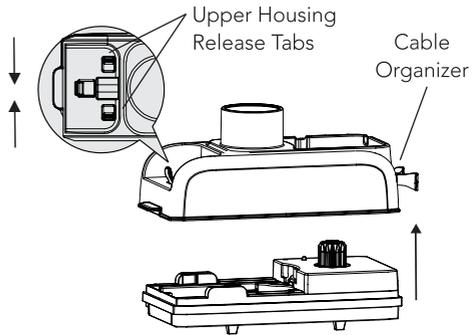


3. Manually rotate the Rotation Wheel on the Blade Holder to align the two triangle marks. Remove the blade by carefully placing your thumb and pointer finger of one hand into the Blade Removal Finger Slots and gently pulling the blade out of the Blade Holder.

NOTE: The blade is sharp. DO NOT touch the blade directly.

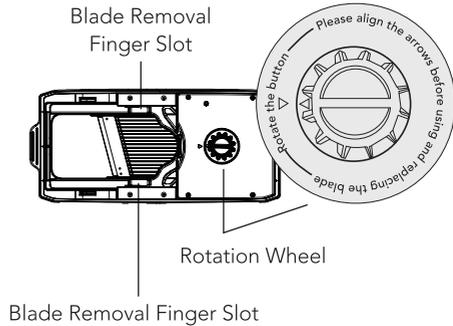

4. Pull the Catch Bin out of the Catch Bin Housing.

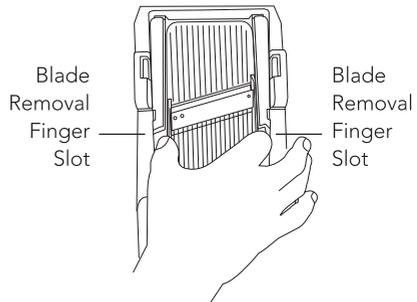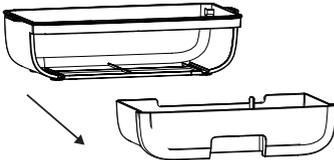

CARE, CLEANING AND MAINTENANCE

- Clean the appliance after each use. All parts, with the exception of the Main Engine, are dishwasher safe. Wipe the Main Engine with a dry soft cloth.
- Each blade can be cleaned with the Cleaning Brush to ensure that the holes remain unobstructed, which prevents any blockage that may affect the cutting performance.
- Clear the Catch Bin once every 3-5 ingredients to prevent ingredients from blocking the discharge port and damaging the appliance.
- DO NOT use steel wool, abrasive cleaners, or corrosive liquids to clean the product.

TROUBLE SHOOTING

PROBLEM	REASON	SOLUTIONS
Power is on, but does not work after starting.	Poor connection between power plug and socket.	Re-plug the power cord. Replace the power socket and try again.
Suddenly stopped in operation.	Excessive amount of ingredients or too long of use time.	Disconnect the power and take out the excess ingredients. Try again or stop using the appliance, and let the appliance cool down for 20-30 minutes before using it again.
Power button is switched on and the appliance will not start.	The Receiving Container is not in place.	Clean out ingredient residue in Receiving Container to ensure safety switch is activated.
Failure to switch from "others" mode to "waffle" mode.	The internal clutch function of the product is stuck and cannot be reset.	Gently tap on the Feed Port to reset internal spring.
Uneven thickness and other shaped slices when cutting ingredients with the "waffle" mode.	Lack of continuous pressure on the Pusher.	Press and hold the Pusher to drive the ingredients to rotate.

1 YEAR WARRANTY

Your Henning Lee product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. This warranty excludes damage caused by accident, overheating, misuse or abuse, and does not apply to scratches, discoloration, stains, dents, or other damage that does not affect the function of the product. Should any defect covered by the terms of the limited warranty be discovered within one (1) year, we will repair or replace the product or part. To process a warranty claim, contact Customer Care at 1 (866) 757-2333 for assistance. Our Customer Care team will assist you by troubleshooting minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating the date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. We are unable to ship returns to a PO box. We are not responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Shipping costs will be prepaid by the purchaser.

Send all inquiries to customer care@henninglee.com. There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. HENNING LEE SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. Therefore, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

All Henning Lee products are tested by accredited independent laboratories.



Use your camera on your phone to scan the QR Code for user tips.

Something wrong? Don't worry!

Contact us first and give us a chance to make it right!

If you are missing parts, received a damaged product, or need assistance with "how to use", we are here to help!

Call us at 866.757.2333 or email us at customer care@henninglee.com. M-F (9am – 5pm CT)