


**EZLIGHT**  
by  EZBRANDS

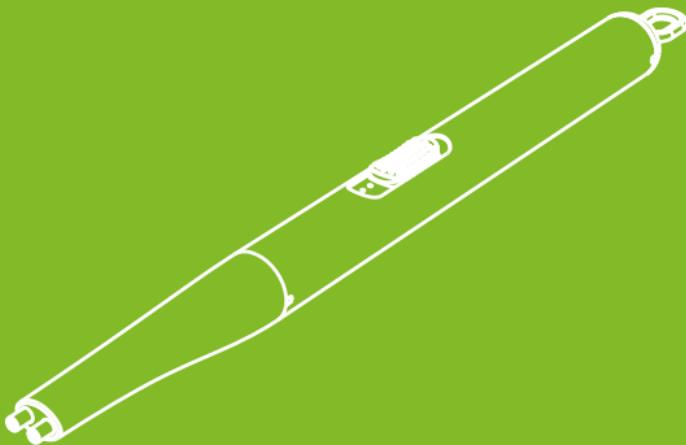

**USB Rechargeable Lighter**



Improper use can result in potential electrical shock or fire hazards. Please read all safety precautions and operating instructions carefully before installation and use, and keep these instructions handy for future reference.

## READ ALL THE INSTRUCTIONS BEFORE USE

This product is compliant to CEC Standards 

### USB Rechargeable Lighter by EZBrands

Thank you for choosing our USB Rechargeable Lighter.

Never run out of lighter fluid again with this USB Rechargeable Lighter! With up to 150 uses per charge, you'll always be ready to light candles around the house.

Light-weight and safe, the lighter is made of zinc alloy and aluminum, and only takes two hours to fully charge to 100%.

### Specifications

Model: EZLight L1121034, L1121032, L1121033

Dimension: 9.6" x 0.7" x 0.7"

Weight: 2.2 oz

Battery Specifications: rechargeable lithium-ion battery  
230mAh - 3.7V - 0.85Wh

Charge time: approx. 2 hours


Uses per full charge: approx. 150 uses of 2 seconds each

Country of origin: China

## Included Items

1x USB Rechargeable Lighter

1x USB to Cable

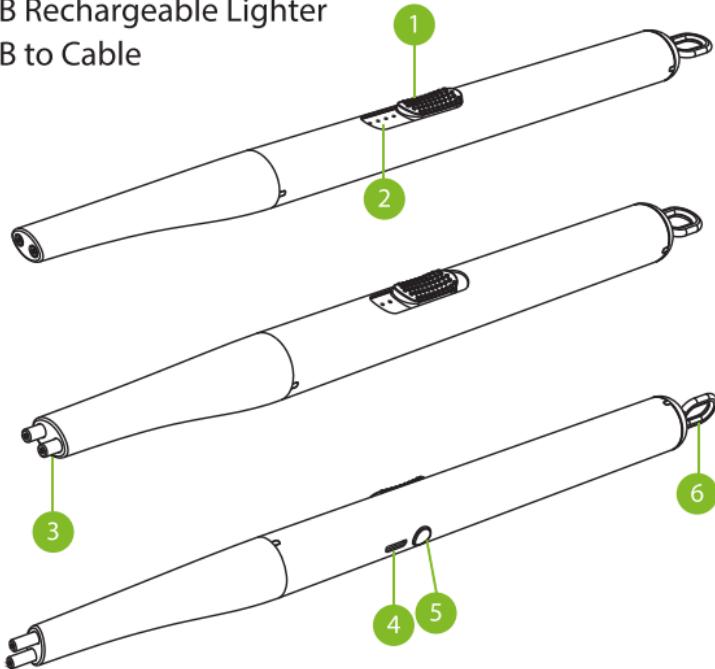

## Product Features

- 1 Safety Slider
- 2 LED Battery Level Indicator
- 3 Electric Arc Prongs
- 4 USB Charging Port
- 5 ON/OFF Button
- 6 Silicone Hook

## FIRST USE

1. It is recommended to fully charge the USB Rechargeable Lighter prior to first use and after extended periods of storage.


## HOW IT WORKS

1. Push the ON/OFF button to power the USB Rechargeable Lighter.
2. Check the LED Battery Level Indicator to ensure the USB Rechargeable Lighter is charged.
3. Slide forward the Safety Slider to create the Electric Arc and make contact with desired candle wick.
4. Do not light for more than 7 seconds as the lighter will automatically stop above this time.

## CHARGING

1. Using the USB cable, plug the micro tip into the USB Rechargeable Lighter charging port.
2. Plug the standard USB connector into an AC Wall Adaptor or any powered USB charging port.
3. The LED Battery Level Indicator will blink while charging. When fully charged, all four lights will be solid blue.

- 1 LED light = 25% charged
- 2 LED lights = 50% charged
- 3 LED lights = 75% charged
- 4 LED lights = 100% charged

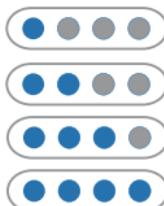

4. A full charge from 0 to 100% will take approximately 2 hours.



## READ ALL THE INSTRUCTIONS BEFORE CLEANING

Improper use can result in electric shock.

### Do not dip into water and/or wax.

From time to time your lighter may come into contact with wet wax which can affect the normal operation of the product. In this event, read all of the precautions and follow the cleaning and maintenance instructions below.

### PRECAUTION

1. Do not touch or clean the Electric Arc Prongs while powered.
2. Do not insert any objects into the Electric Arc Prong openings.
3. Do not hold an ignited flame to the Electric Arc Prongs.
4. Do not clean Electric Arc Prongs using hard objects as they may cause damage to prongs.
5. Do not dip in water or wax.

### CLEANING AND MAINTENANCE

1. **Make sure the lighter is powered OFF** before cleaning to avoid electric shock.
2. To ensure the lighter is powered OFF, press the ON/OFF button until the blue lights in the LED Battery Indicator are also OFF. If the LED Battery Indicator Lights are illuminated, repeat this step until the lighter is successfully powered OFF.
3. Slide the Safety Slider forward to expose the Electric Arc Prongs. If an electric arc is generated or the LED Lights are illuminated, return to Step 2 to power OFF.
4. Gently clean around the edge of the Electric Arc Prong tips, avoiding the center components, with soft fabric or dental floss to remove any residue.

## SAFE BATTERY DISPOSAL



- Never dispose batteries in the garbage. Disposal of batteries in the garbage is unlawful in the United States, under state and federal environmental laws and regulations. This symbol indicates that the equipment must NOT be thrown into general waste but should be collected separately and properly recycled under local regulations.
- All rechargeable batteries will degrade over time, eventually limiting the battery's ability to retain a charge. This product contains a lithium-ion rechargeable battery, which must be disposed of properly when it will no longer retain charge.

### Note on FCC Compliance:

This device complies with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:- Reorient or relocate the receiving antenna.- Increase the separation between the equipment and receiver.- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.- Consult the dealer or an experienced radio/TV technician for help.

Responsible Party EZBrands – 6 Central Row- Hartford CT06103 – USA

Model L1121034, L1121032, L1121033



## WARNINGS & PRODUCT CARE

CAUTION: contains lithium-ion battery. Failure to follow all instructions may result in electric shock, fire and/or serious injury.

- Keep out reach of children.
- Ignite lighter away from face and clothing and/or combustible materials.
- Do not touch the electric arc.
- Do not expose battery to intense heat or dispose in a fire as this may result in explosion.
- Do not expose to heat above 50°/120°F or to prolonged sunlight.
- Do not expose to moisture or submerge in liquid.
- Do not disassemble this product or attempt to repair or modify it in any manner.
- Do not attempt to charge the device using any method, apparatus or connection other than the included charging cable to avoid the potential of overheating, leaking or explosion.
- Do not use the product to charge another device.
- If the product is extremely hot, emitting odor, becomes deformed, damaged or demonstrates abnormal operation, stop usage immediately.
- Use only with listed/certified Power Supply.
- Do not light for more than 7 seconds.
- Recommended not to charge for more than 3 hours.
- Dropping the lighter may damage internal components.
- Do not put the product in your mouth. If any part is swallowed, contact your physician or local poison control center.

## **LIMITED WARRANTY**

EZBrands warrants its products to be free from defects in material and workmanship under normal use. Conditions are as follows:

- During the first 90 days from date of purchase, EZBrands will repair or replace the defective product.
- EZBrands will, subject to inspection, repair the defective product or replace it with a new or reconditioned unit. The return must be accompanied by a Return Merchandise Authorization (RMA) number to be issued upon request, and must be shipped prepaid.
- Warranty is void if the product has been improperly handled or misused in any way.
- Where applicable, all requests for warranty returns must be accompanied by a proof of purchase.
- The warranty does not extend to the electronic equipment that is used, or incorporated with any of our products and accessories. EZBrands shall not be held responsible for the improper use of its products.

For all questions or exchange requests, please contact us at [customercare@ezbrands.com](mailto:customercare@ezbrands.com) or call us at 1-856-329-7866.

EZBrands  
6 Central Row  
Hartford, CT 06103 - USA