



Set of 4 Adjustable Window Candles, Plug-In

ETL No. 5014788

IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed including the following:

- a) **READ AND FOLLOW ALL SAFETY INSTRUCTIONS.**
- b) Do not use seasonal products outdoors unless marked suitable for outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- c) This seasonal use product is not intended for permanent installation or use.
- d) Do not mount or place near gas or electric heaters, fireplace, candles or other similar sources of heat.
- e) Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- f) Do not let lamps rest on the supply cord or on any wire.
- g) Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- h) This is an electric product-not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
- i) Do not use this product for other than its intended use.
- j) Do not hang ornaments or other objects from cord, wire, or light string.
- k) Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- l) Do not cover the product with cloth, paper or any material not part of the product when in use.
- m) This product has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless plug can be fully inserted. Do not alter or replace the plug.² It is acceptable to omit this item if the product does not employ a polarized plug.
- n) This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Also unplug any additional strings or products that may be attached to the product. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded.
- o) Read and follow all instructions that are on the product or provided with the product.
- p) **SAVE THESE INSTRUCTIONS.**

Use and Care Instructions

- a) Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the lamp holders or enclosures, loose connections, or exposed copper wire.
- b) When storing the product, carefully remove the product from wherever it is placed, including tree, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires.
- c) When not in use, store neatly in a cool, dry location protected from sunlight.

Indoor Use Only



Included:

- Set of Four (4) Adjustable Window Candles – with timer and photo sensor timer
- Four (4) Replacement Bulbs

USER SERVICING INSTRUCTIONS

Installation Instructions:

1. Carefully remove the candles from packaging.
2. Place candles in desired location.
3. Plug candles into an extension cord or wall outlet.
4. Set to desired mode:

- Off: Lights are off.
- On: Lights are on steady and constant.
- Timer: Move switch to “TIMER” then move the other switch to the desired hours.

❖ Timer 6hr: The lights will turn on at the same time every day and stay on for 6 hours then turn off for 18 hours. * For example: If you want the lights to turn on every day at 5pm you need to turn the power switch to timer at 5pm. Lights will turn on every day at 5pm and stay lit until 11pm.

❖ Timer 8hr: The lights will turn on at the same time every day and stay on for 8 hours then turn off for 16 hours. * For example: If you want the lights to turn on every day at 5pm you need to turn the power switch to timer at 5pm. Lights will turn on every day at 5pm and stay lit until 1am.

❖ Timer 12hr: The lights will turn on at the same time every day and stay on for 12 hours then turn off for 12 hours. * For example: If you want the lights to turn on every day at 5pm you need to turn the power switch to timer at 5pm. Lights will turn on every day at 5pm and stay lit until 5am.

- Photo Sensor: Move switch to “SENSOR” then move the other switch to the desired hours. Please note that the Photo Sensor on the candle base must be facing towards the window for ideal function.

❖ Photo Sensor Timer 6hr: The lights will turn on when the surrounding area becomes dark and stay on for 6 hours then turn off. It will turn on again when surrounding becomes dark.

❖ Photo Sensor Timer 8hr: The lights will turn on when the surrounding area becomes dark and stay on for 8 hours then turn off. It will turn on again when surrounding becomes dark.

❖ Photo Sensor Timer 12hr: The lights will turn on when the surrounding area becomes dark and stay on for 12 hours then turn off. It will turn on again when surrounding becomes dark.

❖ For photo sensor to function properly, candle should be positioned with the photo sensor facing the window.

Indoor Use Only



Adjustable Function:

Please note: When you receive your candle, the candle will be in the lowest position.

1. To adjust candle higher: Hold the base of the candle with one hand and with the other hand slowly pull up on the white part of the candle to desired height. **DO NOT HOLD BY THE BULB AS THIS MAY CAUSE IT TO BREAK.**
2. To adjust candle lower: Hold the base of the candle with one hand and with the other hand slowly pull down on the white part of the candle to desired height. **DO NOT HOLD BY THE BULB AS THIS MAY CAUSE IT TO BREAK.**

To Replace a Fuse

- a) Grasp plug and remove from the receptacle or other device. Do not unplug by pulling on cord.
 - b) Open fuse cover. Slide open fuse access cover on top of attachment plug towards blades.
 - c) Remove fuse carefully.
 - d) Risk of fire. Replace fuse only with 5 Amp, 125 Volt fuse (provided with product).
 - e) Close fuse cover. Slide closed the fuse access cover on top of attachment plug.
 - f) Risk of fire. Do not replace attachment plug. Contains a safety device (fuse) that should not be removed.
- Discard product if the attachment plug is damaged.

To Replace a bulb

- Step 1: Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
- Step 2: Remove original bulb from top of window candle by turning counterclockwise until bulb is completely unscrewed. Carefully place new bulb and turn clockwise until bulb is properly screwed in place.
- Step 3: Replace bulb with only 120 Volt, 7 Watt type B incandescent bulb (provided with product).
- CAUTION:** Replace only with same type 7 Watt Max type B UL Classified bulbs.

Care Instructions:

- If candles become dusty or dirty, clean with a dry cloth. Do not use detergent as it may discolor the product.

Caution: Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Indoor Use Only